

Operation Guide

SOUND SELECT

PIANO

Hold

- A0** | **B0** | **C1** | **D1** | **E1** | **F1** | **G1** | **A1** | **B1**
- EX Concert Grand Piano | Modern
- EX Concert Grand Piano | Mellow
- SK-EX Concert Grand Piano | Mellow
- EX Concert Grand Piano | Pop
- SK-EX Concert Grand Piano | Jazz
- Upright Piano | Classic
- EX Concert Grand Piano | Concert
- SK-EX Concert Grand Piano | Concert

E.PIANO

Hold

- A0** | **B0** | **C1** | **D1** | **E1** | **F1** | **G1** | **A1** | **B1**
- Diapason
- Church Organ
- Blues Organ
- Jazz Organ
- Modern Electric Piano
- Reed Electric Piano 2
- Reed Electric Piano
- Tine Electric Piano

OTHERS

Hold

- A0** | **B0** | **C1** | **D1** | **E1** | **F1** | **G1** | **A1** | **B1**
- Vibraphone
- Harpsichord
- Wood Bass & Ride
- Electric Bass
- Wood Bass
- New Age Pad
- Choir
- String Ensemble
- Slow Strings

METRONOME

○ TRANPOSE PIANO

└─ METRONOME ─┘

Press and hold simultaneously

Time signature																																																									
1/4		2/4		3/4		4/4		4/5		3/8		6/8																																													
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8						
-																+																		-		+																					
Metronome tempo																Volume		Tempo markings																Rhythm		Rhythm																					
																Grave																		1		2		3		4		5		6		7		8		9		0					

DEMO SONGS

○ FUNCTION ○ PLAY/STOP

└─ DEMO ─┘

Hold

Sound Name	
A0 B0 C1 D1 E1 F1 G1 A1 B1	Vibraphone
A0 B0 C1 D1 E1 F1 G1 A1 B1	Harpsichord
A0 B0 C1 D1 E1 F1 G1 A1 B1	Electric Bass
A0 B0 C1 D1 E1 F1 G1 A1 B1	Slow Strings
A0 B0 C1 D1 E1 F1 G1 A1 B1	Church Organ
A0 B0 C1 D1 E1 F1 G1 A1 B1	Jazz Organ
A0 B0 C1 D1 E1 F1 G1 A1 B1	Modern Electric Piano
A0 B0 C1 D1 E1 F1 G1 A1 B1	Tine Electric Piano
A0 B0 C1 D1 E1 F1 G1 A1 B1	EX Concert Grand Piano Modern
A0 B0 C1 D1 E1 F1 G1 A1 B1	EX Concert Grand Piano Mellow
A0 B0 C1 D1 E1 F1 G1 A1 B1	SK-EX Concert Grand Piano Mellow
A0 B0 C1 D1 E1 F1 G1 A1 B1	EX Concert Grand Piano Pop
A0 B0 C1 D1 E1 F1 G1 A1 B1	SK-EX Concert Grand Piano Jazz
A0 B0 C1 D1 E1 F1 G1 A1 B1	Upright Piano Classic
A0 B0 C1 D1 E1 F1 G1 A1 B1	EX Concert Grand Piano Concert
A0 B0 C1 D1 E1 F1 G1 A1 B1	SK-EX Concert Grand Piano Concert

RECORDER

Recording

○ RECORDER

1 Hold

2 3

○ PLAY/STOP

Hold

Playing back

○ PLAY/STOP

Hold

REGISTRATION

○ FUNCTION

 
1 REGISTRATION

○ TRANPOSE PIANO E.PIANO OTHERS

└─ METRONOME ─┘


1 2 3 4

SOUND SETTINGS



Dual / Split												Reverb		Brilliance				Touch Curve				Effects		Smart Mode																											
Dual	Split	Balance reset	-	+	Off	On	Off			+	Off		Normal	Light	Heavy	Off	On	Clean	Full	Dark	Rich	Historical																													
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
												Room	Lounge	Small Hall	Concert Hall	Live Hall	Cathedral	Off	Small	Medium	Large	Normal	Mellow	Dynamic	Bright	Off	Normal	Small	Large	Off	Normal	Small	Large	Normal	Noiseless	Deep Resonance	Light Resonance	Soft	Brilliant												
												Reverb				Damper Resonance				Voicing				Fall-back Noise				Damper Noise																							
																												Smart Mode																							

 TRANPOSE



Transpose												Tuning				Temperament Key																																			
-11	-9	-6	-4	-2	1	3	6	8	10	440Hz	-0.5Hz	+0.5Hz	C#	D#	F#	G#	A#																																		
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
-12	-10	-8	-7	-5	-3	-1	0	2	4	5	7	9	11	12	Equal Temperament	Pure Temperament (Pure Minor)	Pure Temperament (Pure Major)	Pythagorean Temperament	Meantone Temperament	Werckmeister Temperament	Kirnberger Temperament	C	D	E	F	G	A	B																							
Transpose												Temperament				Temperament Key																																			

FUNCTION



Spatial Headphone Sound				Speaker EQ		Speaker		Factory Reset		Startup Settings											
Off		Forward	Normal	Wide	Off	Normal	Table	On/Off	On	Off	On										
C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
Normal	Open	Semi-Open	Closed	Inner-ear	Canal	Off	1	2	3	4	5	Off	15 min.	60 min.	120 min.	Auto Power Off					
Phones Type				Low Volume Balance																	

BLUETOOTH



Bluetooth	
Audio	Volume