

SOUND

SOUND SELECT



Sound Select												Setting Value (Press after Setting key)			Brilliance (-10 ~ +10)			SHS Mode																			
Classic E.Piano	Modern E.Piano	Jazz Organ	Church Organ	Harpichord	Vibraphone	String Ensemble	Slow Strings	Choir	New Age Pad	Atmosphere		Off	1	2	3	Off	-	+	Off	Forward	Normal	Wide															
A ⁰	C ¹	D ¹	F ¹	G ¹	A ¹	C ²	D ²	F ²	G ²	A ²	C ³	D ³	F ³	G ³	A ³	C ⁴	D ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	F ⁷	G ⁷	A ⁷	C ⁸	
SK Concert Grand	EX Concert Grand	Upright Piano	Studio Grand	Studio Grand 2	Mellow Grand	Mellow Grand 2	Modern Piano	Dual Mode On	Dual Balance Reset	Dual Balance +	Dual Balance -	Off	Room	Lounge	Small Hall	Concert Hall	Live Hall	Cathedral	Touch	Voicing	Damper Resonance	Damper Noise	String Resonance	Key-off Effect	Fall-back Noise	Stretch Tuning											
Sound Select						Dual			Reverb			Setting						Phones Type																			

METRONOME

METRONOME



Time Signature												Metronome Volume																										
1/4	2/4	3/4	4/4	5/4	3/8	6/8	-	+																														
A ⁰	C ¹	D ¹	F ¹	G ¹	A ¹	C ²	D ²	F ²	G ²	A ²	C ³	D ³	F ³	G ³	A ³	C ⁴	D ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	F ⁷	G ⁷	A ⁷	C ⁸		
	Tempo +	1	2	3	4	5	6	7	8	9	0																											
Metronome Tempo (3 digits)																																						

Concert Magic

CONCERT MAGIC



Song Select																																																			
2	5	7	10	12	14	17	19	22	24	26	29	31	34	36	38	41	43	46	48	50	53	55	58	60	62	65	67	70	72	74	77	79	82	84	86																
A ⁰	C ¹	D ¹	F ¹	G ¹	A ¹	C ²	D ²	F ²	G ²	A ²	C ³	D ³	F ³	G ³	A ³	C ⁴	D ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	F ⁷	G ⁷	A ⁷	C ⁸															
1	3	4	6	8	9	11	13	15	16	18	20	21	23	25	27	28	30	32	33	35	37	39	40	42	44	45	47	49	51	52	54	56	57	59	61	63	64	66	68	69	71	73	75	76	78	80	81	83	85	87	88
Song Select																																																			

* The Vocal Assist mode lets you know "Song 1, Song 2, etc." vocally.



