

# DIGITAL PIANO CN17 Operation Guide

# KAWAI

## SOUND

SOUND SELECT



Dual		Damper Resonance <small>(For Concert Grand, Studio Grand, Mellow Grand, Modern Piano only)</small>						Reverb			Touch			Brilliance <small>(-10--+10)</small>			Virtual Technician			Spatial Headphone Sound																																											
Dual Balance On	Dual Balance Reset	Off	On	Small	Medium	Large	Off	On	Off	Light	Normal	Heavy	Off	-	+	Clean	Strong	Dark	Rich	Classical	Off	Forward	Normal	Wide																																							
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8												
Concert Grand										Room			Lounge			Small Hall			Concert Hall			Live Hall			Cathedral			Off			Noiseless			Deep Resonance			Light Resonance			Soft			Brilliant			Normal			Open			Semi Open			Closed			Inner-rear			Canal		
Sound Select										Reverb			Virtual Technician			Phones Type																																															

## METRONOME

METRONOME



Time Signature						Metronome Volume																																													
1/4	2/4	3/4	4/4	5/4	3/8	-	+																																												
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
Tempo + (-2) (+2)						Metronome Tempo (3 digits)						Grave..... 40																																							
												Largo..... 46																																							
												Lento..... 52																																							
												Larghetto..... 56																																							
												Adagio..... 60																																							
												Adagietto..... 66																																							
												Andante..... 72																																							
												Andantino..... 80																																							
												Maestoso..... 88																																							
												Moderato..... 96																																							
												Allegretto..... 108																																							
												Animato..... 120																																							
												Allegro..... 132																																							
												Vivace..... 160																																							
												Presto..... 184																																							
												Vivacissimo..... 192																																							
												Prestissimo..... 208																																							
												Metronome Tempo (Musical Term)																																							

## CONCERT MAGIC

CONCERT MAGIC



Song Select																																							
Im A Little Teapot 2																																							
Old MacDonald Had A Farm Row, Row, Row, Your Boat 5																																							
Deck The Halls 10																																							
We Wish You A Merry Christmas Joy To The World 12																																							
Londonerry Air 17																																							
Auld Lang Syne 19																																							
When The Saints Go Marching In 22																																							
Fur Elise 26																																							
William Tell Overture 24																																							
Blue Danube Waltz 29																																							
Waltz Of The Flowers 31																																							
Chapaneas 36																																							
Pomp And Circumstance 34																																							
Funckill Funiclia 38																																							
My Wild Irish Race 40																																							
Romance De L'amour 39																																							
Santa Lucia 37																																							
When Irish Eyes Are Smiling 35																																							
Wedding March 33																																							
Bridal Chorus 32																																							
Gavotte (Gossec) 30																																							
Skater's Waltz 28																																							
Chair De Lune 27																																							
Andante from Symphony No.94 (Haydn) 25																																							
The Entertainer 23																																							
The Campion Faces 21																																							
On Susanna 20																																							
Clementine 18																																							
Yankee Doodle 16																																							
Battle Hymn Of The Republic 15																																							
Silent Night 13																																							
O Come All Ye Faithful 11																																							
Jingle Bells 6																																							
Hark The Herald Angels Sing 8																																							
Frete Jacques 9																																							
London Bridge 4																																							
Mary Had A Little Lamb Tinkle, Tinkle, Little Star 1																																							
Song Select																																							

## SETTINGS

METRO-NOME SOUND SELECT +

SETTINGS

**Tuning**  
(427 Hz~453 Hz)

440 Hz -0.5 Hz +0.5 Hz

**Transpose**  
(-6~+5)

Off On - +

**Transmit MIDI Program Change**

Off On

**MIDI Local Control**

Off On

**Multi-timbral Mode**

Off On

**Bluetooth**

Off On

**MIDI Channel**

2 4 7 9 11 14 16

1 2 3 4 5 6 7 8 9 0

**Tuning Value (3 digits)**

1 2 3 4 5 6 7 8 9 0

**Program Number (3 digits)**

1 3 5 6 8 10 12 13 15

**MIDI Channel**

Off 15 min. 60 min. 120 min.

**Auto Power Off**

## LESSON

Selecting a Lesson book and song

LESSON

Book 1 Book 2 Book 3 Book 4 Book 5

A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2

- + 1 2 3 4 5 6 7 8 9 0

**Song Number (3 digits)**

Selecting the part to practice

METRO-NOME SOUND SELECT

SETTINGS

L

Press once:  
Left-hand only

METRO-NOME SOUND SELECT

SETTINGS

R

Press twice:  
Right-hand only

METRO-NOME SOUND SELECT

SETTINGS

L & R

Press 3 times:  
Both Left and Right hands

Listening to the song

CONCERT MAGIC LESSON

DEMO

PLAY/STOP REC

REORDER

METRO-NOME SOUND SELECT

SETTINGS

## RECORDER

Record song

REC

REC

A0 B0 C1 D1 E1

Song 1 Song 2 Song 3

**Song Selection**

PLAY/STOP

① Enter recording mode      ② Select a song memory      ③ Start recording

Play song

PLAY/STOP

A0 B0 C1 D1 E1

Song 1 Song 2 Song 3

**Song Selection**

Erase all songs

PLAY/STOP REC

REORDER

① Hold both buttons      ② Turn the power on

