

SOUND

SOUND SELECT



Sound Select												Setting Value (Press after Setting key)				Brilliance (-10 ~ +10)																				
Classic E. Piano	Modern E. Piano	Jazz Organ	Church Organ	Harpischord	Vibraphone	String Ensemble	Slow Strings	Choir	New Age Pad	Atmosphere		Off	1	2	3	Off	-	+																		
A ⁰	C ¹	D ¹	F ¹	G ¹	A ¹	C ²	D ²	F ²	G ²	A ²	C ³	D ³	F ³	G ³	A ³	C ⁴	D ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	F ⁷	G ⁷	A ⁷	C ⁸
Sound Select												Dual				Reverb				Setting																
Concert Grand 2												Dual Mode On				Off				Touch																
Studio Grand 2												Dual Balance +				Room				Voicing																
Mellow Grand 2												Dual Balance 1				Lounge				Damper Resonance																
Modern Piano												Dual Balance 2				Small Hall				String Resonance																
Rock Piano												Dual Balance 3				Concert Hall				Key-off Effect																
																Cathedral				Fall-back Noise																
																Live Hall				Stretch Tuning																

METRONOME

METRONOME



Time Signature												Metronome Volume																									
1/4	2/4	3/4	4/4	5/4	3/8	6/8	-	+																													
A ⁰	C ¹	D ¹	F ¹	G ¹	A ¹	C ²	D ²	F ²	G ²	A ²	C ³	D ³	F ³	G ³	A ³	C ⁴	D ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	F ⁷	G ⁷	A ⁷	C ⁸	
Tempo + (-2)												Tempo - (+2)																									
1												2				3																					
4												5				6																					
7												8				9																					
0																																					

Metronome Tempo (3 digits)

Concert Magic

CONCERT MAGIC



Concert Magic Mode																																							
1 2																																							
A ⁰	C ¹	D ¹	F ¹	G ¹	A ¹	C ²	D ²	F ²	G ²	A ²	C ³	D ³	F ³	G ³	A ³	C ⁴	D ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	F ⁷	G ⁷	A ⁷	C ⁸			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Song Select

* The Vocal Assist mode lets you know "Song 1, Song 2, etc." vocally.



LESSON

Selecting a Lesson book and song

LESSON +

Book 1 Book 2 Book 3 Book 4 Book 5

A⁰ B⁰ C¹ D¹ E¹ F¹ G¹ A¹ B¹ C² D² E²

— + 1 2 3 4 5 6 7 8 9 0

Song Number (3 digits)

Listening to the song

CONCERT MAGIC LESSON

— DEMO —

PLAY/STOP REC

— REVERSE —

METRO-NOME SOUND SELECT

— SETTINGS —

Selecting the part to practice

METRO-NOME SOUND SELECT

— SETTINGS —

L R L & R

Press once: Left-hand only

Press twice: Right-hand only

Press 3 times: Both Left and Right hands

Start Up Settings

REC

SOUND SELECT

Press and hold the buttons for three seconds

RECORDER

Record song

REC REC + Song Selection

PLAY/STOP

① Enter recording mode. ② Select a song memory ③ Start recording

Play song

PLAY/STOP + Song Selection

Erase all songs

PLAY/STOP REC + Power On

① Hold both buttons ② Turn the power on

SETTINGS

METRO-NOME SOUND SELECT

— SETTINGS —

Tuning (427Hz ~ 453Hz)

440 Hz -0.5 Hz +0.5 Hz

Transpose (-6 ~ +5)

Off On - +

Transmit MIDI Program Change

Off On

MIDI Local Control

Off On

Multi-timbral Mode

Off On

MIDI Channel

2 4 7 9 11 14 16

— +

Sound Preview & Vocal Assist Volume

Off 30 min. 60 min. 120 min.

Auto Power Off

A⁰ B⁰ C¹ D¹ E¹ F¹ G¹ A¹ B¹ C² D² E² F² G² A² B² C³ D³ E³ F³ G³ A³ B³ C⁴ D⁴ E⁴ F⁴ G⁴ A⁴ B⁴ C⁵ D⁵ E⁵ F⁵ G⁵ A⁵ B⁵ C⁶ D⁶ E⁶ F⁶ G⁶ A⁶ B⁶ C⁷ D⁷ E⁷ F⁷ G⁷ A⁷ B⁷ C⁸

1 2 3 4 5 6 7 8 9 0

1 2 3 4 5 6 7 8 9 0

1 3 5 6 8 10 12 13 15

Tuning Value (3 digits)

Program Number (3 digits)

MIDI Channel