

Software Update (CN37)

This document contains instructions for updating the system software of the Kawai CN37 digital piano. Please read these instructions thoroughly before attempting to perform the software update.



While this software update should not affect user data stored in the instrument's memory, it is still recommended to use the 'Save xxx' functions in the USB Menu before updating, in order to prevent accidental data loss.

■ Checking the software version


To check the current software version installed on the CN37, press and hold the **ORGAN**, **HARPSI & MALLETS**, and **STRINGS & CHOIR** buttons simultaneously, then turn the instrument on.

The current software version will be shown in the LCD display.

If the version number is **greater than** or equal to the update version, no further action is necessary.

* Turn the instrument off and on to return to normal operation.

If the version number is **lower than** the update version, please continue to follow the instructions below.

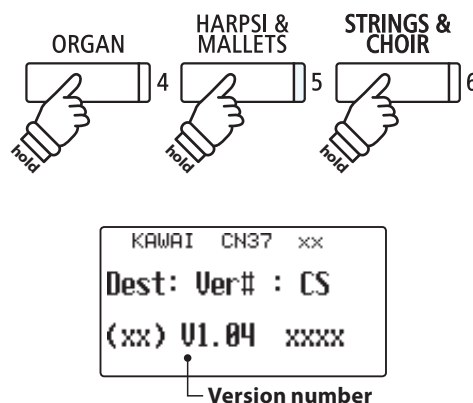

1. Prepare the USB memory device

Extract the software update ZIP file and copy the included .SYS file(s) to the root folder of a USB memory device.

* The USB device should be formatted to the 'FAT' or 'FAT32' filesystem.



2. Connect the USB memory device

While the instrument is turned off:

Connect the prepared USB memory device to the USB port.




3. Start the update

Press and hold the **1**, **2**, and **3** FUNCTION buttons simultaneously, then turn the instrument on.

The update process will start automatically after a few seconds, and status messages will be shown in the LCD display.

* Do not remove the USB memory device while the software update is in progress.

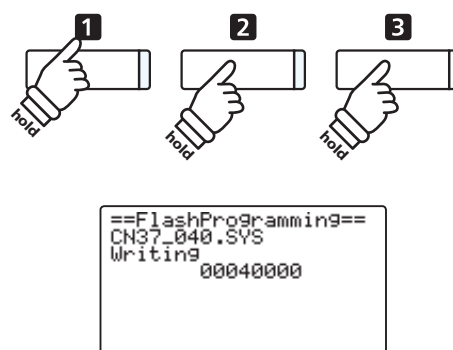


4. Finish the update, disconnect the USB memory device

After approximately 60 seconds, a message will be shown in the LCD display, indicating that the software update has been successful.

Disconnect the USB memory device, then press and hold the **POWER** switch to turn the instrument off. When the instrument is turned on, the updated software will be used automatically.

* If the software update is unsuccessful, restart the process from step 1.

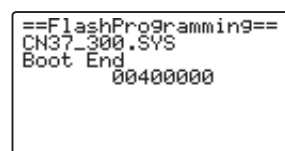

Software Update (CN37)

■ CN37 system software changelog

V1.06 (November 2018)

KEYBOARD

- Improved: Reliability of keyboard action key switch detection.

V1.05 (March 2018)

- Fixed: Bug related to random playback mode when using the USB player.
- Fixed: MIDI IN chorus send level and chorus parameters would not work correctly.
- Changed: Volume, pan, and expression commands received via MIDI IN no longer affect the keyboard sound.

V1.04 (April 2017)

- Improved: Support for Virtual Technician iPad app Smart Mode, User Touch Curve, and User Voicing functions.
- Fixed: Sometimes changing sounds using the Sound Museum app would not work correctly.
- Fixed: Sometimes display would not update when Sound Museum app is used to change settings.

V1.03 (March 2017)

- Improved: Key-off noise character of electric piano sounds.

V1.02 (November 2016)

- First production version.