

Software Update (MP7)

This document contains instructions for updating the system software of the Kawai MP7 professional stage piano. Please read these instructions thoroughly before attempting to perform the software update.

■ Checking the software version

 
To check the current software version installed on the MP7, press and hold the STORE button, then turn the instrument ON.

The current software (Program) version will be shown on the first line of the LCD display.

If the Program version number is greater than or equal to the update version, no further action is necessary.

* Turn the instrument off and on to return to normal operation.

If the Program version number is lower than the update version, please continue to follow the instructions below.



1. Prepare the USB memory device

Extract the software update ZIP file and copy the included .SYS files to the root folder of a USB memory device.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.



2. Connect the USB memory device


While the instrument is turned off:

Connect the prepared USB memory device to the USB port.




3. Start the update

Press and hold buttons 6, 7, and 8 in the middle row of the SOUND/SETUP section, then turn the instrument ON.

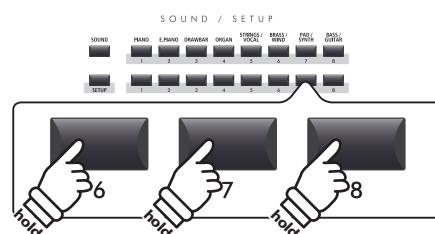

The update process will start automatically after a few seconds, and status messages will be shown in the LCD display.

 * Do not remove the USB memory device while the software update is in progress.



4. Finish the update, disconnect the USB memory device

After approximately 60-90 seconds (depending on the number of update files), a message will be shown in the LCD display, indicating that the software update has been successful.

MP07xxxx.SYS
Boot End

Disconnect the USB memory device, then press and hold the POWER switch to turn the instrument OFF. When the instrument is turned ON, the updated software will be used automatically.

* If the software update is unsuccessful, restart the process from step 1.

Software Update (MP7)

■ MP7 system software changelog

V1.10 (January 2015)

- Added: SETUP summary screen is shown when pressing the SETUP button while already in SETUP mode.
Screen shows each zone's selected sound, volume, and assigned SW1/SW2 function.
- Added: 'MidHigh' and 'MidLow' options added to 6.Control:HalfPedVal. EDIT menu setting when zone is set to EXT.

These additional options allow greater control over half-pedalling MIDI values, and may be useful when playing software piano packages, especially as the HalfPedVal can be set independently for each Zone. Please experiment with each setting to find the most natural half-pedal behaviour.

| HalfPedVal. | MIDI CC#64 TX Value Range |
|-------------|---------------------------|
| Normal | 0 ~ 127 |
| High | 0, 64 ~ 127 |
| Low | 0 ~ 63, 127 |
| MidHigh | 0, 40 ~ 100, 127 |
| MidLow | 0, 25 ~ 75, 127 |

- Changed: If metronome is enabled when using the Overdub function, only the count-in will be heard.
- Changed: 'Volume' parameter in 3.Sound menu replaced with '[C]MasterVol.', allowing total SETUP volume to be adjusted.
- Changed: Zone volume value pop-up shown when operating a zone volume fader.
- Changed: Metronome Volume is now stored to SETUP memories. Moreover, when a rhythm pattern is running, selecting a SETUP with a different stored rhythm will not change the volume of the playing rhythm pattern.
- Changed: Default AudioRecGain value is now set to +9 dB.
- Fixed: Occasional glitches/errors when recording to large capacity USB memory devices in WAV format.
- Fixed: Rare phenomenon whereby pedal assigned to EFX2:Rotary Slow/Fast function would not toggle correctly.
- Fixed: Strange velocity behaviour of piano sounds when reducing the Cut-off parameter.
- Improved: When connecting a USB device, pop-up message is only shown when accessing USB-related functions.
- Improved: Reduced wait times when using large capacity USB memory devices.
- Improved: Right Pedal Calibration function in SYSTEM:Pedal menu has been improved.
SYSTEM:Pedal HalfAdjust parameter is also taken into consideration when calibrating.
- Improved: Reduced 'jumping' noise that could sometimes occur when using MIDI recorder's A-B repeat function.
- Improved: Reduced 'jumping' noise that could sometimes occur when operating knobs controlling EFX, AMP, or EQ.
- Improved: Various other operation/display improvements.

V1.05 (August 2014)

- Improved: Output Gain increased (+4dB).
- Improved: User Temperament now allows the Temperament Key to be specified.
- Improved: Damper Resonance key balance is now more even across the keyboard.
- Improved: 'Fast' touch mode optimised to reduce key retrigging.
- Improved: Delay when changing Reverb Type (e.g. between two SOUNDS) is reduced.
- Improved: Some knob/button functionality has been optimised.
- Changed: Zone Octave, Zone Transpose, Pedal On/Off and SW1/2 On/Off parameters are now kept when selecting SOUNDS.
- Changed: Pedal Mode parameter is now set to 'Hold' for all Pad/Synth sounds.
- Changed: The 'Open Setup' function has been removed as it was largely redundant and could cause confusion.
- Fixed: The selected Temperament was not applied to the Octave Layer sound.
- Fixed: The Full Orchestra sound could produce a strange layer sound in certain circumstances.
- Fixed: EFX was not retained when changing SOUND/SETUP while holding the damper when using the F-10H pedal.
- Fixed: The 'Panel Lock' function did not fully lock the MAIN/ZONE volume faders.
- Fixed: In 'Multi Off' mode, the Bank LSB#1 reception did not work correctly.
- Fixed: Some brass/woodwind sounds could cut-out when playing SMF files.

Software Update (MP7)

V1.03 (May 2014)

- Fixed: The 'Quick Compare' function did not work correctly.

V1.02 (March 2014)

- Added: 88 Key Volume function to SYSTEM menu, allowing volume adjustments for individually keys.
[SYSTEM] → UserEdit : KeyVolume
- Added: 88 Key Stretch Tuning function to SYSTEM menu, allowing stretch tuning for individually keys.
[SYSTEM] → UserEdit : Stretch
- Added: Right Pedal Calibration function to SYSTEM menu, for calibration of other manufacturer's damper pedals.
[SYSTEM] → Pedal (page 1/3 or 2/3) → [R.P.CAL] (F4 button)
- Added: EffSW Mode = "Fixed" to SYSTEM menu, allowing sounds to be changed without affecting current EFX settings.
[SYSTEM] → Utility (page 1/3) → EffSW Mode
- Improved: Pure temperament (Maj/min) adjusted.
- Improved: Received Sys-EX Parameter Send messages now also change knob assigned parameters in real-time.
- Improved: Various other operation/display improvements.
- Fixed: Some cases of sound settings not recording correctly when using the MIDI Recorder in Panel Play mode.

V1.00 (January 2014)

- First production version.