

## SOUND



SOUND SELECT

<b>Key-off Release</b> <small>(For Concert Grand 1 / 2, Studio Grand, Modern Piano only)</small>			<b>Dual Balance</b>			<b>Damper Resonance</b> <small>(For Concert Grand 1 / 2, Studio Grand, Modern Piano only)</small>			<b>Reverb</b>			<b>Touch</b>			<b>Tuning</b> <small>(427Hz ~ 453Hz)</small>			<b>Transpose</b> <small>(-12 ~ +12)</small>			<b>Brilliance</b> <small>(-10 ~ +10)</small>																																																		
Off On			- +			Off On			Small Medium Large			Off On			Light Normal Heavy			440.0Hz -0.5Hz +0.5Hz			Off On - +			Off - +																																															
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																				
Concert Grand			Concert Grand 2			Studio Grand			Modern Piano			Slow Strings			Classic E-Piano			Church Organ			Harpichord			Room			Lounge			Small Hall			Concert Hall			Live Hall			Cathedral			1			2			3			4			5			6			7			8			9			0		
<b>Sound Select</b> <small>(Dual Mode = Two keys)</small>																																	<b>Reverb</b>			<b>Tuning Value (3 digits)</b>																																			

## METRONOME



METRONOME

<b>Time Signature</b>												<b>Metronome Volume</b>																																							
1/4			2/4			3/4			4/4			5/4			3/8			6/8			-			+																											
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7
Tempo -		Tempo +		1		2		3		4		5		6		7		8		9		0																													
<b>Metronome Tempo (2 or 3 digits)</b>																																																			

## DEMO



DEMO

A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	...
<b>Demo song or Piano Music piece</b>																													


OR



SOUND SELECT


## LESSON

Selecting a Lesson book and song


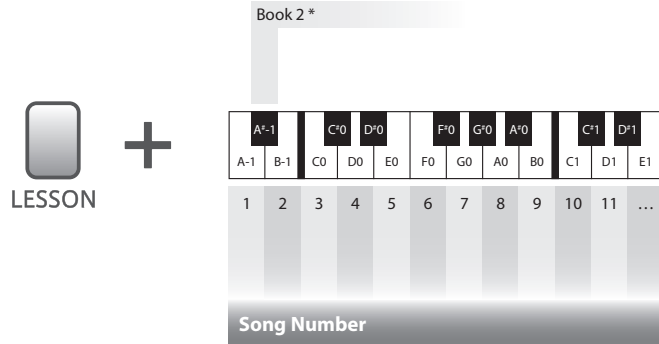


\*Press this key before selecting the song to select Book 2

Listening to the song

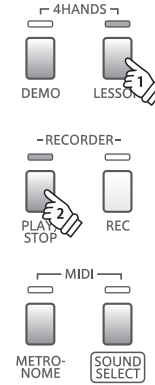


Selecting the part to practice

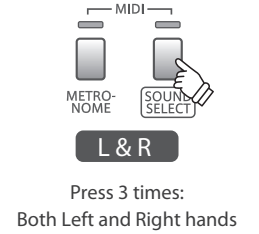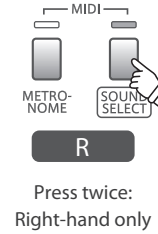


## RECORDER


Record song

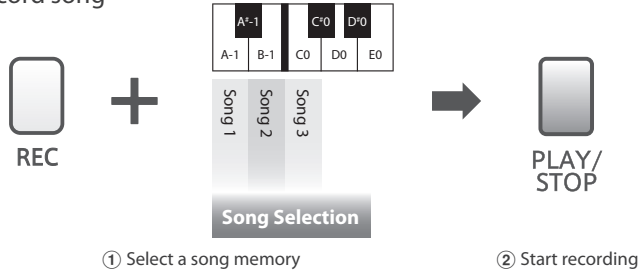

Play song

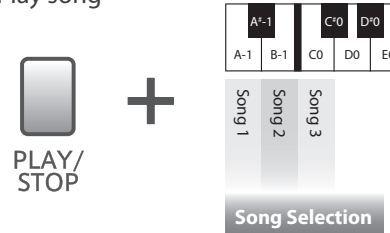

Erase all songs

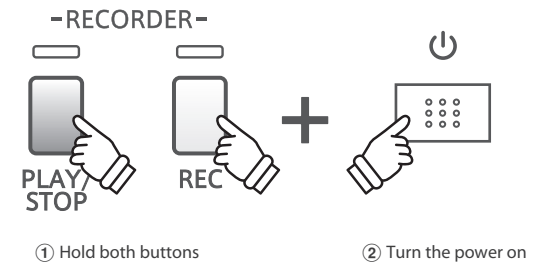

## MIDI

