

SOUND SELECT

PIANO

Dual / Split Balance

Dual Split - +

A0 B0 C1 D1 E1 F1 G1 A1 B1

Rock Piano
Modern Piano
Mellow Grand 2
Mellow Grand
Studio Grand 2
Studio Grand
Concert Grand 2
Concert Grand

Sound Select

E.PIANO / ORGAN

Dual / Split Balance

Dual Split - +

A0 B0 C1 D1 E1 F1 G1 A1 B1

Church Organ
Jazz Organ
Modern E.Piano
60's E.Piano
Classic E.Piano

Sound Select

OTHERS

Dual / Split Balance

Dual Split - +

A0 B0 C1 D1 E1 F1 G1 A1 B1

Vibraphone
Harpisdnord
Electric Bass
Wood Bass
String Ensemble
Slow Strings

Sound Select

SOUND EDIT

PIANO or **E.PIANO / ORGAN** or **OTHERS**

Dual / Split Balance

Transpose

Bilience

Touch

Tuning

Effect

A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7 D7 E7 F7 G7 A7 B7 C8

Room
Small Hall
Concert Hall
Off

Small
Medium
Large
Off

Normal
Mellow
Dynamic
Bright

Normal
Small
Large
Off

Normal
Small
Large

Equal
Pure Major
Pure Minor
Pythagorean
Meantone
Werckmeister
Kirnberger

C D E F G A B

Sound Select

Reverb

Damper Resonance (For piano sound only)

Voicing (For piano sound only)

Fall-back Noise (For piano sound only)

Damper Noise (For piano sound only)

Temperament

Temperament Key

METRONOME

LESSON or **PIANO**

Time Signature

1/4 2/4 3/4 4/4 5/4 3/8 6/8

A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7 D7 E7 F7 G7 A7 B7 C8

Tempo +
Tempo -

1 2 3 4 6 7 8 9 0

Volume +
Volume -

1 2 3 4 5 6 7 8 9 10

1 2 3 4 5 6 7 8 9 0

Rhythm +
Rhythm -

Metronome Tempo (2 or 3 digits)

Metronome Volume

Rhythm Selection (2 or 3 digits)

DEMO

1 Starting a demo song.

FUNCTION + PLAY / STOP → DEMO

2 Selecting a demo song.

PIANO or E.PIANO / ORGAN or OTHERS

FUNCTION

FUNCTION + [Key]

Bluetooth MIDI				Speaker EQ Mode			Speaker On/Off		Factory Reset		Startup Setting							
Off / On				Normal / Table / Off			Speaker Off / Speaker On		Off / 30 min		60 min / 120 min							
F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
													Auto Power Off					

LESSON Listening to the song

LESSON + PLAY / STOP

Selecting the part to practice

OTHERS

Press once: Left-hand only
Press twice: Right-hand only
Press 3 times: Both Left and Right hands

Selecting a Lesson book and song

LESSON + [Key]

Book 1 * Book 2 * Book 3 *

A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2
1	2	3	4	5	6	7	8	9	10	11	...

Song Number

*Press this key before selecting the song to select Book 1~3.

REGISTRATION

Selecting a Registration memory

FUNCTION + REGISTRATION → 1 or 2 or 3 or 4

1 Enter 2 Press 1~4 button.

Storing a Registration

FUNCTION + REGISTRATION → 1 or 2 or 3 or 4

1 Press and hold the registration button. 2 Press 1~4 button.

RECORDER Record a song

REC + [Key]

PLAY / STOP

Song Selection

1 Select a song memory 2 Start recording

Play a song

PLAY / STOP + [Key]

Song Selection

Erase all songs

REC + PLAY / STOP + [Power]

1 Hold both buttons 2 Turn the power on