

Function...		Transmitted	Recognized	Remarks
Basic Channel	Default	1-16	×	Memorized
	Changed	1-16	×	
Mode	Default	×	×	*1
	Messages	○	×	
	Altered	*****	×	
Note Number	: True voice	21-108	×	
		*****	×	
Velocity	Note ON	○ 9nH v=1-127	×	
	Note OFF	○ 8nH v=1-127	×	
After Touch	Key's	×	×	
	Ch's	×	×	
Pitch Bend		×	×	
Control Change	0-127	○	×	*2
Prog Change	: True #	×	×	
		*****	×	
System Exclusive		○	○	*3
Common	: Song Pos	×	×	
	: Song Sel	×	×	
	: Tune	×	×	
System Real Time	: Clock	×	×	
	: Commands	×	×	
Aux Mes - sages	: All Sound Off	○	×	
	: Reset All Controllers	○	×	
	: Local ON/OFF	○	×	
Mes - sages	: All Notes OFF	○	×	
	: Active Sense	×	×	
	: Reset	×	×	
Notes		*1:Valid if assigned as a MIDI control change. *2:All control change numbers are valid if assigned to Pedal. *3:Transmit and receive only with a USB terminal.		

Mode 1 : OMNI ON, POLY
 Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
 Mode 4 : OMNI OFF, MONO

○ : Yes
 × : No