

ATX4/AR2 'Save settings to Piano' list

This document lists the settings that are saved to the internal memory of ANYTIME ATX4 and AURES AR2 hybrid pianos when the 'Save settings to Piano' function is called from the 'User Data' menu of the PianoRemote app.

■ ATX4/AR2 'Save settings to Piano' settings

Category	Setting	ATX4/AR2	Category	Setting	ATX4/AR2
Recorder	Recording Format	Auto saved	Sub Sound	BALANCE (SPLIT)	✓
Recorder	Input Volume	Auto saved	Sub Sound	BALANCE (DUAL)	✓
Speaker/Headphone	Tone Control	✓	Sub Sound	DYNAMICS (DUAL)	✓
Speaker/Headphone	User Tone Control	✓	Sub Sound	LOWER PEDAL (SPLIT)	✓
	Low		Sub Sound	DAMPER HOLD	✓
	Mid-low Freq.		Effect	(Type)	✓
	Mid-low dB		Effect	ON/OFF	✓
	Mid-high Freq.		Effect	DRY/WET	✓
	Mid-high dB		Effect	SPEED	✓
	High		Reverb	(Type)	✓
Speaker/Headphone	Brilliance	✓	Reverb	ON/OFF	✓
Speaker/Headphone	Low Volume Balance	✓	Reverb	TIME	✓
Speaker/Headphone	Speaker Volume	✓	Reverb	DEPTH	✓
Speaker/Headphone	Spatial Headphone Sound	✓	[VPA]	TOUCH CURVE	✓
Speaker/Headphone	Headphone Type	✓	[VPA]	VOICING	✓
Speaker/Headphone	Headphone Volume	✓	[VPA]	RESONANCE DEPTH	✓
4Hands Mode	(mode)	✓	[VPA]	DAMPER RESONANCE	✓
4Hands Mode	Octave Shift Right	✓	[VPA]	DAMPER NOISE	✓
4Hands Mode	Octave Shift Left	✓	[VPA]	STRING RESONANCE	✓
4Hands Mode	Split Point	✓	[VPA]	UNDAMPED STRING RES.	✓
4Hands Mode	Balance	✓	[VPA]	CABINET RESONANCE	✓
4Hands Mode	Right Side Sound	✓	[VPA]	KEY OFF EFFECT	✓
4Hands Mode	Left Side Sound	✓	[VPA]	FALLBACK NOISE	✓
Bluetooth	Bluetooth Audio (ON/OFF)	✓	[VPA]	HAMMER NOISE	✓
Bluetooth	Bluetooth Audio Volume	✓	[VPA]	HAMMER DELAY	✓
MIDI	Play MIDI Channel	✓	[VPA]	TOPBOARD	✓
MIDI	Multi-timbral Mode	✓	[VPA]	DECAY TIME	✓
MIDI	Local Control	✓	[VPA]	RELEASE TIME	✓
System	Auto Power Off	Auto saved	[VPA]	MINIMUM TOUCH	✓
System	Language	Auto saved	[VPA]	STRETCH TUNING	✓
Metrome	(Beat)	✓	[VPA]	TEMPERAMENT KEY (Type)	✓
Metrome	(Drum)	✓	[VPA]	TEMPERAMENT KEY (C-B Key)	✓
Metrome	(Tempo)	✓	[VPA]	KEY VOLUME	✓
Metrome	(Volume)	Not saved	[VPA]	HALF PEDAL ADJUST	✓
Paino Variation	Rendering Type	✓	[VPA]	SOFT PEDAL DEPTH	✓
Main Sound		✓	Ambience	(Type)	✓
Sub Sound	(SPLIT/DUAL/OFF)	✓	Ambience	ON/OFF, DEPTH	✓
Sub Sound	(SPLIT)	✓	Transpose	(±)	✓
Sub Sound	(DUAL)	✓	Tuning	(±)	✓
Sub Sound	OCTAVE SHIFT (SPLIT/DUAL)	✓			