


Operation Guide (CX202/CX102)

Visit our website using the QR code or the following URL address and select your product for information on operations and product details.
<https://www2.kawai.co.jp/emi-web/piano-docs/>



In addition to the side panel buttons, the CX202/CX102 digital piano can also be controlled by pressing and holding a button, then pressing a key on the keyboard. This section explains the various functions for each panel button.

SOUND

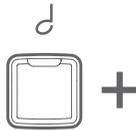

Dual		Damper Resonance (Piano tones only)						Touch			Brilliance (-10--+10)			Reverb		Virtual Technician			Spatial Headphone Sound																																																
Dual Mode On	Dual Balance Reset	Dual Balance +	Dual Balance -	Dual Balance 1	Dual Balance 2	Off	On	Small	Medium	Large	Off	Light	Normal	Heavy	Off	On	Clean	Full	Dark	Rich	Historical	Off	Forward	Normal	Wide																																										
A ⁰	B ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	B ¹	C ²	D ²	E ²	F ²	G ²	A ²	B ²	C ³	D ³	E ³	F ³	G ³	A ³	B ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	B ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	B ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶	C ⁷	D ⁷	E ⁷	F ⁷	G ⁷	A ⁷	B ⁷	C ⁸																
5x-8x Concert Grand Piano		5x-8x Concert Grand Piano		The Electric Piano		The Electric Piano 2		Reed Electric Piano		Modern Electric Piano		Jazz Organ		Church Organ		Slow Strings		String Ensemble		Clari		Harp/Chord		Vibraphone		Wood Bass		Electric Bass		Wood Bass & Ride		Room		Lounge		Small Hall		Concert Hall		Live Hall		Cathedral		Normal		Noiseless		Deep Resonance		Light Resonance		Soft		Brilliant		Normal		Open		Semi Open		Closed		Inner-ear		Canal	
Sound Select																																																																			

METRONOME




Metronome Time Signature												Metronome Volume																																							
1/4	2/4	3/4	4/4	5/4	3/8	6/8	-	+																																											
A ⁰	B ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	B ¹	C ²	D ²	E ²	F ²	G ²	A ²	B ²	C ³	D ³	E ³	F ³	G ³	A ³	B ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	B ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	B ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶	C ⁷	D ⁷	E ⁷	F ⁷	G ⁷	A ⁷	B ⁷	C ⁸
Tempo + (-2)												Tempo (Musical Term)																																							
1 2 3 4 5 6 7 8 9 0												Grave 40 Largo 52 Lento 56 Larghetto 60 Adagio 66 Adagietto 72 Andante 80 Andantino 88 Maestoso 96 Moderato 108 Allegretto 120 Animato 132 Allegro 160 Vivace 184 Presto 192 Vivacissimo 208																																							

CONCERT MAGIC



Song Select																												Concert Magic demo modes																											
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	Category Play															
A ⁰	B ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	B ¹	C ²	D ²	E ²	F ²	G ²	A ²	B ²	C ³	D ³	E ³	F ³	G ³	A ³	B ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	B ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	B ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	B ⁶	C ⁷	D ⁷	E ⁷	F ⁷	G ⁷	A ⁷	B ⁷	C ⁸	Random Play			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	Random Play															
Song Select																																																							

SETTINGS

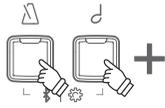


Press and hold the settings button to switch Bluetooth on/off. The default setting for Bluetooth is "OFF."
* For the CX102, it switches only Bluetooth MIDI; for the CX202, it switches both Bluetooth MIDI and Audio.

Transmit MIDI Program Change Off On			Multi-timbral Mode Off On			MIDI Channel 2 4 7 9 11 14 16					Tuning (427 Hz~453 Hz) 440 Hz -0.5 Hz +0.5 Hz			Transpose (-6~+5) Off On - +																																					
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
Bluetooth Audio Volume (CX202 only) - +			Local Control Off On			MIDI Channel 1 3 5 6 8 10 12 13 15					Low Volume Balance Type1 Type2 Type3 Type4 Type5			Tuning Value (3 digits) 1 2 3 4 5 6 7 8 9 0			Auto Power Off Off 15 min. 60 min. 120 min.																																		

RECORDER

Record song

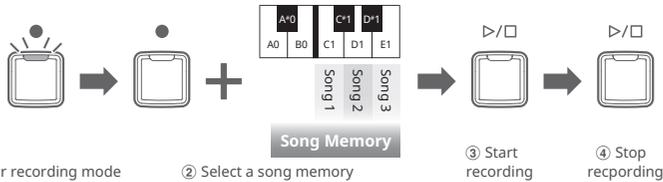


① Enter recording mode

② Select a song memory


③ Start recording

④ Stop recording

Play song

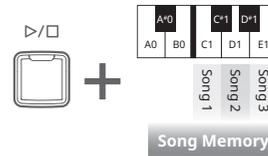


Erase all songs

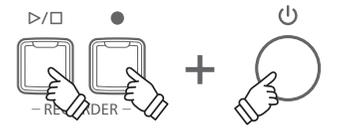

① Hold both buttons

② Turn the power on

LESSON

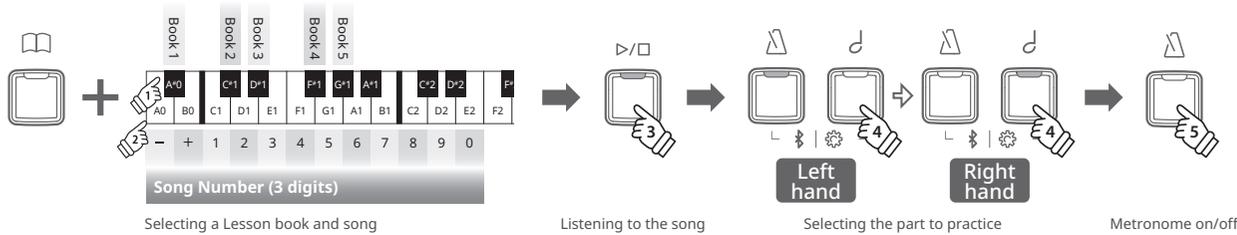

Selecting a Lesson book and song


Listening to the song

Left hand

Right hand

Metronome on/off

Split, 4 Hands

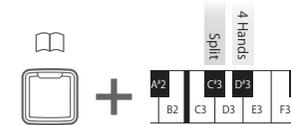

Bedienungsanleitung (CX202/CX102)

Nutzen Sie den QR-Code oder die folgende URL-Adresse, um unsere Website zu besuchen und wählen Sie Ihr Produkt aus, um Informationen über den Betrieb und Produktdetails zu erhalten.
<https://www2.kawai.co.jp/emi-web/piano-docs/>



Viele Einstellungen des CX202/CX102 Digitalpianos können durch bequemes Drücken von bestimmten Tasten auf der Tastatur vorgenommen werden, während eine entsprechende Taste auf dem Bedienfeld gedrückt gehalten wird. Dieser Abschnitt der Bedienungsanleitung beschreibt dieses System.

KLANG



Dual Modus

Dual Mode On

Dual Balance Rest

Dual Balance +

Dual Balance I

Dämpfer Effekt
(Nur für akustische Klavierklänge)

Off

On

Small

Medium

Large

Anschlagempfindlichkeit

Off

Light

Normal

Heavy

Brillanz
(-10 ~ +10)

Off

-

+

Hall

Off

On

Virtual Technician

Clean

Full

Dark

Rich

Historical

Kopfhörer-Raumklangsystem

Off

Forward

Normal

Wide

A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8												
SX-BX Concert Grand Piano		SX-BX Concert Grand Piano		The Electric Piano		Reed Electric Piano		Modern Electric Piano		Church Organ		Slow Strings		String Ensemble		Clavi		Harpstbord		Vibraphone		Electric Bass		Wood Bass		Wood Bass & Rble		Room		Lounge		Small Hall		Concert Hall		Live Hall		Cathedral		Normal		Noiseless		Deep Resonance		Light Resonance		Soft		Brilliant		Normal		Open		Semi Open		Closed		Inner-ear		Canal	

Sound Auswahl

METRONOM



Metronom Taktart

1/4

2/4

3/4

4/4

5/4

3/8

6/8

-

+

Metronom Lautstärke

-

+

A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8				
Tempo +		1		2		3		4		5		6		7		8		9		0		Grave		Largo		Lento		Larghetto		Adagio		Adagietto		Andante		Andantino		Maestoso		Moderato		Allegretto		Animato		Allegro		Vivace		Presto		Vivacissimo		Prestissimo	
Tempo -		1		2		3		4		5		6		7		8		9		0		40		46		52		56		60		66		72		80		88		96		108		120		132		160		184		192		208	

Metronom Tempo (3 Ziffern)

CONCERT MAGIC



Concert Magic Songnummer


1 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |

Im A Little Tearful	Old MacDonald	Deck The Halls	We Wish You A Merry Christmas	Londonerry Air	Auld Lang Syne	When The Saints Go Marching In	Fur Elise	William Tell Overture	Blue Danube Waltz	Waltz Of The Flowers	Chopin's No. 9	Pomp and Circumstance	Fantaisie Impromptu	Chopin's No. 24	Chopin's No. 29	Chopin's No. 34	Chopin's No. 35	Chopin's No. 36	Chopin's No. 37	Chopin's No. 38	Chopin's No. 39	Chopin's No. 40	Chopin's No. 41	Chopin's No. 42	Chopin's No. 43	Chopin's No. 44	Chopin's No. 45	Chopin's No. 46	Chopin's No. 47	Chopin's No. 48	Chopin's No. 49	Chopin's No. 50	Chopin's No. 51	Chopin's No. 52	Chopin's No. 53	Chopin's No. 54	Chopin's No. 55	Chopin's No. 56	Chopin's No. 57	Chopin's No. 58	Chopin's No. 59	Chopin's No. 60	Chopin's No. 61	Chopin's No. 62	Chopin's No. 63	Chopin's No. 64	Chopin's No. 65	Chopin's No. 66	Chopin's No. 67	Chopin's No. 68	Chopin's No. 69	Chopin's No. 70	Chopin's No. 71	Chopin's No. 72	Chopin's No. 73	Chopin's No. 74	Chopin's No. 75	Chopin's No. 76	Chopin's No. 77	Chopin's No. 78	Chopin's No. 79	Chopin's No. 80
---------------------	---------------	----------------	-------------------------------	----------------	----------------	--------------------------------	-----------	-----------------------	-------------------	----------------------	----------------	-----------------------	---------------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------	-----------------


Concert Magic Demo Modus

In einem Modus, der alle Songs in einer zufälligen Reihenfolge abspielt.

EINSTELLUNGEN

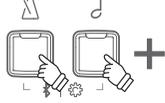


Halten Sie die beiden Tasten METRONOME und SOUND SELECT gedrückt, um Bluetooth ein-/auszuschalten. Die Standardeinstellung für Bluetooth ist „AUS“.
* Der CX102 unterstützt nur Bluetooth MIDI, während der CX202 zwischen Bluetooth MIDI und Audio umschaltet.

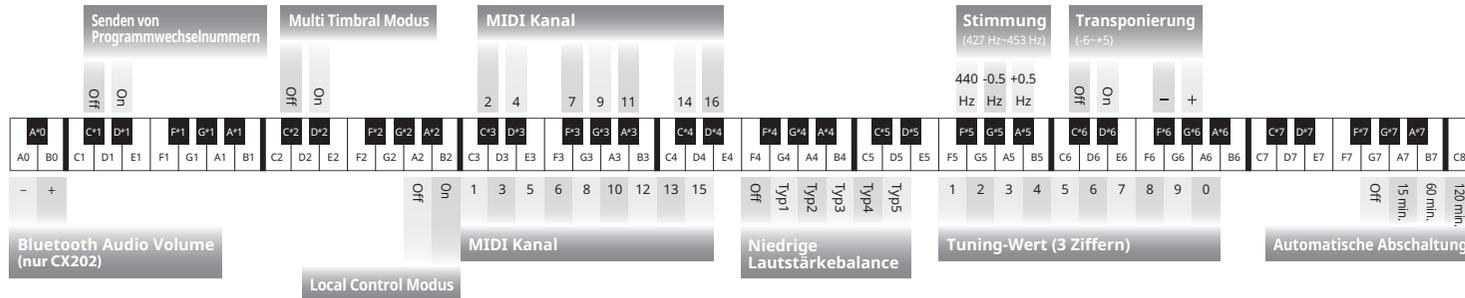


RECORDER

Song aufnehmen

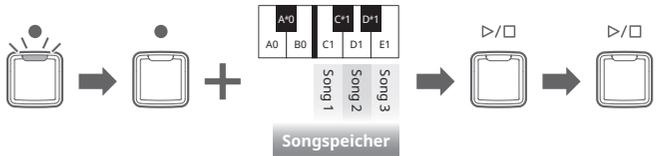

- 1 Aufnahmemodus anwählen
- 2 Auswahl eines Songspeichers
- 3 Aufnahme starten
- 4 Aufnahme beenden

Song abspielen

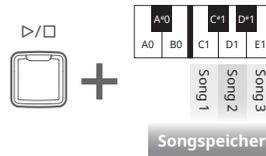


Alle Songs löschen



- 1 Beide Tasten drücken
- 2 Instrument einschalten

LESSON

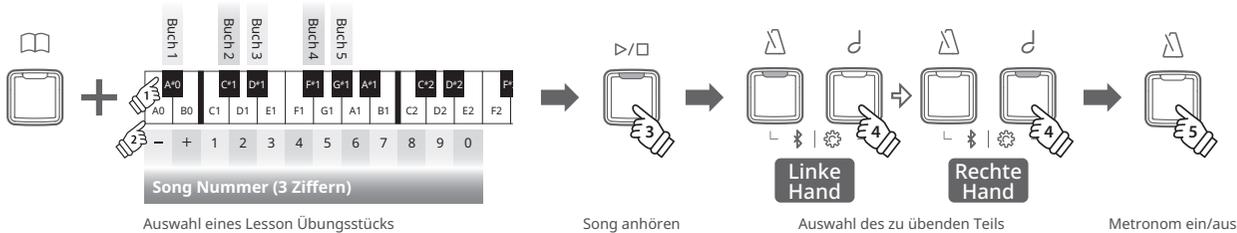

Auswahl eines Lesson Übungsstücks


Song anhören

Linke Hand

Rechte Hand

Metronom ein/aus

Split, Vierhand

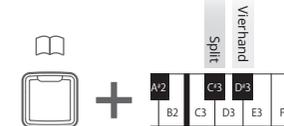

Guide d'utilisation (CX202/CX102)

Visitez notre site web en utilisant le code QR ou l'adresse URL suivante et sélectionnez votre produit pour obtenir des informations sur les opérations et les détails du produit.
<https://www2.kawai.co.jp/emi-web/piano-docs/>



En plus des boutons du panneau latéral, le piano numérique CX202/CX102 peut également être contrôlé en appuyant sur un bouton et en le maintenant enfoncé, puis en appuyant sur une touche du clavier. Cette section explique les différentes fonctions de chaque bouton du panneau.

SON

Dual		Dual Balance +		Dual Balance I		Dual Balance II		Dual Mode On																																											
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
SKEXConcertGrandPiano / Concert		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Modern		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Concert		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Modern		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Concert		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Modern		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Concert		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Modern		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Concert		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Modern		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Concert		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Modern		SKEXConcertGrandPiano / Jazz		SKEXConcertGrandPiano / Concert			


MÉTROMOME

Metronome Time Signature										Metronome Volume																																									
1/4 2/4 3/4 4/4 5/4 3/8										6/8 - +																																									
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
Tempo +										Tempo -																																									
1 2 3 4 5 6 7 8 9 0										Grave 40																																									
Metronome Tempo (3 chiffres)										Largo 46																																									
										Lento 52																																									
										Larghetto 56																																									
										Adagio 60																																									
										Adagietto 66																																									
										Andante 72																																									
										Andantino 80																																									
										Maestoso 88																																									
										Moderato 96																																									
										Allegretto 108																																									
										Animato 120																																									
										Allegro 132																																									
										Vivace 160																																									
										Presto 184																																									
										Prestissimo 208																																									
										Metronome Tempo (Terme musical)																																									


CONCERT MAGIC

Concert Magic song no.										Modes de démonstration Concert Magic																																									
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
1 My Wild Irish Rose										Lecture par catégorie																																									
2 Mary Had A Little Lamb										Lecture aléatoire																																									
3 London Bridge																																																			
4 Fête Jacques																																																			
5 Fête Jacques																																																			
6 Fête Jacques																																																			
7 Fête Jacques																																																			
8 Fête Jacques																																																			
9 Fête Jacques																																																			
10 Fête Jacques																																																			
11 O Come All Ye Faithful																																																			
12 O Come All Ye Faithful																																																			
13 O Come All Ye Faithful																																																			
14 O Come All Ye Faithful																																																			
15 O Come All Ye Faithful																																																			
16 O Come All Ye Faithful																																																			
17 O Come All Ye Faithful																																																			
18 O Come All Ye Faithful																																																			
19 O Come All Ye Faithful																																																			
20 O Come All Ye Faithful																																																			
21 O Come All Ye Faithful																																																			
22 O Come All Ye Faithful																																																			
23 O Come All Ye Faithful																																																			
24 O Come All Ye Faithful																																																			
25 O Come All Ye Faithful																																																			
26 O Come All Ye Faithful																																																			
27 O Come All Ye Faithful																																																			
28 O Come All Ye Faithful																																																			
29 O Come All Ye Faithful																																																			
30 O Come All Ye Faithful																																																			
31 O Come All Ye Faithful																																																			
32 O Come All Ye Faithful																																																			
33 O Come All Ye Faithful																																																			
34 O Come All Ye Faithful																																																			
35 O Come All Ye Faithful																																																			
36 O Come All Ye Faithful																																																			
37 O Come All Ye Faithful																																																			
38 O Come All Ye Faithful																																																			
39 O Come All Ye Faithful																																																			
40 O Come All Ye Faithful																																																			
Concert Magic song no.																																																			

RÉGLAGES

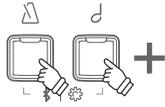


Pour activer/désactiver le Bluetooth, appuyez sur le bouton Paramètres et maintenez-le enfoncé. Le paramètre par défaut de Bluetooth est « OFF ».
* Le CX102 prend uniquement en charge le Bluetooth MIDI, tandis que le CX202 bascule entre le Bluetooth MIDI et Audio.

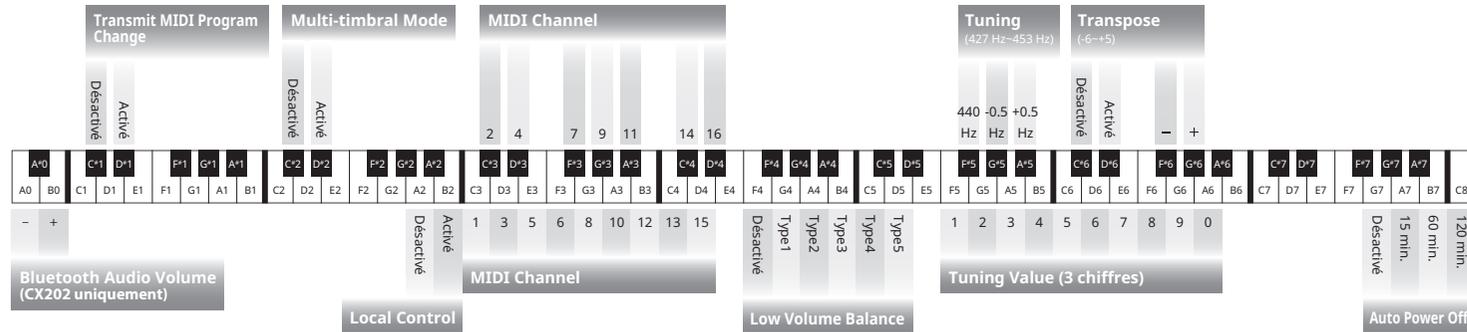


ENREGISTREUR

Enregistrement d'un morceau

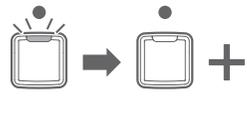


① Saisir un mode d'enregistrement

② Sélectionner une mémoire de morceau

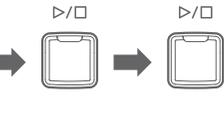

③ Commencer l'enregistrement
④ Arrêter l'enregistrement

Jouer le morceau

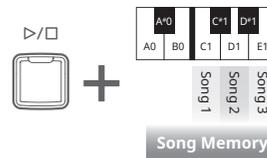


Effacer tous les morceaux




① Maintenir les deux boutons enfoncés

② Mettre sous tension

LEÇON

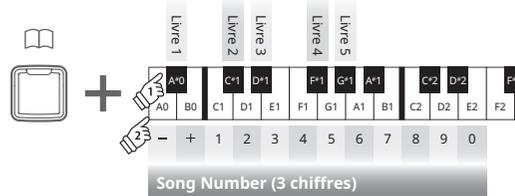

Sélection d'un livre de leçons et d'un morceau

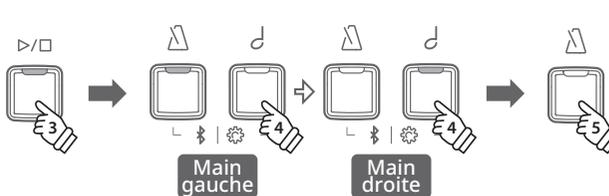

Écoute d'un morceau

Main gauche


Main droite

Métronome activé/désactivé


Split, 4 Hands



CONFIGURACIONES

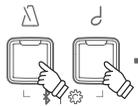


Mantenga presionado el botón de configuración para activar o desactivar Bluetooth.
La configuración predeterminada para Bluetooth es "DESACTIVADO".
* El CX102 solo admite MIDI Bluetooth, mientras que el CX202 alterna entre MIDI Bluetooth y audio.

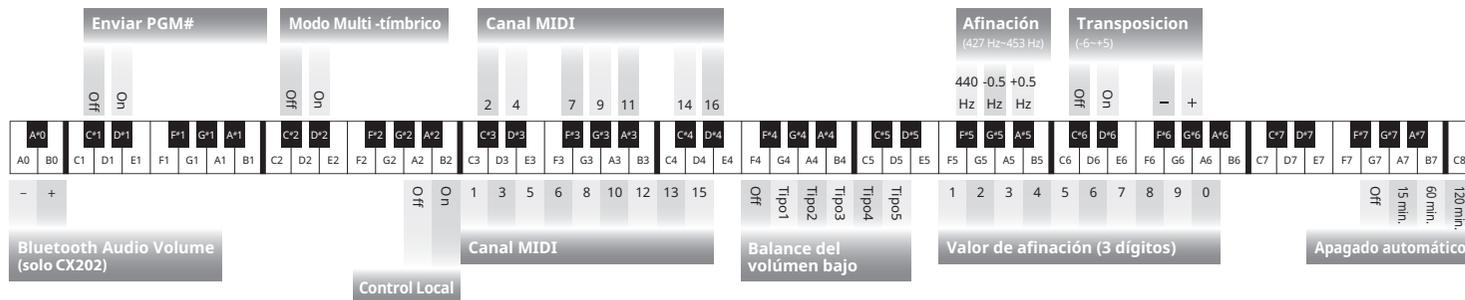


GRABADOR

Grabe canción

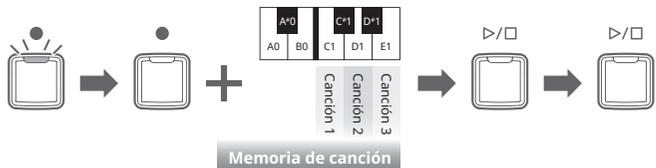

- 1) Entre en el modo de grabación
- 2) Seleccione una memoria de canción
- 3) Comience a grabar
- 4) Detener la grabación

Toque canción

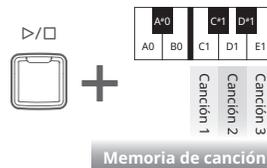

Borre todas las canciones




- 1) Mantenga presionados ambos botones
- 2) Encienda el equipo

LECCIÓN




Selección de libro de lecciones y canción

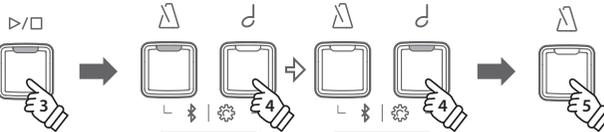


Escucha de la canción
Selección de la pieza que se desea practicar
Metronomo activado/desactivado

División, Cuatro manos

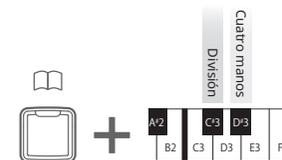

Guida alle operazioni (CX202/CX102)

IMPOSTAZIONI

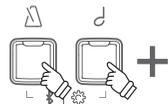


Tieni premuto il pulsante Impostazioni per attivare/disattivare il Bluetooth. L'impostazione predefinita per il Bluetooth è "OFF".
* Il modello CX102 supporta solo Bluetooth MIDI, mentre il modello CX202 commuta tra Bluetooth MIDI e Audio.




REGISTRATORE

Registrazione un brano

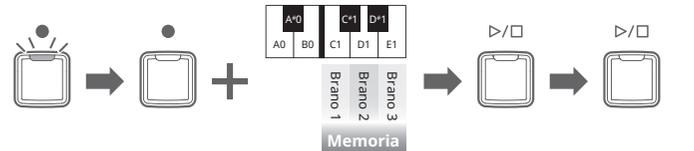


- Inserire la modalità di registrazione
- Selezionare un brano in memoria
- Avviare la registrazione
- Interrompere la registrazione

Riprodurre il brano

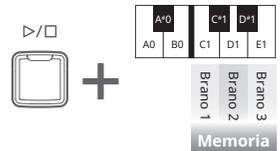

Cancellare tutti i brani

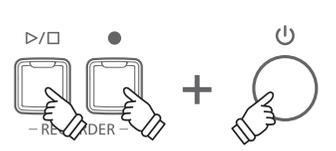

- Tenere premuti entrambi i pulsanti
- Accendere lo strumento

LESSON



- Selezionare un libro di esercizi e un brano
- Ascoltare un brano
- Selezionare una parte per esercitarsi
- Metronomo acceso/spento

Divisione, Quattro mani

