

DIGITAL PIANO KDP120 Operation Guide

KAWAI

SOUND

SOUND SELECT



Dual		Damper Resonance <small>(For Concert Grand, Studio Grand, Mellow Grand, Modern Piano only)</small>						Touch				Brilliance <small>(-10--+10)</small>			Reverb		Virtual Technician			Spatial Headphone Sound																							
Dual Mode On	Dual Balance Reset	Dual Balance -	Dual Balance +	Off / On / Small / Medium / Large						Off / Light / Normal / Heavy				Off / - / +			Off / On		Clean / Full / Dark / Rich / Historical			Off / Forward / Normal / Wide																					
A ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	C ²	D ²	E ²	F ²	G ²	A ²	C ³	D ³	E ³	F ³	G ³	A ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	E ⁷	F ⁷	G ⁷	A ⁷	C ⁸
Concert Grand	Studio Grand	Mellow Grand	Modern Piano	Classic E.Piano	Modern E.Piano	Jazz Organ	Church Organ	Harpischord	Vibraphone	String Ensemble	Slow Strings	Choir	New Age Pad	Atmosphere												Room	Lounge	Small Hall	Concert Hall	Live Hall	Cathedral	Normal	Noiseless	Deep Resonance	Light Resonance	Soft	Brilliant	Normal	Open	Semi Open	Closed	Inner-rear	Canal
Sound Select														Reverb		Virtual Technician			Phones Type																								


METRONOME

METRO-NOME



Metronome Time Signature						Metronome Volume																																											
1/4	2/4	3/4	4/4	5/4	3/8	6/8	-	+																																									
A ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	C ²	D ²	E ²	F ²	G ²	A ²	C ³	D ³	E ³	F ³	G ³	A ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	E ⁷	F ⁷	G ⁷	A ⁷	C ⁸						
Tempo - (-2)	Tempo + (+2)	1	2	3	4	5	6	7	8	9	0																																						
Metronome Tempo (3 digits)																																																	
												Grave	Largo	Lento	Larghetto	Adagio	Adagietto	Andante	Andantino	Maestoso	Moderato	Allegretto	Allegro	Animato	Vivace	Presto	Vivacissimo	Prestissimo																					
												40	46	52	56	60	66	72	80	88	96	108	120	132	160	184	192	208																					
												Metronome Tempo (Musical Term)																																					

CONCERT MAGIC

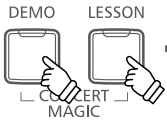

Song Select														Concert Magic demo modes																														
I'm A Little Teapot	2	Old MacDonald Had A Farm	5	Row, Row, Row Your Boat	7	Deck The Halls	10	We Wish You A Merry Christmas	12	Joy To The World	14	Londonerry Air	17	Auld Lang Syne	19	When The Saints Go Marching In	22	William Tell Overture	24	Fur Elise	26	Blue Danube Waltz	29	Pomp And Circumstance	34	Chapaneas	36	Funckill Funckilla	38															
A ⁰	C ¹	D ¹	E ¹	F ¹	G ¹	A ¹	C ²	D ²	E ²	F ²	G ²	A ²	C ³	D ³	E ³	F ³	G ³	A ³	C ⁴	D ⁴	E ⁴	F ⁴	G ⁴	A ⁴	C ⁵	D ⁵	E ⁵	F ⁵	G ⁵	A ⁵	C ⁶	D ⁶	E ⁶	F ⁶	G ⁶	A ⁶	C ⁷	D ⁷	E ⁷	F ⁷	G ⁷	A ⁷	C ⁸	
1	3	4	9	6	8	11	13	15	16	18	20	21	23	25	27	28	30	32	33	35	37	39	40																					
Song Select																																												

SETTINGS

Transmit MIDI Program Change: Off, On

Multi-timbral Mode: Off, On

Bluetooth: Off, On

MIDI Channel: 2, 4, 7, 9, 11, 14, 16

Tuning (427 Hz~453 Hz): 440 Hz, -0.5 Hz, +0.5 Hz

Transpose (-6~+5): Off, On, -, +

Program Number (3 digits): 1, 2, 3, 4, 5, 6, 7, 8, 9, 0

MIDI Channel: 1, 3, 5, 6, 8, 10, 12, 13, 15

Local Control: Off, On

Low Volume Balance: Off, Type1, Type2, Type3, Type4, Type5

Tuning Value (3 digits): 1, 2, 3, 4, 5, 6, 7, 8, 9, 0

Auto Power Off: Off, 15 min., 60 min., 120 min.

LESSON

Selecting a Lesson book and song

LESSON

Book: Book 1, Book 2, Book 3, Book 4, Book 5

Song Number (3 digits): -, +, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0

Selecting the part to practice

METRO-NOME, **SOUND SELECT**, **SETTINGS**

L
Press once:
Left-hand only

METRO-NOME, **SOUND SELECT**, **SETTINGS**

R
Press twice:
Right-hand only

METRO-NOME, **SOUND SELECT**, **SETTINGS**

L & R
Press 3 times:
Both Left and Right hands

Listening to the song

DEMO, **LESSON**, **CONCERT MAGIC**, **PLAY/STOP**, **REC**, **REORDER**, **METRO-NOME**, **SOUND SELECT**, **SETTINGS**

RECORDER

Record song

REC, **PLAY/STOP**, **Song Memory**

① Enter recording mode

② Select a song memory

③ Start recording

Play song

PLAY/STOP, **REC**, **Song Memory**

Erase all songs

PLAY/STOP, **REC**, **REORDER**, **Power**

① Hold both buttons

② Turn the power on

