

SOUND

SOUND SELECT



Dual										Damper Resonance <small>(For Concert Grand, Studio Grand, Mellow Grand, Modern Piano only)</small>						Touch				Brilliance <small>(-10--+10)</small>			Reverb		Virtual Technician					Spatial Headphone Sound																																																		
Dual Mode On		Dual Balance Reset		Dual Balance -		Dual Balance +		Off		On		Small		Medium		Large		Off		Light		Normal		Heavy		Off		On		Clean		Full		Dark		Historical		Off		Forward		Normal		Wide																																				
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8																													
Concert Grand										Studio Grand						Mellow Grand				Modern Piano			Classic E.Piano		Modern E.Piano		Jazz Organ		Church Organ		Harpischord		Vibraphone		String Ensemble		Slow Strings		Choir		New Age Pad		Atmosphere		Room		Lounge		Small Hall		Concert Hall		Live Hall		Cathedral		Normal		Noiseless		Deep Resonance		Light Resonance		Soft		Brilliant		Normal		Open		Semi Open		Closed		Inner-rear		Canal	
Sound Select										Reverb		Virtual Technician					Phones Type																																																															


METRONOME

METRONOME



Metronome Time Signature								Metronome Volume																																																																																																																															
1/4	2/4	3/4	4/4	5/4	3/8	6/8	-	+																																																																																																																															
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8																																																																																				
Tempo + (-2)								Tempo + (+2)								Metronome Tempo (3 digits)																																																																																																																							
Grave								Largo								Lento								Larghetto								Adagio								Adagietto								Andante								Andantino								Maestoso								Moderato								Allegretto								Animato								Allegro								Vivace								Presto								Vivacissimo								Prestissimo							
40								46								52								56								60								66								72								80								88								96								108								120								132								160								184								192								208							
Metronome Tempo (Musical Term)																																																																																																																																							

CONCERT MAGIC

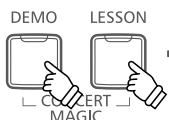

Song Select																Concert Magic demo modes																																																													
I'm A Little Teapot		Old MacDonald Had A Farm		Row Row Row Your Boat		Deck The Halls		We Wish You A Merry Christmas		Joy To The World		A Merry Christmas		Londonerry Air		Auld Lang Syne		When The Saints Go Marching In		Blue Danube Waltz		Pomp And Circumstance		Funckill Funckilla		Random Play		Category Play																																																	
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8																										
1		3		4		5		6		7		8		9		10		11		12		13		14		15		16		17		18		19		20		21		22		23		24		25		26		27		28		29		30		31		32		33		34		35		36		37		38		39		40	
1 Little Star		Mary Had A Little Lamb		London Bridge		Frede Jacques		Angels Sing		Hark The Herald		Jingle Bells		O Come All Ye Faithful		Silent Night		Of The Republic		Battle Hymn		Yankee Doodle		Clementine		On Susanna		The Campion Faces		The Entertainer		Symphony No.94 (Haydn)		Andante from		Chair De Lune		Saxer's Waltz		Gavotte (Gosset)		Bridal Chorus		Wedding March		Are Smiling		When Irish Eyes		Santa Lucia		Romance De L'amour		My Wild Irish Rose																							
Song Select																																																																													

SETTINGS

Transmit MIDI Program Change: Off, On

Multi-timbral Mode: Off, On

MIDI Channel: 2, 4, 7, 9, 11, 14, 16

Tuning (427 Hz~453 Hz): 440 Hz, -0.5 Hz, +0.5 Hz

Transpose (-6~+5): Off, On, -, +

Program Number (3 digits): 1-0

MIDI Channel: 1-15

Local Control: Off, On

Low Volume Balance: Off, Type1, Type2, Type3, Type4, Type5

Tuning Value (3 digits): 1-0

Auto Power Off: Off, 15 min., 60 min., 120 min.

Navigation: METRO-NOME, SOUND SELECT, L SETTINGS

LESSON

Selecting a Lesson book and song

LESSON

Book 1, Book 2, Book 3, Book 4, Book 5

A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2

- + 1 2 3 4 5 6 7 8 9 0

Song Number (3 digits)

Selecting the part to practice

METRO-NOME, SOUND SELECT, L SETTINGS

L

Press once:
Left-hand only

METRO-NOME, SOUND SELECT, L SETTINGS

R

Press twice:
Right-hand only

METRO-NOME, SOUND SELECT, L SETTINGS

L & R

Press 3 times:
Both Left and Right hands

Listening to the song

DEMO, LESSON, L CONCERT MAGIC

PLAY/STOP, REC

- RECORDER -

METRO-NOME, SOUND SELECT, L SETTINGS

RECORDER

Record song

REC, REC, Song Memory (A0 B0 C1 D1 E1 Song 1 Song 2 Song 3), PLAY/STOP

- Enter recording mode
- Select a song memory
- Start recording

Play song

PLAY/STOP, Song Memory (A0 B0 C1 D1 E1 Song 1 Song 2 Song 3)

Erase all songs

PLAY/STOP, REC, - RECORDER -

- Hold both buttons
- Turn the power on