

Software Update (ATX4/AR2)

This document contains instructions for updating the system software of the ATX4/AR2 hybrid piano. Please read these instructions thoroughly before attempting to perform the software update.

The update procedure will require approximately two minutes to complete.

 
■ Update requirements

This software update will require an empty USB memory device*, and a compatible smartphone/tablet with the PianoRemote app installed. While not required, a USB cable/adaptor to connect the smartphone/tablet to the ATX4/AR2 hybrid piano may also be used to provide a visual reference when performing the update.

* The USB memory device must use the 'FAT' or 'FAT32' filesystem. The 'exFAT' filesystem is not supported.

■ Checking the current system software version

Turn on the ATX4/AR2 hybrid piano, launch the PianoRemote app and connect to the instrument.




Tap the  button in the top right corner of the app to open the Menu.

Tap [SYSTEM], then [Information: CHECK] to show the Version/License screen.

If the [Piano] version number is greater than or equal to the update zip file filename, no further action is necessary.

* Exit the menu to return to normal operation.

   If the [Piano] version number is lower than the update version, please follow the update instructions on the following page.

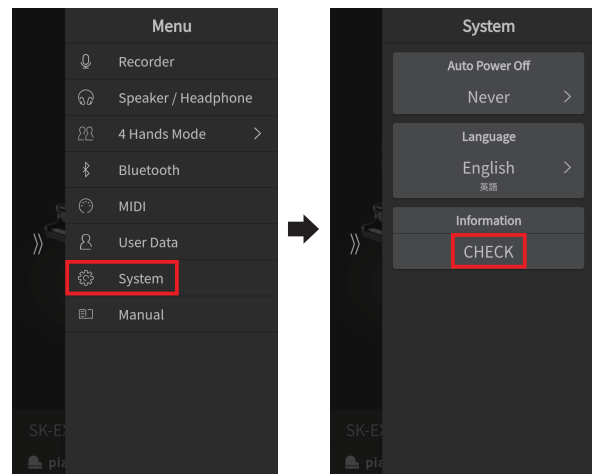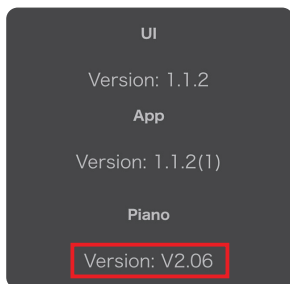


■ Preparing for the update

After downloading the system software update zip file, extract the contents to a temporary folder (e.g. the Desktop).

The folder should contain two files.

Filename	Description
ATX4_P06.SYS	System software
atx4ar2_v2xx_en.pdf	Update instructions

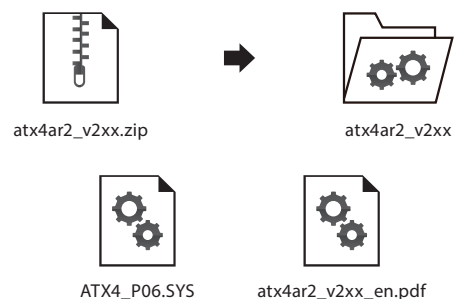 

Software Update (ATX4/AR2)

1. Copy the update file to the USB memory device

Copy the **ATX4_P06.SYS** file from the temporary folder to the root (i.e. top-most) folder of the empty USB memory device.

* Do not attempt to modify the update file.

* Do not copy any other data to the USB memory device.



2. Connect the USB memory device

While the ATX4/AR2 hybrid piano is turned off:

Connect the prepared USB memory device to the **[USB for UPDATE]** port, located on left side of the control box.



3. [OPTIONAL] Connect the smartphone/tablet to the piano

 
If using an iPhone or iPad device:

Connect the iPhone/iPad to the ATX4/AR2 hybrid piano's **[USB to Host]** port, located on the left side of the control box, via a Apple Connection Kit cable.

If using an Android device:

Connect the Android device to the ATX4/AR2 hybrid piano's **[USB to Host]** port, located on the left side of the control box, via a suitable OTG adapter cable.

* It is also possible to perform the update without connecting cables. In this case, this step may be skipped.

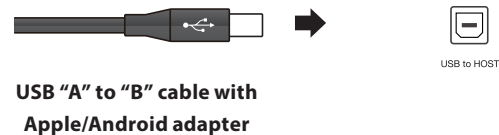

4. Start the update

Press and hold the piano's **[POWER]** button for 20 seconds.

If a smartphone/tablet is connected to the piano via USB cable:

 
Launch the PianoRemote app. The Firmware Update screen will be shown and the update process will start automatically.

If a smartphone/tablet is not connected to the piano via USB cable:

The system software update process will start automatically. Please wait 5 minutes to ensure that the update is successful.

* Do not disconnect the USB memory device or turn off the piano while the update is in progress.

* If the update process does not start, confirm that the USB memory device is using the 'FAT' or 'FAT32' filesystem, and that the update file is located in the root (i.e. top-most) folder.

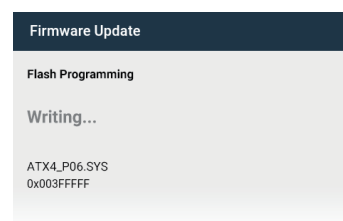

Software Update (ATX4/AR2)

5. Finish the update, disconnect the USB memory device

If a smartphone/tablet is connected to the piano via USB cable:

An [Update Completed!] message will be shown in the PianoRemote app, indicating that the system software update has been successful.

* The confirmation message may also appear as "Boot End", depending on the version of the instrument's LCD touch panel software.

If a smartphone/tablet is not connected to the piano via USB cable:

 
Please wait 5 minutes to ensure that the update is successful.

Disconnect the USB memory device (and smartphone/tablet, if connected), then press and hold the [POWER] button to turn the piano off.

When the piano is turned on, the updated system software will be used automatically.

Please repeat the steps at the beginning of this document to check the [Piano] software version, and confirm that the update has been successful.

* If the update is unsuccessful, please restart this procedure from step 1.

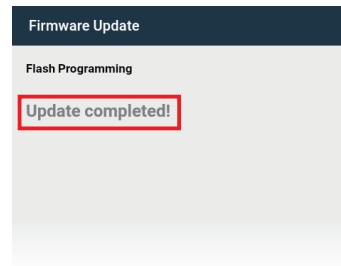

Software Update (ATX4/AR2 System)

■ ATX4/AR2 System software changelog

V2.17 (March 2024)

- Improved: Headphone connection detection at start-up.

V2.16 (January 2024)

- Fixed: The touch curve used by some Rendered sounds was not stored correctly.
- Fixed: Selecting a Rendering sound after an organ sound had been selected no longer prevents the Soft pedal from working.
- Fixed: Various minor bugs.

V2.15 (July 2023)

- Improved: The interaction between very soft/shallow key strokes and the sostenuto pedal.
- Fixed: Bug related to Key-off Effect parameter adjustments not being stored to User Sound memory correctly.

V2.14 (January 2023)

- Fixed: Bug related to data not being reset correctly following a Factory Reset.
- Improved: The playing sound is now muted when disconnecting from Bluetooth MIDI.

V2.12 (August 2022)

- Fixed: Bug relating to AURES DSP data not being selected correctly at start-up.
- Fixed: Changing the Soft pedal to Sostenuto pedal (at start-up) is no longer stored in memory, and reset at power off.
- Improved: Prevent the power from being turned off while storing to memory.

V2.10 (January 2022)

- Added: GX-5 support.

V2.08 (October 2021)

- Fixed: Bug related to switching between Piano and Sound screens in PianoRemote app.

V2.06 (September 2021)

- Added: GX-3 support.

V2.05 (September 2021)

- Added: K-15, K-600, K-800 support.

V2.04 (July 2021)

- Added: K-200 support.

V1.09 (December 2020)

- First production version.