This document explains how to install the ASIO driver required to use the USB audio interface of a Kawai digital or hybrid piano when connected to a Windows computer.

Please disconnect the digital/hybrid piano from the computer before attempting to install/uninstall this driver.

Please close all running applications before starting the installation. Do not use or launch any other applications during the installation process.

■ ASIO driver requirements

This driver requires a computer running Windows 10 or Windows 11 (64-bit, x64 architecture), and a Kawai digital/hybrid piano featuring a USB audio interface running **firmware v1.8 or later**. Please visit the Kawai Global website to download the latest USB audio interface firmware update and version check tool: https://www.kawai-global.com/support/downloads/.

■ Installing the ASIO driver

1. On the computer, launch **[kawaisetup.exe]** located in the same folder as this manual.


If a pop-up appears requesting "Do you want to allow this app to make changes to the device?", click [Yes].

After a few seconds, the installer tool will appear.

2. Select the desired language, then click the **[Next]** button.

The Welcome screen will be displayed.



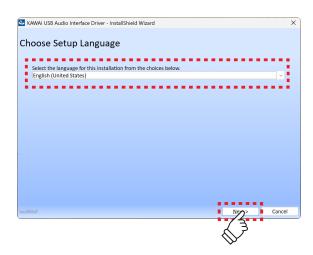


3. Click the [Next] button once again.

The License Agreement screen will be displayed.




■ Installing the ASIO driver (continued)

4. After carefully reviewing the contents, if you agree, select [I accept the terms in the license agreement] then click [Install].

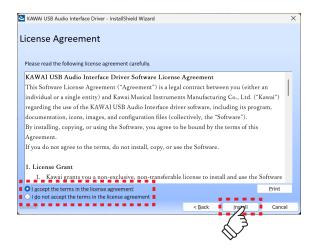

5. The ASIO driver installation will begin.

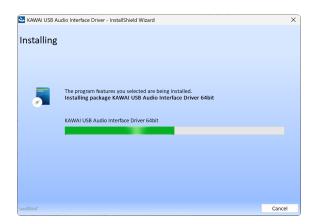

6. After a short wait, the ASIO driver installation will be completed.

Click the [Finish] button to close the installer tool.



■ Uninstalling the ASIO driver

Please follow the steps below to uninstall the ASIO driver.


Please disconnect the digital/hybrid piano from the computer before attempting to uninstall this driver.

1. Click the Start button.

The Start Menu will be displayed.




2. Click the [All] button.

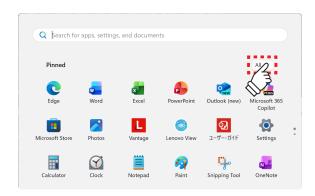


3. Enter [uninstall kawai] into the Search box.

Click the **[Uninstall KAWAI USB Audio Interface Driver]** icon that appears.

The uninstall confirmation prompt will be displayed.

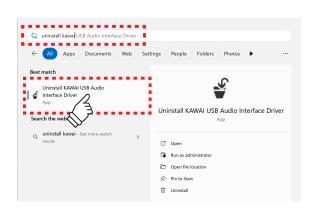


Click the [Yes] button to proceed with uninstalling the ASIO driver.

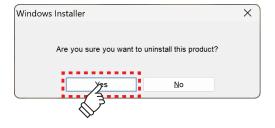

5. The ASIO driver uninstall process will begin.

 Continue to follow the onscreen prompts until the uninstall process is completed.



■ Kawai ASIO Driver Changelog

V1.0.1 (November 2025)

First production version.