

KAWAI

STAGE PIANO
MP11SE
Owner's Manual

EN

Introduction

Main Operation

EDIT Menu

STORE Button & SETUPS

Recorder

USB Menu

SYSTEM Menu

Appendix

Thank you for purchasing this Kawai MP11SE stage piano.

This owner's manual contains important information regarding the instrument's usage and operation.

Please read all chapters carefully, keeping this manual handy for future reference.

■ About this Owner's Manual

Before attempting to play this instrument, please read the **Introduction** chapter from page 10 of this owner's manual. This chapter provides a brief explanation of each section of the MP11SE's control panel, an overview of its various jacks and connectors, and details how the components of the instrument's sound are structured.

The **Main Operation** chapter (page 20) provides an overview of the instrument's most commonly used functions, beginning with turning sections on and off, adjusting their volume, and selecting sounds. Later on, this chapter introduces basic sound adjustment using the four control knobs, before examining how EFX, reverb, amp simulation, and EQ can all be applied to dramatically change the character of the selected sound. The chapter closes with an explanation of the instrument's MIDI OUT section.

The **EDIT Menu** chapter (page 38) lists all available PIANO, E.PIANO, SUB, and MIDI OUT section parameters by category for convenient reference. The **STORE Button & SETUP Menus** chapter (page 60) outlines storing customised sounds, capturing the entire panel configuration as a SETUP, then recalling different SETUPS from the MP11SE's internal memory.

The **Recorder** chapter (page 64) provides instructions on how to record and play back pieces stored both in the instrument's internal memory, and also MP3/WAV audio files saved to USB memory devices. This chapter also explains the MP11SE's metronome/drum pattern functions. Additional USB functions are covered in greater detail in the **USB Menu** chapter (page 93), while the **SYSTEM Menu** chapter (page 99) explains the MP11SE's System Settings and various reset functions.

Finally, the **Appendix** section (page 113) includes USB-MIDI driver information, software update instructions and listings of the instrument's internal sounds and drum rhythms, effects, MIDI reference information, and full specification details.

Important Safety Instructions

SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

AVIS : RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Examples of Picture Symbols



denotes that care should be taken. The example instructs the user to take care not to allow fingers to be trapped.




denotes a prohibited operation. The example instructs that disassembly of the product is prohibited.



denotes an operation that should be carried out. The example instructs the user to remove the power cord plug from the AC outlet.

Read all the instructions before using the product.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

When using electrical products, the following basic precautions should always be followed:



WARNING

Indicates a potential hazard that could result in death or serious injury if the product is handled incorrectly.

The product should be connected to an AC outlet of the specified voltage.




- If you are going to use an AC power cord, make sure that its has the correct plug shape and conforms to the specified power voltage.
- Failure to do so may result in fire.

Do not insert or disconnect the power cord plug with wet hands.



Doing so may cause electric shock.

Take care not to allow any foreign matter to enter the product.

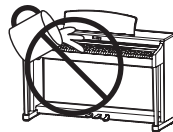


Entry of water, needles or hair pins may result in breakdown or short-circuit. The product shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the product.

When using the headphones, do not listen for long periods of time at high volume levels.



Doing so may result in hearing problems.

Do not disassemble, repair or modify the product.

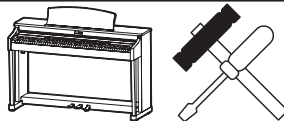

Doing so may result in product breakdown, electric shock or short-circuit.

When disconnecting the AC power cord's plug, always hold the plug and pull it to remove it.



- Pulling the AC power cord itself may damage the cord, causing a fire, electric shock or short-circuit.

The product is not completely disconnected from the power supply even when the power switch is turned off. If the product will not be used for a long time, unplug the AC power cord from the AC outlet.



- Failure to do so may cause fire in case of lightning.
- Failure to do so may over-heat the product, resulting in fire.

It is good practice to place the instrument near the AC outlet and the power cord plug in a position so that it can readily be disconnected in an emergency because electricity is always charging while the plug is in the AC outlet even in a power switch off condition.

Ensure that this product is connected to a socket with a protective earth connection.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.



CAUTION


Indicates a potential hazard that could result in injury or damage to the product or other property if the product is handled incorrectly.

Do not use the product in the following areas.

- Areas, such as those near windows, where the product is exposed to direct sunlight
- Extremely hot areas, such as near a heater
- Extremely cold areas, such as outside
- Extremely humid areas
- Areas where a large amount of sand or dust is present
- Areas where the product is exposed to excessive vibrations


Using the product in such areas may result in product breakdown. Use the product only in moderate climates (not in tropical climates).

Before connecting cords, make sure that the power to this product and other devices is turned OFF.

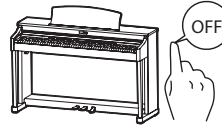


Failure to do so may cause breakdown of this product and other devices.

Do not drag the product on the floor. Take care not to drop the product.

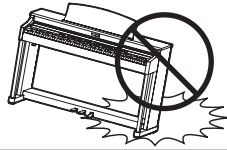

Please lift up the product when moving it. Please note that the product is heavy and must be carried by more than two persons. Dropping the product may result in breakdown.

Do not place the product near electrical appliances such as TVs and radios.

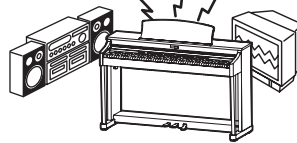

- Doing so may cause the product to generate noise.
- If the product generates noise, move the product sufficiently away from the electrical appliance or connect it to another AC outlet.

When connecting the AC power cord and other cords, take care not to get them tangled.



Failure to do so may damage them, resulting in fire, electric shock or short-circuit.

Do not wipe the product with benzene or thinner.




- Doing so may result in discoloration or deformation of the product.
- When cleaning the product, put a soft cloth in lukewarm water, squeeze it well, then wipe the product.

Do not stand on the product or exert excessive force.




- Doing so may cause the product to become deformed or fall over, resulting in breakdown or injury.

Do not place naked flame, such as lighted candles on the product.

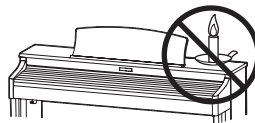

Doing so may cause the illumination to fall over, resulting in fire.

Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.

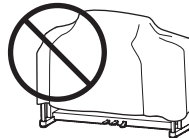

Failure to do so may over-heat the product, resulting in fire.

The product should be located so that its location or position does not interfere with its proper ventilation. Ensure a minimum distance of 5cm around the product for sufficient ventilation.

The product should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Objects have fallen, or liquid has been spilled into the product.
- The product has been exposed to rain.
- The product does not appear to operate normally or exhibits a marked change in performance.
- The product has been dropped, or the enclosure damaged.

Notes on Repair

Should an abnormality occur in the product, immediately turn the power OFF, disconnect the power cord plug, and then contact the shop from which the product was purchased.

Instruction for AC power cord (U.K.)

WARNING: THIS APPARATUS MUST BE EARTHED

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

- GREEN-AND-YELLOW: EARTH
- BLUE: NEUTRAL
- BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

- The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured GREEN or GREEN-AND-YELLOW.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.



An information on Disposal for users

If your product is marked with this recycling symbol it means that, at the end of its life, you must dispose of it separately by taking it to an appropriate collection point. You should not mix it with general household waste. Disposing of this product correctly will prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling. For further details, please contact your local authority. (European Union only)

FCC Information (U.S.A)

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Declaration of Conformity

Products:	Electronic Piano
Model Number:	MP11SE
Responsible Party Name:	Kawai America Corporation
Address:	2055 East University Drive, Rancho Dominguez, CA 90220
Telephone:	310-631-1771

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This applies only to products distributed by Kawai America Corporation.

Table of Contents

Important Safety Instructions	4
Table of Contents	8

Introduction

Welcome to the MP11SE	10
1. Feature Highlights	10
2. Owner's Manual Conventions	11
Part Names & Functions	12
1. Front Panel: Knobs, Faders & Buttons	12
2. Front Panel: Jacks & Connectors	16
3. Rear Panel: Jacks & Connectors	16
Connecting to Other Devices	18
Understanding the MP11SE	19

Main Operation

Overview of Internal Sections	20
1. Section Basics	20
2. LCD Display & Control Knobs	21
3. Reverb	22
4. EFX	23
5. Amp Simulator (E.PIANO)	24
6. Key Range	26
Internal Sections & Feature Parameters	28
1. PIANO section	28
2. E.PIANO section	30
3. SUB section	31
Global Section	32
1. EQ	32
2. Transpose	34
MIDI OUT Section	36

EDIT Menu

Overview of the EDIT Menu (PIANO, E.PIANO, SUB)	38
EDIT Menu parameters (PIANO, E.PIANO, SUB)	40
1. Reverb	40
2.1. EFX	40
2.2. Amp Simulator (E.PIANO)	41
3. Sound	42
4. Tuning	44
5. Key Setup	45
6. Controllers	47
7. Knob Assign	49
8. Virtual Technician (PIANO section)	50
8. Virtual Technician (E.PIANO, SUB sections)	51
Overview of the EDIT Menu (MIDI OUT)	52
EDIT Menu parameters (MIDI OUT)	54
1. Channel/Program	54
2. SETUP	54
3. Transmit EYE	55
4. MMC EYE	55
5. Key Setup	56
6. Controllers	57
7. Knob Assign	59

STORE Button & SETUPS

Overview of the STORE Button	60
1. Storing a SOUND	60
2. Storing a SETUP	61
3. Storing POWERON settings	62
SETUP memories	63

Recorder

Overview of the Recorder	64
Song Recorder (Internal Memory)	65
1. Recording a song	65
2. Playing back a song	67
3. Saving a song as an SMF file	69
4. Loading an SMF file into memory	70
5. Erasing a song	73
6. Song Transpose	74
7. Panel Mode	74
8. MIDI to Audio	74
Audio Record/Playback (USB Memory)	75
1. Recording an audio file	75
2. Playing an audio file	78
3. Overdubbing an audio file	81
4. Converting a recorder song to an audio file	84
Metronome	87
1. Click mode	87
2. Rhythm mode	88
3. Recording with the metronome	91

USB Menu

Overview of the USB Menu	93
USB Menu functions	94
1. Load	94
2. Save	95
3. Delete	96
4. Rename	97
5. Format	98

SYSTEM Menu

Overview of the SYSTEM Menu	99
SYSTEM Menu parameters & functions	100
1. Utility	100
2. Pedal/Mod.	102
Expression pedal calibration	103
3. MIDI	104
4. Offset	105
5. User Edit	105
Creating a User Touch Curve	106
Creating a User Temperament	107
Creating a User Key Volume	108
Creating a User Stretch Tuning	109
Creating a User Voicing	110
6. Reset	111
Panic button	111
Panel Lock (🔒)	112

Appendix

Troubleshooting	113
USB MIDI (USB to Host connector)	117
Software Update	118
Sound List	119
Rhythm Pattern List	120
EFX Categories, Types, & Parameters	121
Specifications	126
MIDI Implementation	127
1. Recognised Data	128
2. Transmitted Data	132
3. Exclusive Data	134
4. SOUND/SETUP Program/Bank	144
5. Control Change Number (CC#) Table	145
MIDI Implementation Chart	146

Welcome to the MP11SE

1 Feature Highlights

The best keyboard action available in a stage piano

The MP11SE utilises Kawai's highly-regarded *Grand Feel* wooden-key keyboard action, which draws upon 90 years of acoustic piano craftsmanship to provide an exceptionally realistic playing experience.

As with a grand piano, all eighty-eight black and white keys are crafted from long pieces of wood, pivoting on a central balance pin in a smooth, seesaw-like motion. The *Grand Feel* keys are longer than any other digital piano keyboard action, with the pivot point distance extended to match that of a Kawai grand piano. When the front of a key is pressed down, the rear rises, throwing a hammer which plays the note. These hammers are graded in size and weight, replicating the heavier bass and lighter treble notes of an acoustic grand piano, while additional counter-weights embedded within the lower keys help to lighten their touch during pianissimo passages. The *Grand Feel* keyboard action even reproduces the subtle *let-off* sensation felt when playing the keys of a grand piano very softly, satisfying the expectations of even the most discerning pianists.

Finally, the *Grand Feel* keyboard action features Kawai's *Ivory Touch* key surfaces as standard. This finely textured material gently absorbs moisture to assist playing control, and possesses a natural, matte finish that is smooth, but not slippery.

PIANO section: The ultimate pianos for Concert, Pop, and Jazz

The MP11SE captures the beautiful sound of Kawai's SK-EX, EX, and SK-5 acoustic grand pianos, with all 88 keys of these exceptional instruments meticulously recorded, analysed and faithfully reproduced using proprietary *Harmonic Imaging™* technology. This unique process accurately recreates the broad dynamic range of the original grand pianos, affording pianists an extraordinary level of expressiveness ranging from the softest pianissimo to the strongest, boldest fortissimo.

With separate categories for Concert, Pop, and Jazz playing, the MP11SE offers the finest selection of high quality acoustic piano sounds ever compiled for a Kawai instrument, with a separate category devoted entirely to upright and mono pianos.

Moreover, Kawai's unique *Virtual Technician* feature allows various characteristics of the selected acoustic piano sound to be shaped at the touch of a button or the turn of a knob, with parameters to adjust voicing and regulation, string and damper resonances, and subtle hammer, damper, and key release noises.

E.PIANO section: Vintage EPs, twin effects, and amp simulation

The MP11SE features a selection of incredible vintage electric piano sounds, each with their own distinctive characteristics. Enjoy their natural, organic sound, or pass the signal through a wide variety of classic effects stomp boxes, before plugging into one of the five classic amp and speaker cabinets – complete with realistic microphone character and position modelling.

SUB section: High quality strings, pads, basses and more

The MP11SE's SUB section features high quality strings, pads, basses, and other useful sounds that are ideal for creating splits and custom zones, layering with acoustic or electric pianos, or for playing individually, at the front of the mix. Additional Bell, Air, and Voice layers bring greater depth to the sound, with flexible ADSR parameters and resonance/cut-off controls all adjustable directly from the panel's assignable control knobs.

MIDI OUT section: Four zone master keyboard controller

The MP11SE features a new, improved MIDI OUT section with four independent zones for controlling external devices, or integrating into the studio as a master keyboard. Use the assignable panel knobs to send CC# to connected hardware, or the recorder transport buttons to control a DAW without touching a mouse or leaving the piano. The MP11SE even includes LINE IN jacks and a dedicated panel fader to adjust the level of connected devices, such as that old expander module or semi-weighted synth that you just can't live without, or a laptop running software instruments.

Intuitive operation, large LCD, real-time assignable control knobs

The MP11SE's control panel is clearly arranged and easy to use, with related functions grouped together and placed where you'd expect to find them. A large LCD display and four assignable control knobs, allow several parameters to be adjusted directly in real-time, without getting lost in menus – concentrate on playing, rather than trying to remember which button does what.

208 Setup memories: enough for the busiest stage musician

The MP11SE allows every single customised sound, knob position, fader level, and adjustable parameter to be stored in memory as a SETUP, and recalled at the touch of a button. With over 200 SETUP memories, the MP11SE is ideal for busy stage musicians who like to plan several shows ahead, before going out on the road.

USB to Device functionality, with MP3/WAV/SMF file recording and playback

The MP11SE is equipped with USB connectors that not only allow the instrument to be connected to a computer for MIDI use, but also to load and save data to USB memory devices directly. This 'USB to Device' feature allows customised sounds, SETUP memories, and recorder songs stored in internal memory to be saved to USB for posterity.

USB memory devices can also be used to play back MP3 or WAV audio or SMF MIDI files, allowing performing musicians to play along with professional backing tracks, or simply learn the chords or melody for a new piece. It is even possible to save performances directly as MP3, WAV, or SMF files for emailing to band members, casual listening away from the keyboard, or further editing using an audio workstation.

2 Owner's Manual Conventions

This owner's manual utilises a number of illustrative conventions in order to explain the MP11SE's various functions. The examples below provide an overview of the button LED indicator states and press types, and the appearance of different kinds of explanation text.

■ Button LED indicator states

ON / OFF



LED indicator OFF:


Sound/Function is not selected.

ON / OFF



LED indicator ON:

Sound/Function is selected.

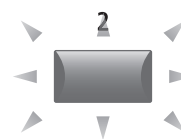

LED indicator flashing:

Sound/Function is selected in a temporary state.

■ Button press types

EQ



Normal press:

Select a sound or function, or turn a function ON/OFF.


EQ



Press and hold:

Show a function's parameters.

KEY RANGE

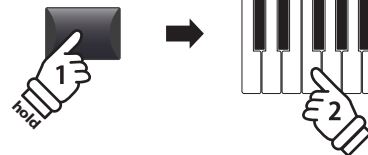

Press and hold, then press X:

Set split points, create zone ranges, set transpose key, etc.

■ Text appearance

Normal instruction and explanation text is written in regular type at 9 pt. size.


* Notes about functions are marked with an asterisk and written in 7.5 pt. size.

Reminders, hints, and additional explanations are written in italic type at 9 pt. size.

— Captions explaining the LCD display or button functions, are written in bold type at 8.5 pt. size.

Example operations are written in italic type at 8 pt. size, and enclosed within a grey box.

Part Names & Functions

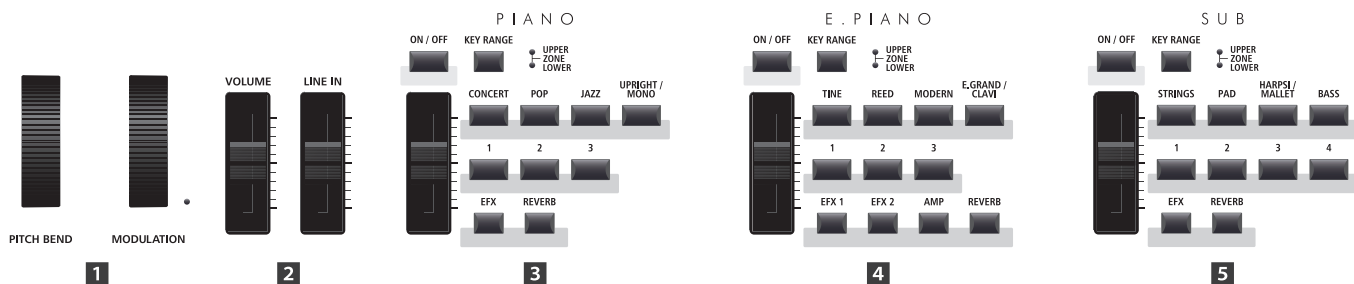

1 Front Panel: Knobs, Faders & Buttons

1 Control Wheels



PITCH BEND MODULATION

PITCH BEND wheel


This control wheel smoothly bends the pitch up or down from its current value.

MODULATION wheel

This control wheel controls the modulation (vibrato) depth. Moving the wheel forward increases the vibrato depth. The LED indicator will turn ON when this wheel is in use.

* Alternative functions can be assigned to the MODULATION wheel in the Controllers page of the EDIT menu (page 47).

2 Volume Faders

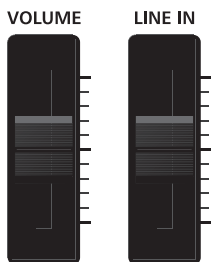

VOLUME LINE IN

VOLUME fader


This fader controls the master volume level of the MP11SE's NORMAL OUTPUT and HEADPHONE jacks.

* The fader does not affect the level of the FIXED OUTPUT jacks.

LINE IN fader

This fader controls the LINE IN volume level.

3 PIANO Section

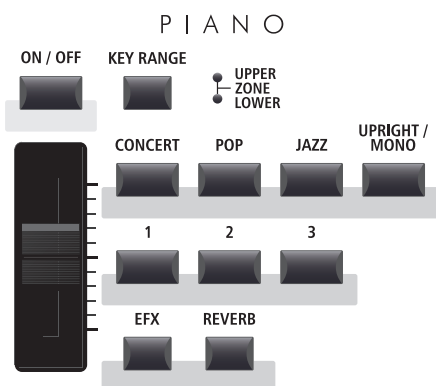

ON/OFF button

This button turns the PIANO section ON or OFF.

KEY RANGE button

This button selects the key range of the PIANO section.

UPPER/ZONE/LOWER LEDs

These LEDs indicate the key range to which the PIANO section is assigned.

VOLUME fader

This fader controls the volume level of the PIANO section.

CONCERT/POP/JAZZ/UPRIGHT-MONO buttons

These buttons select the category of the piano sound.


1/2/3 buttons

These buttons select the piano sound from each category.


EFX/REVERB buttons

These buttons turn the effects and reverb ON or OFF.

* Press and hold either button to show the respective settings pages of the EDIT menu in the LCD display.

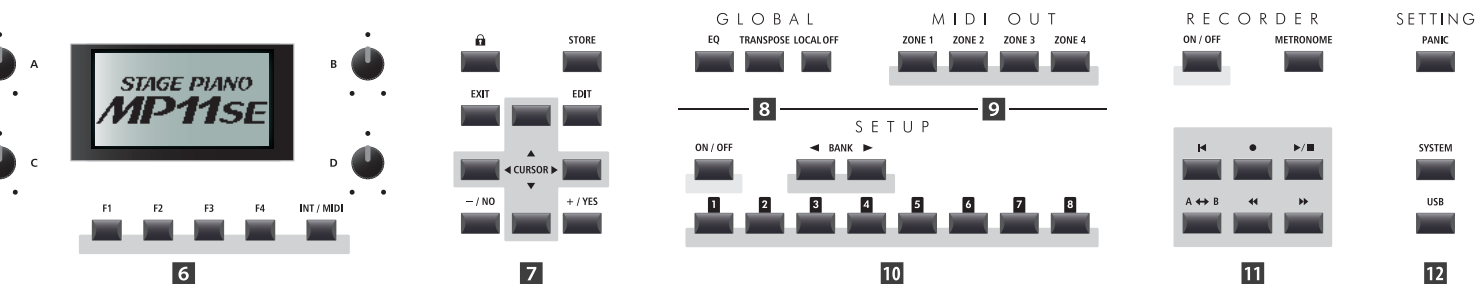

4 E.PIANO Section

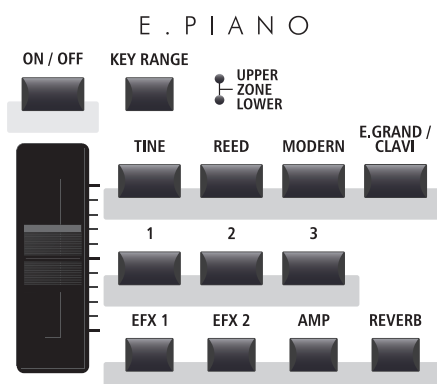

ON/OFF button

This button turns the E.PIANO section ON or OFF.

KEY RANGE button

This button selects the key range of the E.PIANO section.

UPPER/ZONE/LOWER LEDs

These LEDs indicate the key range to which the E.PIANO section is assigned.

VOLUME fader

This fader controls the volume level of the E.PIANO section.

TINE/REED/MODERN/E.GRAND-CLAVI buttons

These buttons select the category of the e.piano sound.

1/2/3 buttons


These buttons select the e.piano sound from each category.

EFX1/EFX2/AMP/REVERB buttons

These buttons turn the primary/secondary effects, amp simulator, and reverb ON or OFF.

* Press and hold either button to show the respective settings pages of the EDIT menu in the LCD display.

5 SUB Section

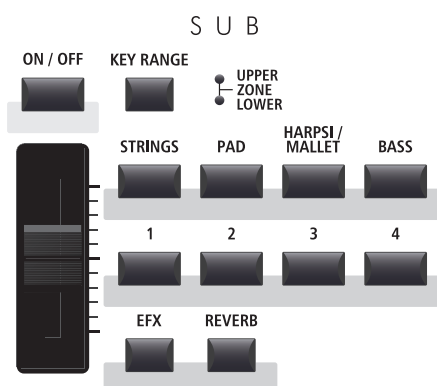

ON/OFF button

This button turns the SUB section ON or OFF.

KEY RANGE button

This button selects the key range of the SUB section.

UPPER/ZONE/LOWER LEDs

These LEDs indicate the key range to which the SUB section is assigned.

VOLUME fader

This fader controls the volume level of the SUB section.

STRINGS/PAD/HARPSI-MALLET/BASS buttons

These buttons select the category of the sub sound.

1/2/3/4 buttons


These buttons select the sub sound from each category.

EFX/REVERB buttons

These buttons turn the effects and reverb ON or OFF.

* Press and hold either button to show the respective settings pages of the EDIT menu in the LCD display.

6 DISPLAY Section

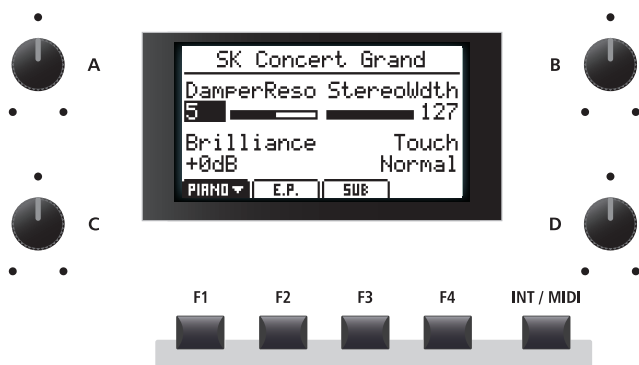

LCD Display

The LCD display provides a visual indication of the selected section and sound, parameter values, and the status of other functions when active.

A/B/C/D control knobs

These knobs adjust displayed parameter values in real-time.

* EDIT menu parameters can be freely assigned to each of the four knobs in the Knob Assign page of the EDIT menu (page 49).


F1/F2/F3/F4 buttons

These buttons select the three internal sound sections (PIANO, E.PIANO, SUB) to be displayed and controlled. In other modes (e.g. Recorder) these buttons also select additional functions.

INT/MIDI button

This button toggles between showing the internal sound sections (PIANO, E.PIANO, SUB), and the four MIDI OUT zones in the LCD display.

7 EDIT Section

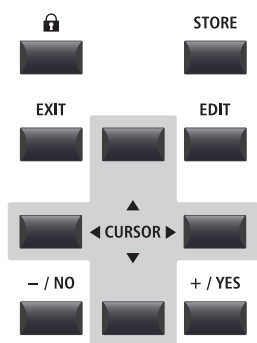

LOCK (🔒) button

This button locks the MP11SE's control panel, thus preventing any accidental button pushes during a performance.

STORE button

This button stores edited SOUNDS, or full panel settings to the SETUP and POWERON memories.

EXIT button

This button exits the current mode or page.

EDIT button

This button enters the EDIT menu. When the EDIT menu is displayed, this button also enters the selected parameter category page.

CURSOR buttons

These buttons move the selection cursor and scroll through the various pages of the EDIT menu.

- / NO + / YES buttons

These buttons decrease or increase the value of the selected parameter, and also cancel or confirm operations that require user interaction (e.g. Erasing data).

8 GLOBAL Section



EQ button

This button turns the global EQ ON or OFF. Press and hold the button to show the EQ settings screen in the LCD display.


TRANSPOSE button

This button turns the TRANSPOSE function ON or OFF. Press and hold the button to show the transpose settings pop-up in the LCD display.

LOCAL OFF

This button disables the internal connection between the MP11SE's keyboard and tone generators.

9 MIDI OUT Section

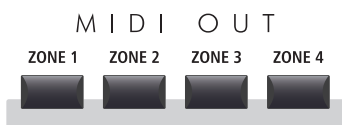


ZONE 1/ZONE 2/ZONE 3/ZONE 4 buttons

These buttons turn the four MIDI zones ON or OFF.

* Press and hold a button to show the respective MIDI zone's settings.

10 SETUP Section

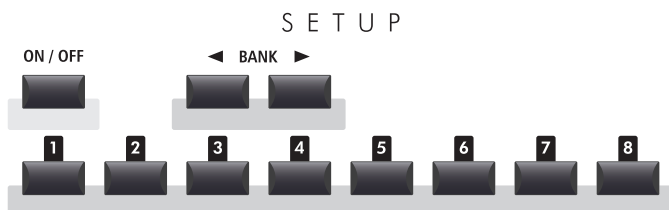

ON/OFF button

This button turns the SETUP section ON or OFF.


BANK buttons

These buttons select the SETUP bank from A to Z.

MEMORY buttons

These buttons select the SETUP memory from 1 to 8.

11 RECORDER Section

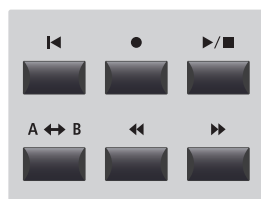

ON/OFF button

This button turns the RECORDER section ON or OFF.

METRONOME button

This button activates the METRONOME or RHYTHM patterns.

◀ (RESET) button

This button resets the MP11SE's song recorder, rewinding songs and MP3/WAV files to the beginning.

● (RECORD) and ▶/■ (PLAY/STOP) buttons

These buttons record and playback/stop songs stored in the MP11SE's internal memory, or MP3/WAV files saved to a USB memory device.


A ↔ B (LOOP) button

This button activates the MP11SE's A-B Loop function, allowing passages of a recorder song or MP3/WAV file to be played back repeatedly.

◀◀ (REW) and ▶▶ (FWD) buttons

These buttons are used to move the playing position of the current recorder song or MP3/WAV backward or forward.

12 SETTING Section

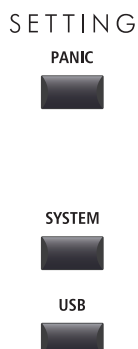

PANIC button

This button returns the MP11SE to the Power On state, and also sends All Note Off and Reset All Controller messages via MIDI.

SYSTEM button

This button enters the SYSTEM menu, allowing many aspects of the MP11SE's functionality to be adjusted.

USB button

This button enters the USB menu, allowing data to be loaded and saved from/to a connected USB memory device.

2 Front Panel: Jacks & Connectors



HEADPHONE jack

The headphone jack is located at the left end of the key block and used to connect a pair of headphones equipped with a standard 1/4" phone jack.




USB TO DEVICE port

The USB to Device port is located at the right end of the key slip and used to connect a FAT or FAT32 formatted USB memory device to load and save data.

* Please note that wireless flash memory devices are not compatible.

3 Rear Panel: Jacks & Connectors

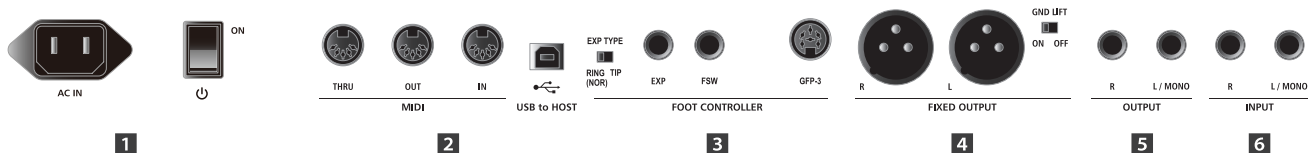

1 POWER Section



AC IN



ON

AC IN

Connect the power cable included with the MP11SE to this receptacle.


POWER SWITCH

This switch turns the MP11SE ON and OFF.

* To prevent data loss when turning off the instrument, do not disconnect the power cable until the 'Goodbye' message disappears from the LCD display.

* The MP11SE features a power saving mode that can turn off the instrument automatically after a specified period of inactivity. For more information, please refer to page 101.

2 MIDI Section

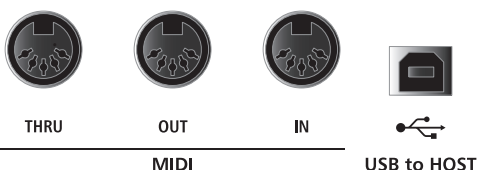

THRU

OUT

IN

MIDI

USB to HOST

MIDI THRU/OUT/IN jacks

These jacks are used to connect the MP11SE to external MIDI devices, and also to a computer with a MIDI interface as an alternative to the 'USB to Host' port.

USB TO HOST port


This port is used to connect the MP11SE to a computer using a USB cable. When connected, the instrument can be used as a standard MIDI device, allowing it to send and receive MIDI data. Connect a 'B' type USB connector to the instrument, and an 'A' type USB connector to the computer.

* When connecting the instrument to a computer via USB, it is recommended to use a high-quality cable to ensure a stable connection.


* The instrument's USB MIDI port and MIDI IN/OUT jacks can be connected and used simultaneously. To adjust MIDI routing, please refer to the MIDI parameters in the SYSTEM menu, explained on page 104.

* When connecting the MP11SE to a computer using the 'USB to Host' port, additional driver software may be required. For more information, please refer to page 117.

3 FOOT CONTROLLER Section

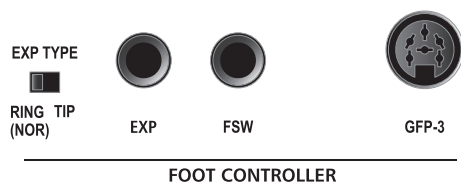

EXP type	Description
RING (NOR)	TRS plug's Ring to WIPER
TIP	TRS plug's Tip to WIPER

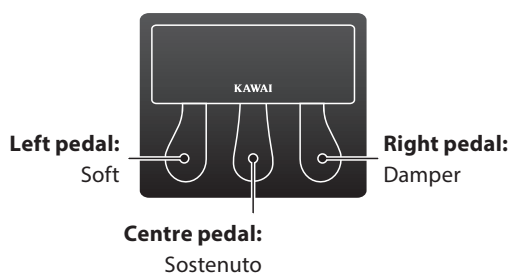

EXP TYPE switch

This switch is used to select the EXP pedal's TRS connector type.

EXP jack

This jack is used to connect an expression pedal to the MP11SE.

* For information about calibrating the expression pedal to ensure correct operation with the MP11SE, please refer to page 103.

FSW jack


This jack is used to connect a momentary foot switch pedal to the MP11SE.

GFP-3 jack

This jack is used to connect the included GFP-3 triple pedal unit to the MP11SE. By default, the right pedal acts as a damper pedal, the centre pedal acts as a sostenuto pedal, and the left pedal functions as a soft pedal.

* Functions can be freely assigned to each foot controller in the Controllers page of the EDIT menu. For more information, please refer to page 57.

4 FIXED OUTPUT Section

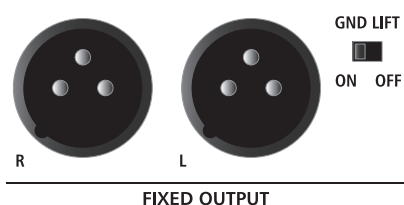

FIXED OUTPUT jacks

These jacks are used to connect the MP11SE to a musical instrument amplifier, PA system, or recording console using XLR terminals.


The VOLUME fader does NOT affect these outputs.

GND LIFT switch

This switch is used to shut the ground loop that can occur when connecting the MP11SE using XLR terminals.

* This switch can typically be left in the OFF position.


5 OUTPUT Section

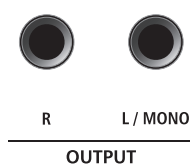

OUTPUT jacks

These jacks are used to connect the MP11SE to a musical instrument amplifier, PA system, or recording console using standard 1/4" phone jacks. To output a mono signal, connect the cable to the L/MONO jack.

6 INPUT Section

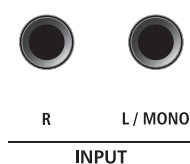


INPUT jacks

These jacks are used to connect a pair of stereo outputs from other electronic instruments or audio equipment to the MP11SE. The input level can be easily adjusted using the LINE IN fader. When connecting a mono audio source, connect the cable to the L/MONO jack only.

* When using the Audio Recorder function, the INPUT audio will also be recorded to the WAV/MP3 file. For more information, please refer to page 75.

Connecting to Other Devices

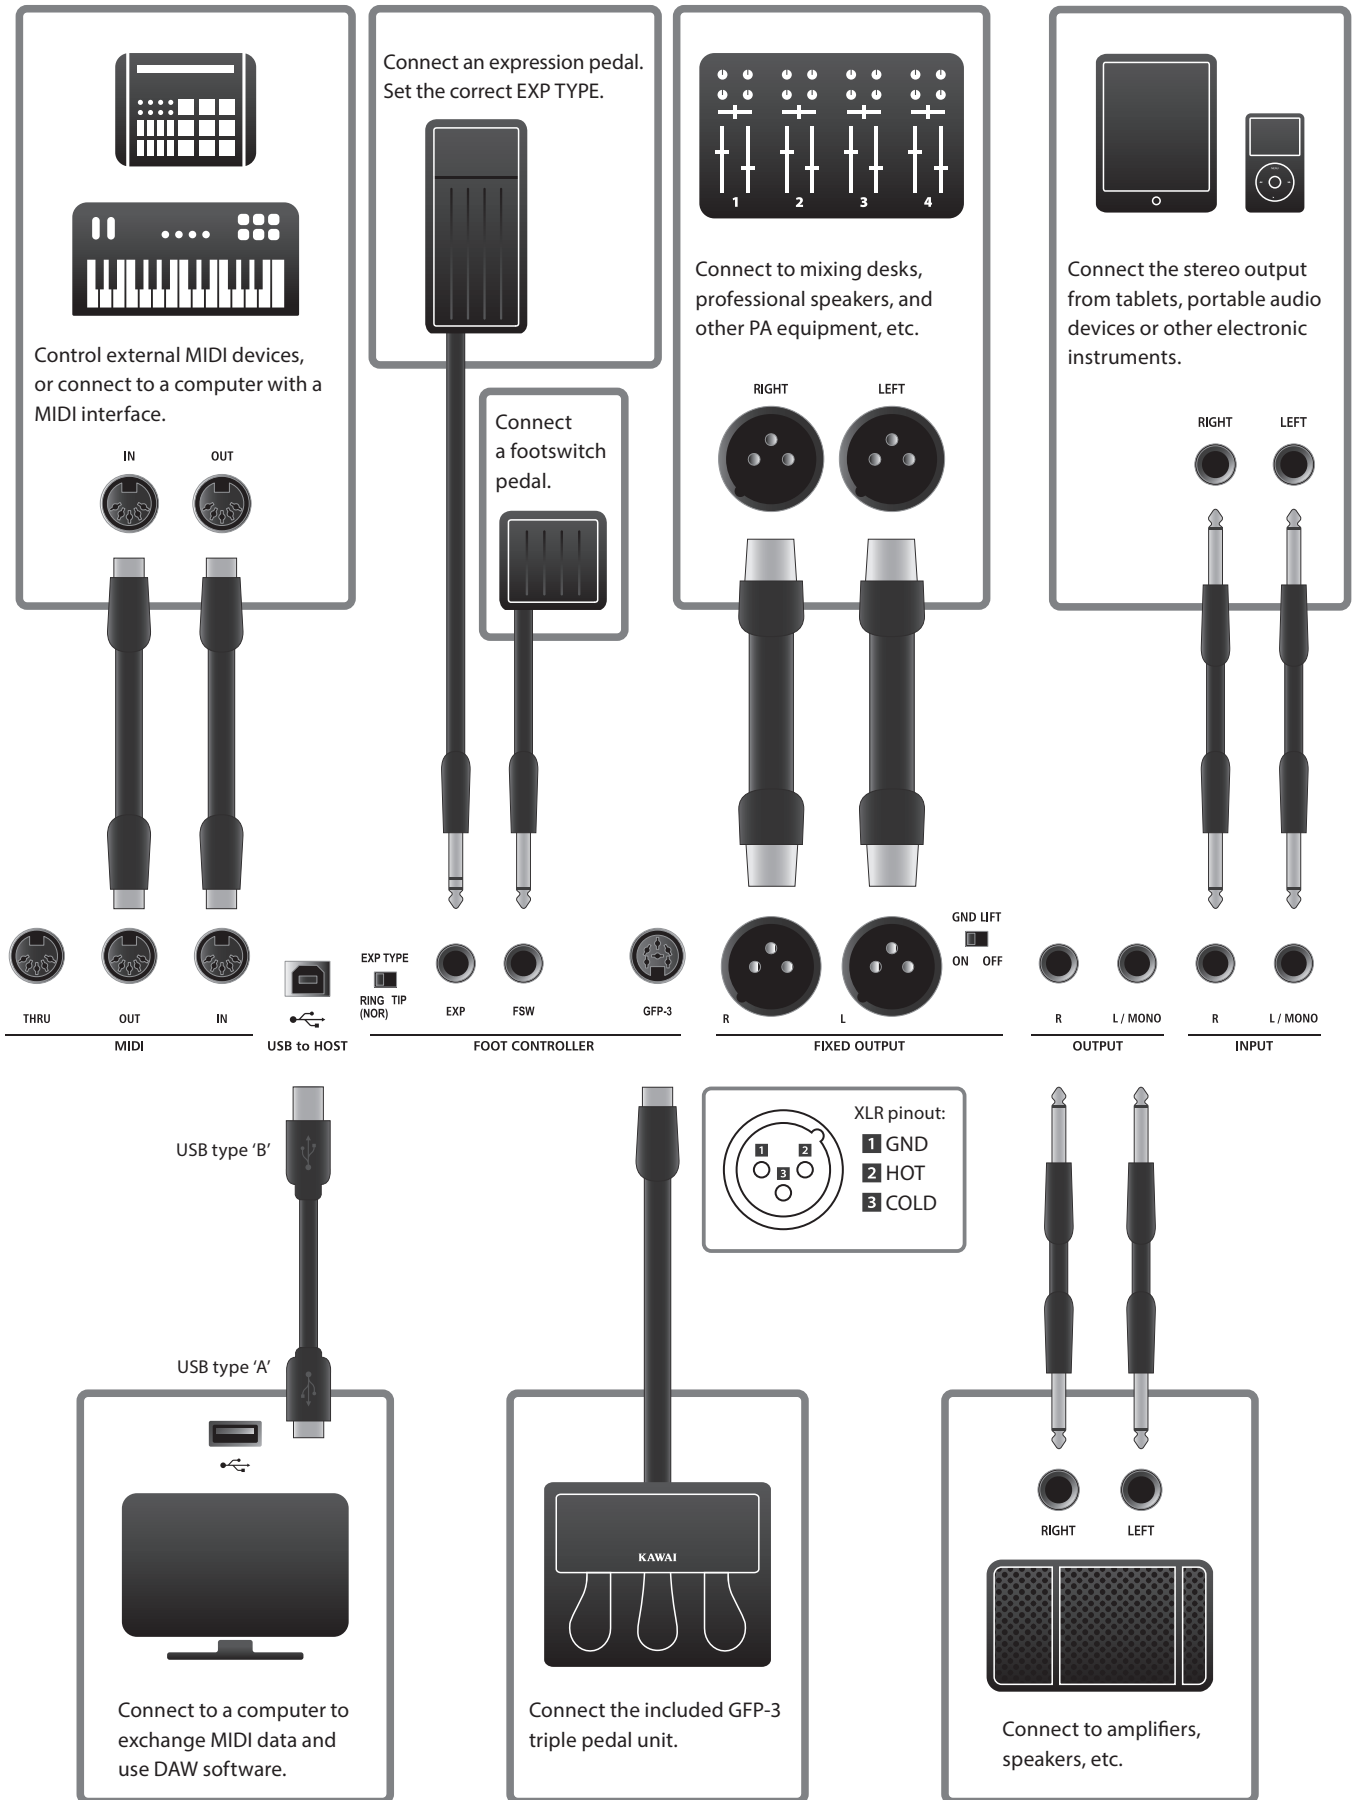

Understanding the MP11SE

■ Preparation before use

The MP11SE does not feature built-in speakers. Therefore, in order to listen to the MP11SE, it will first be necessary to connect a mixer, keyboard amplifier, or headphones to the instrument.

Once connected to an audio output device, press the POWER SWITCH located on the right of the rear panel to turn on the MP11SE. It is recommended to turn on the MP11SE before the audio output device in order to avoid the unpleasant switching noise that can sometimes occur.

■ MP11SE section structure: explanation

The MP11SE features 3 internal sound sections: PIANO, E.PIANO, and SUB. Each section features a dedicated VOLUME fader and can be turned ON or OFF freely.

The PIANO, E.PIANO, and SUB sections share largely the same operation, with 4 category buttons and multiple sounds assigned to each category. The PIANO and SUB sound sections each feature one EFX module, while the E.PIANO section offers two separate EFX modules and an additional AMP simulator. All sounds can be adjusted using the various parameters in the EDIT menu, with additional 'Feature Parameters' that are specific to each of the three sound sections.

The MP11SE's external (MIDI) functionality is divided into four independently controlled zones. As with the internal sound sections, various EDIT menu parameters are available to define transmit/receive channels, MMC features, keyboard ranges, and knob assignments etc.

REVERB settings are common for all internal sections, however the DEPTH can be controlled independently for each section.


The MP11SE's EQ is also common for all internal sections, however parameters in the EDIT menu allow the tonal character for each section's sound to be adjusted independently.

Modifications to each sound can be stored as individual SOUND presets, while the entire configuration of the MP11SE itself can be stored in one of the 208 SETUP memories.

As noted previously, the master VOLUME fader does not affect the FIXED OUTPUT jacks, but does affect the (normal) OUTPUT jacks. This allows audio engineers to control the level of the instrument at the mixing desk, while still allowing performers to adjust the volume of their monitor speakers freely.

■ MP11SE section structure: block diagram

The diagram below illustrates the section structure of the MP11SE.

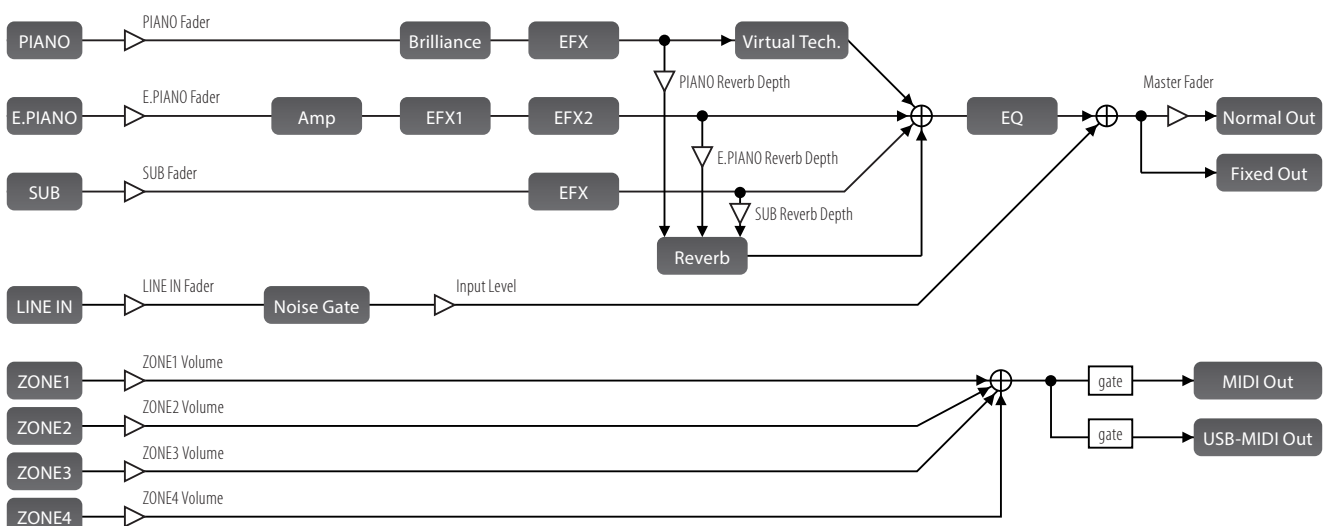

Overview of Internal Sections

1 Section Basics

As noted previously, the MP115E's PIANO, E.PIANO, and SUB sections all share largely the same operation. This page will explain the fundamentals of turning sections ON and OFF, selecting sounds, and adjusting the section volume.

■ Turning a section ON or OFF

Press the ON/OFF button to turn each section ON or OFF.

The LED indicator for the ON/OFF button will turn ON or OFF to indicate the current status of the section.

If a section is turned OFF (but still shown in the LCD display), a ✱ symbol will be added to the left of the sound name.

Section is turned OFF

*SK Concert Grand



* When Receive Mode (page 104) is set to 'Section', the MIDI input signal will still trigger sounds even when a section is turned OFF.

■ Selecting sounds

First, turn the PIANO section ON and all other sections OFF.


Press the one of the sound category buttons, then press one of the sound variation buttons.

The LED indicators for the selected sound category and variation buttons will turn on, and the variation list will pop-up briefly in the LCD display.


Variation list Selected sound



Experiment with selecting different categories and variations, playing the keyboard each time to hear the unique tonal characteristics of every sound.

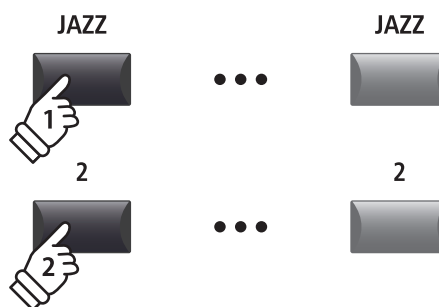

Example: To select the Jazz Grand sound, press the JAZZ category button, then the 2nd variation button.

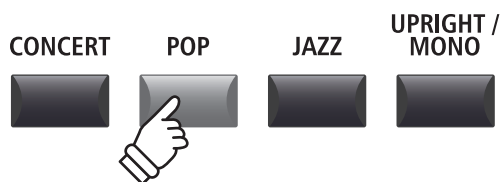


■ Adjusting the section volume

Use the VOLUME fader below each section's ON/OFF button to adjust the volume of the section.

The volume of the section will increase or decrease independently of the other sound sections.

* When playing with just a single section (e.g. PIANO), it is recommended to set the VOLUME fader to the maximum position.


To adjust the volume of all sound sections simultaneously, use the MASTER VOLUME fader (page 12).

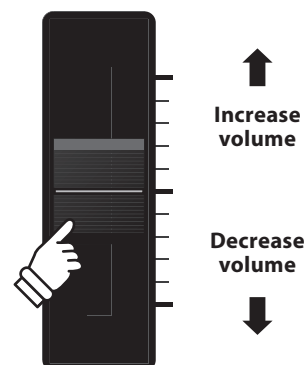

2 LCD Display & Control Knobs

In regular Play Mode the LCD display provides a visual indication of the selected section and sound, and the values of the four real-time control knobs (A, B, C, and D).

The function of each knob can be assigned to control any parameter in the EDIT menu, allowing frequently used functions to be accessed from a single screen. Furthermore, two groups of knob parameters (2 x 4) can be defined for each of the PIANO, E.PIANO, SUB sections and MIDI zones, providing extensive real-time control.

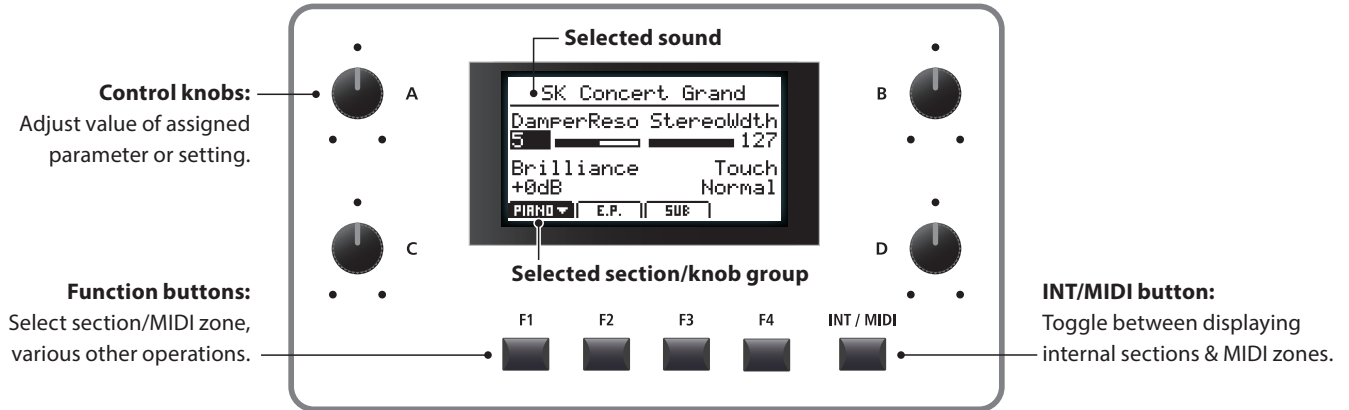


Selecting sections, primary/secondary knob groups

Press the function buttons located below the LCD display to select the desired internal section.

The section icon will become highlighted, and the name of the selected sound and primary group of knob parameters will be shown in the LCD display.

Press the same function button to cycle between the primary and secondary group of knob parameters in the LCD display.

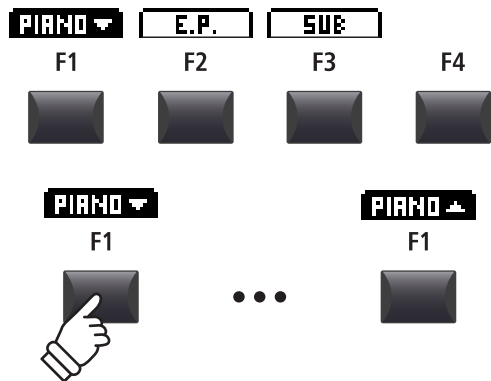

Toggling between internal sections and MIDI zones

Press the INT/MIDI button to toggle between showing the internal sections and MIDI zone volumes in the LCD display.

* For more information about MIDI zones, please refer to page 36.




Adjusting parameters

Turn the four control knobs (A, B, C, D) located on either side of the LCD display to adjust the displayed knob group parameters.

* EDIT menu parameters can be freely assigned to each of the four knobs in the Knob Assign page of the EDIT menu (page 49).

Parameters can also be adjusted by using the CURSOR buttons to move the selection cursor, and +/-YES or -/NO buttons to increase or decrease the value of the selected parameter.

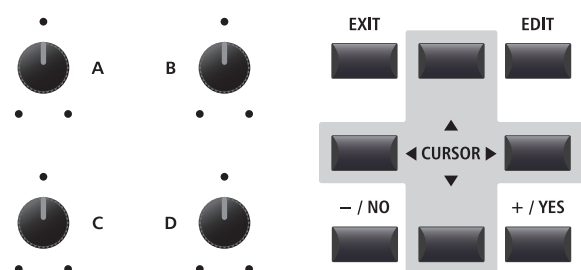

3 Reverb

Reverb adds reverberation to the sound, simulating the acoustic environment of a recital room, stage, or concert hall. The MP11SE features 6 high quality types of reverb.

Each sound section features independent REVERB ON/OFF and REVERB DEPTH controls, however the REVERB TYPE (and associated settings) is common to all sections.


■ Reverb types

Reverb type	Description
Room	Simulates the ambiance of a small rehearsal room.
Lounge	Simulates the ambiance of a piano lounge.
Small Hall	Simulates the ambiance of a small hall.
Concert Hall	Simulates the ambiance of a concert hall or theater.
Live Hall	Simulates the ambiance of a live hall or stage.
Cathedral	Simulates the ambiance of a large cathedral.

■ Turning reverb ON or OFF

Press the desired sound section's REVERB button to turn the reverb for that section ON or OFF.

The LED indicator for the sound section's REVERB button will turn ON or OFF to indicate the current status of the reverb.

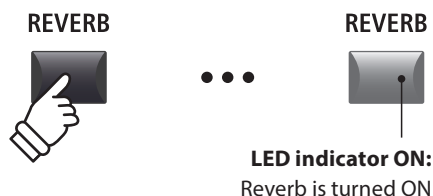

■ Changing the reverb type and additional parameters


Press and hold the section's REVERB button.

The REVERB page of the EDIT menu will be shown in the LCD display.



Turn the four control knobs (A, B, C, D) to change the reverb type and adjust additional reverb parameters.

Press and hold the REVERB button again to exit.

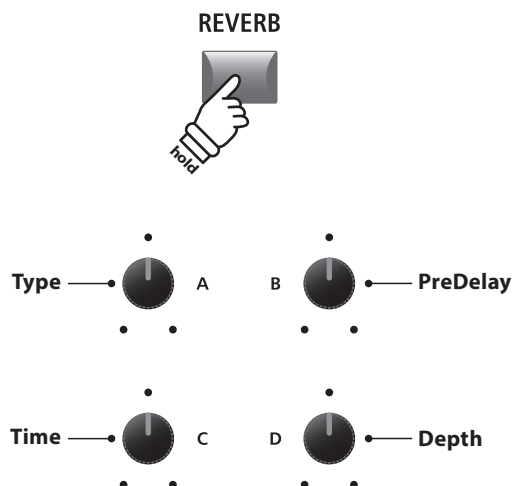

■ Reverb parameters

Knob	Parameter	Description	Value range
A	Type	Changes the type of environment.	(see table above)
B	PreDelay	Adjusts the delay time before the reverberation is applied.	0 ~ 200 ms
C	Time	Adjusts the decay length/speed of the reverberation.	300 ms ~ 10.0 s (depending on type)
D	Depth	Adjusts the depth of the environment (amount of reverberation).	0 ~ 127

4 EFX

In addition to reverb, various other effects can be applied to the selected sound, altering the tonal character and feeling of the instrument. The MP11SE features 129 high quality EFX types, with an effect assigned to each sound by default.

The PIANO and SUB sound sections offer one effect module each, while the E.PIANO section features two separate effects modules that can be connected in series. For efficient selection, EFX types are sorted by category.

■ EFX categories

EFX category	Types	EFX category	Types	EFX category	Types	EFX category	Types
1 Chorus	8	7 Delay/Rev	8	13 Groove	4	19 Enhancer+	8
2 Flanger	5	8 PitchShift	3	14 Misc.	2	20 P.Shift+	6
3 Phaser	6	9 Compressor	2	15 Chorus+	6	21 Comp+	8
4 Wah	6	10 OverDrive	3	16 Phaser+	6	22 OverDrive+	8
5 Tremolo	6	11 EQ/Filter	5	17 Wah+	6	23 Parallel	6
6 AutoPan	4	12 Rotary	5	18 EQ+	8	TOTAL	129

* The '+' effects consist of the base effect plus an additional combination effect, while still using only one effect module.


* For more information about available effect categories, types, and parameters, please refer to page 121.

■ Turning effects ON or OFF

Press the desired sound section's EFX button to turn the effects for that section ON or OFF.

The LED indicator for the sound section's EFX button will turn ON or OFF to indicate the current status of the effects.

* The E.PIANO section's EFX1 and EFX2 modules are turned ON and OFF in exactly the same way.

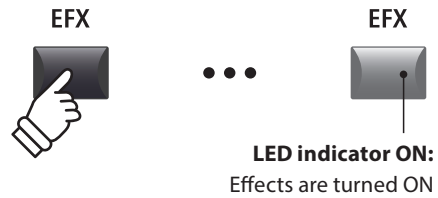

■ Changing the effect category, type and additional parameters

Press and hold the section's EFX button.

The first EFX page of the EDIT menu will be shown in the LCD display.




Turn the control knobs (A, B, C, D) to change the effect category, type, and adjust additional effect parameters.

* The number of adjustable EFX parameters will vary depending on type.

* Press the F1, F2, and F3 buttons (corresponding to the selected section) and F4 button to scroll through the different EFX pages.

Press and hold the EFX button again to jump to the first EFX page of the EDIT menu, and once again to EXIT.

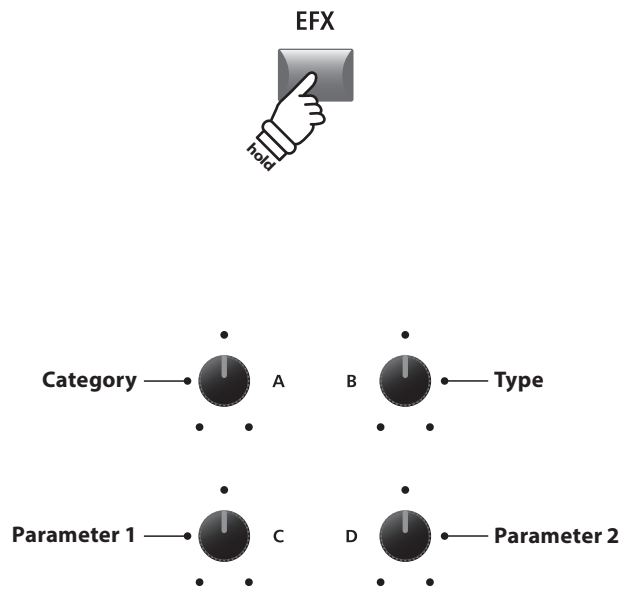

* Above knob assignments will change depending on EFX page displayed.

5 Amp Simulator (E.PIANO)

The tonal character of an amplifier or speaker cabinet is an important component of vintage electric piano sounds. The MP11SE's Amp Simulator function features 5 typical amplifier types and a selection of adjustable parameters.


■ Amp types

Amp type	Description
S. Case	A suitcase type amplifier, commonly used for vintage electric piano sounds.
M. Stack	A British valve guitar amplifier, known for its 'crunchy' tonal character.
J. Combo	A popular Japanese solid-state amplifier favoured for its clean, yet powerful sound.
F. Bass	An American valve bass amplifier that became popular for guitar, harmonica, and other instruments.
L. Cabi	A valve amplifier and speaker enclosed within a wooden cabinet, originally intended for drawbar organ sounds, but also used with electric pianos to produce a distinctive 'shimmering' sound.

■ Turning the Amp Simulator ON or OFF

Press the E.PIANO sound section's AMP button to turn the amp simulator ON or OFF.


The LED indicator for the AMP button will turn ON or OFF to indicate the current status of the amp simulator.

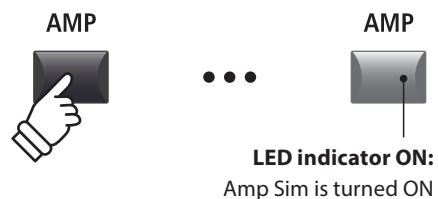

■ Changing the Amp type, adjusting drive, and level parameters

Press and hold the E.PIANO sound section's AMP button.

The first AMP page of the EDIT menu will be shown in the LCD display.

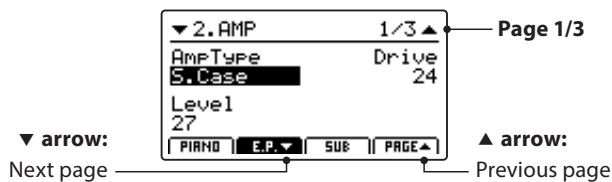


Turn the control knobs (A, B, C) to change the amp type, and adjust the drive, and level parameters.

* For more information about additional amp simulator parameters, please refer to page 25.

* Press the F2 and F4 buttons to scroll through the different AMP pages.

Press and hold the AMP button again to jump to the first AMP page of the EDIT menu, and once again to EXIT.

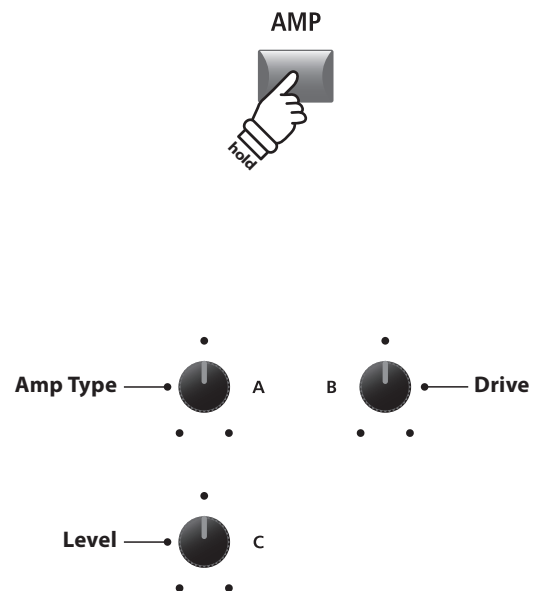

* Above knob assignments will change depending on AMP page displayed.


■ Amp Simulator parameters

Page	Knob	Parameter	Description	Value range
1	A	Amp Type	Changes the type of amplifier model.	[see table above]
	B	Drive	Adjusts the drive level of the amplifier.	0 ~ 127
	C	Level	Adjusts the overall volume level of the amplifier.	0 ~ 127
2	A	Amp EQ Lo	Adjusts the gain of the amplifier's low frequencies.	-10 dB ~ +10 dB
	B	Amp EQ Mid	Adjusts the gain of the amplifier's mid frequencies.	-10 dB ~ +10 dB
	C	Amp EQ Hi	Adjusts the gain of the amplifier's high frequencies.	-10 dB ~ +10 dB
	D	Mid Frequency	Adjusts the frequency of the amplifier's mid-range band.	200 Hz ~ 3150 Hz
3	A	Mic Type	Changes the type of microphone used for the amplifier.	Condenser, Dynamic
	B	Mic Position	Change the position of the microphone used for the amplifier.	OnAxis, OffAxis
	C	Ambience	Adjusts the mixing ratio of additional ambient microphones.	0 ~ 127


■ Adjusting additional Amp Simulator parameters

Press and hold the E.PIANO sound section's AMP button, then press the F2 button (corresponding to the selected E.PIANO section).

The second AMP page of the EDIT menu will be shown in the LCD display.

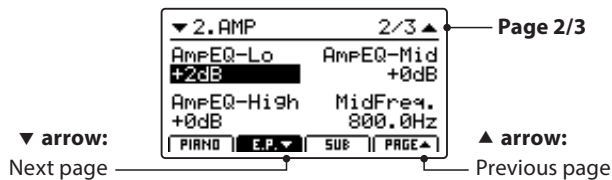


Turn the control knobs (A, B, C, D) to adjust the amp simulator's Lo, Mid, Hi, and MidFreq EQ parameters.

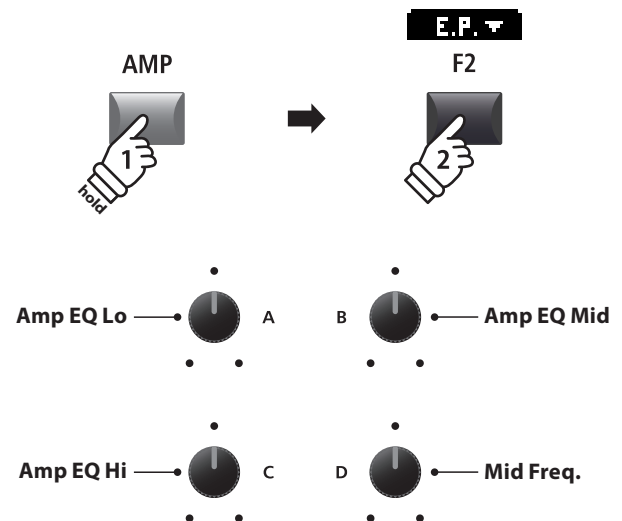


Press the F2 button again.

The third AMP page of the EDIT menu will be shown in the LCD display.

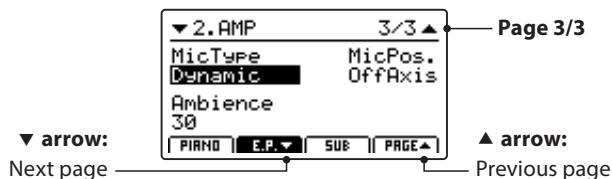

Turn the control knobs (A, B, C) to change the type and positioning of the amp simulator's microphone, and adjust the ambience parameter.

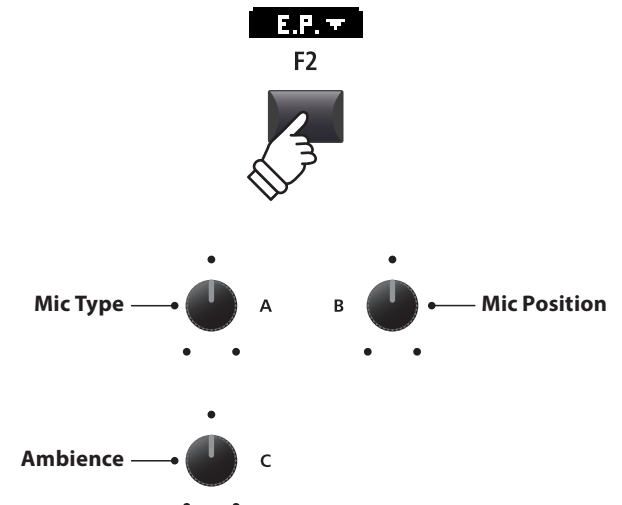

6 Key Range

The Key Range setting allows the key range of each sound section to be specified. By default, each internal section will utilise all 88 keys of the keyboard. However, it is also possible to easily create upper/lower splits or specify a zone between two defined keys.

Key Range types

Key Range type	Key Range LED	Description
Full Keyboard (default)	OFF	The selected sound section will be played with all 88 keys of the keyboard.
Lower	Lower ON	The keyboard is split into two parts, the lower part of the keyboard (from a defined split point to the bottom-most key) is used to play the selected section.
Upper	Upper ON	The keyboard is split into two parts, the upper part of the keyboard (from a defined split point to the top-most key) is used to play the selected section.
Zone	Upper + Lower ON	A zone between two defined keys is used to play the selected section.


Selecting Key Range types

Press the KEY RANGE button to cycle through the different key range types for the selection sound section.

The LED indicators will turn ON or OFF to indicate the selected Key Range type.

* The default Lower/Upper split point is set to F#3.

* The Lower/Upper split point is common for all internal sound sections and external MIDI zones. For more information about common parameters, please refer to page 38.

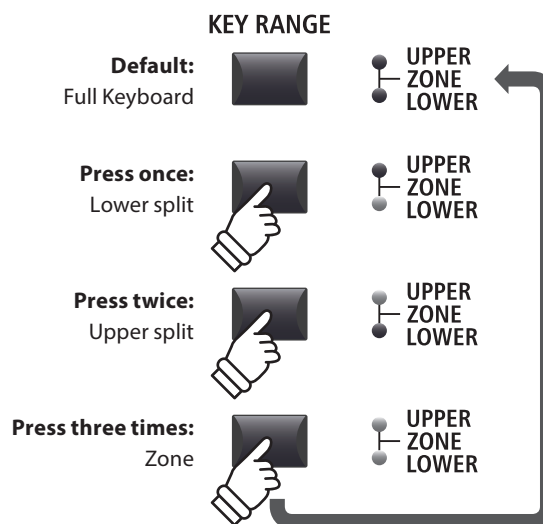


Checking the Lower/Upper split point

After selecting Lower/Upper key range type:

Press and hold the KEY RANGE button.

The current split point will pop-up in the LCD display.

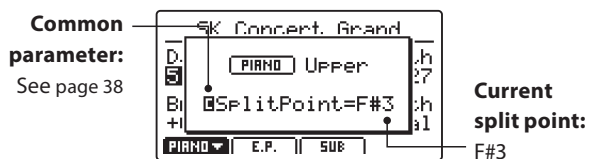

Release the KEY RANGE button


The split point pop-up will disappear.

■ Setting the Lower/Upper split point

After selecting the Lower/Upper key range type:

Press and hold the KEY RANGE button, then press the desired split key of the keyboard.


The name of the pressed key will be shown in the LCD display, and will become the new split point.

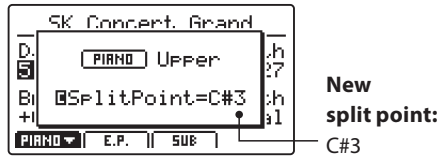

Release the KEY RANGE button.

The split point pop-up will disappear.

* The Lower/Upper split point is common for all internal sound sections and external MIDI zones. For more information about common parameters, please refer to page 38.

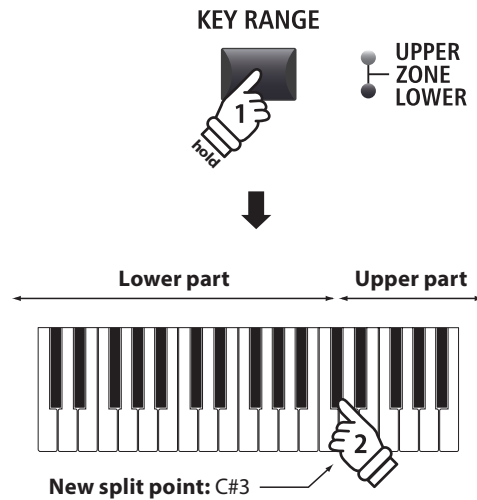


Example: To set the split point to key C#3, press and hold the KEY RANGE button, then press the C#3 key.

■ Setting the Zone key range

After selecting the Zone key range type:

Press and hold the KEY RANGE button, press the desired top key, and then the desired bottom key of the zone.

The names of the pressed top and bottom keys will be shown in the LCD display, and will become the new zone key range.

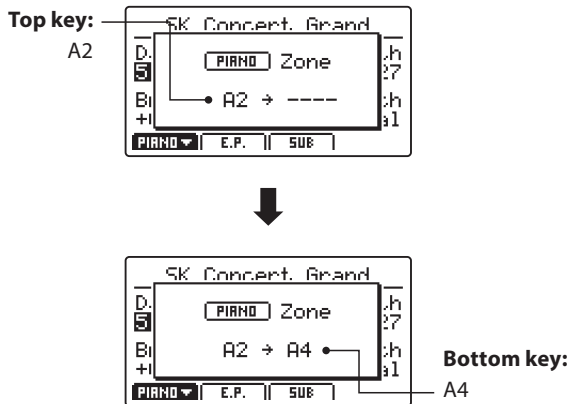


Release the KEY RANGE button.

The zone key range pop-up will disappear.

* Zone key ranges can be defined for each internal sound sections and external MIDI zone. For more information about key range parameters, please refer to page 46.

* It is also possible to check the Zone key range by pressing and holding the KEY RANGE button without setting the top and bottom keys.

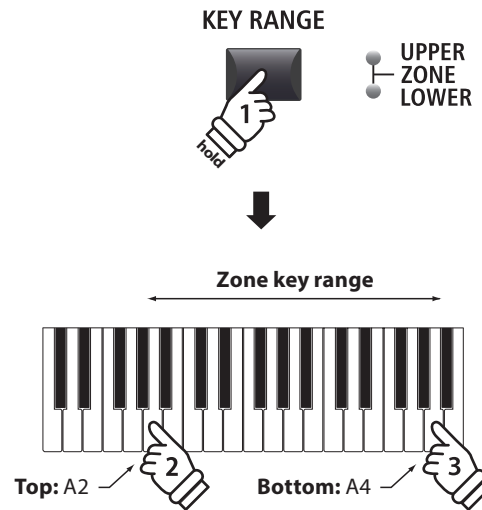

Example: To set the zone key range between key A2 and A4, press and hold the KEY RANGE button, press the A2 key, and then press the A4 key.

Internal Sections & Feature Parameters

1 PIANO section

The MP11SE's PIANO section features 12 different piano sounds arranged into CONCERT, POP, JAZZ, and UPRIGHT/MONO categories. All of the piano sounds have been sampled from Kawai instruments, using alternate voicing configurations, microphone positions, and recording techniques, in order to provide a selection of distinctive acoustic piano sounds that are suitable for various musical styles.

PIANO section sounds

Category	No.	Sound Name	Description
CONCERT	1	SK Concert Grand	A concert grand piano with a clear tonal color and rich powerful bass.
	2	EX Concert Grand	A concert grand piano with an elegant detailed tone and exceptionally broad dynamic range.
	3	SK-5 Grand	A medium-sized grand piano with a polished brilliant tone.
POP	1	Pop Piano	A clear and vibrant pop grand piano.
	2	EX Studio Grand	A clear and powerful concert grand piano.
	3	SK-5 Studio Grand	A medium-sized grand piano with a strong gutsy tone that is ideally suited to pop music.
JAZZ	1	SK Jazz Grand	A warm yet clear concert grand piano.
	2	Jazz Grand	A warm, powerful grand piano sound with a vintage jazz character.
	3	Standard Grand	The popular Concert Grand piano sound from the MP8II.
UPRIGHT / MONO	1	Upright Piano	A full-bodied traditional upright piano.
	2	Mono SK Grand	The SK-EX concert grand piano, optimised for mono audio output.
	3	Mono EX Grand	The EX concert grand piano, optimised for mono audio output.

Feature Parameters: Virtual Technician

An experienced piano technician is essential to fully realise the potential of a fine acoustic piano. In addition to meticulously tuning each note, the technician also performs numerous regulation and voicing adjustments that allow the instrument to truly sing.

The PIANO section's Virtual Technician parameters simulate these refinements digitally, allowing performers to shape various aspects of the piano sound's character to suit their personal preferences.

Entering the Virtual Technician EDIT menu


After selecting the PIANO section (F1 button):

Press the EDIT button.

The PIANO section EDIT menu will be shown in the LCD display.

Edit Menu	
1. REVERB	5. KeySetup
2. EFX	6. Control
3. Sound	7. KnobAsgn
4. Tuning	8. VirtTech
PIANO	E.P. SUB

Press the CURSOR buttons to select 8.VirtTech, then press the +/YES button to enter the Virtual Technician parameter pages.

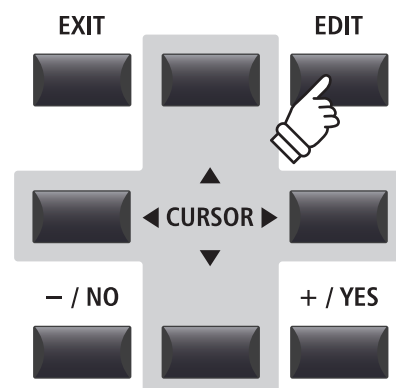

Virtual Technician parameters

Page	Knob	Parameter	Description	Value range
1	A	Voicing	Adjusts the tonal character of the selected piano sound.	[see below]
	B	String Resonance	Adjusts the resonance that is heard when notes are held.	OFF, 1 ~ 10
	C	Undamped Res.	Adjusts the resonance produced by the topmost undamped strings.	OFF, 1 ~ 10
	D	Damper Resonance	Adjusts the resonance that is heard when pressing the damper pedal.	OFF, 1 ~ 10
2	A	Key-off Effect	Adjusts the sound that is heard when keys are released.	OFF, 1 ~ 10
	B	Damper Noise	Adjusts the sound that is heard when pressing the damper pedal.	OFF, 1 ~ 10
	C	Hammer Delay	Adjusts the delay of the hammer striking strings when playing pianissimo.	OFF, 1 ~ 10
	D	Fall-back Noise	Adjusts the sound that is heard when the key action falls back.	OFF, 1 ~ 10
3	A	Topboard	Adjusts the position of the grand piano topboard.	[see below]
	B	Stereo Width	Adjust the stereo width of the selected piano sound.	0 ~ 127
	C	Brilliance	Adjusts the brightness of the overall piano sound.	-10 dB ~ +10 dB

* Voicing types: Normal, Mellow1, Mellow2, Dynamic, Bright1, Bright2, User1~5

Topboard types: Close, Open1, Open2, Open3

* For more detailed information about the PIANO section's Virtual Technician parameters, please refer to page 50.



Adjusting Virtual Technician parameters

After entering the Virtual Technician parameters page:


Press the CURSOR buttons to move the selection cursor, and through the EDIT menu pages.

* The F1 and F4 buttons can also be used to scroll through the different EDIT menu pages.

Press the +/YES or -/NO buttons to increase or decrease values.

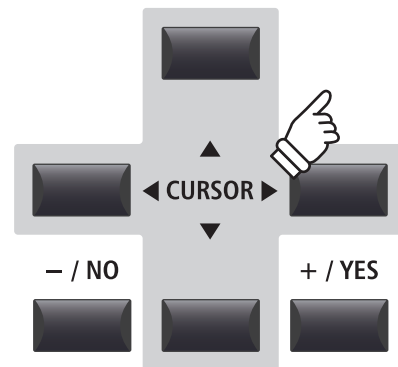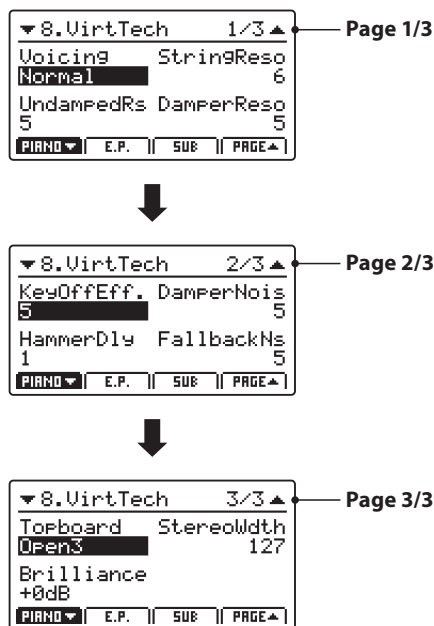

or

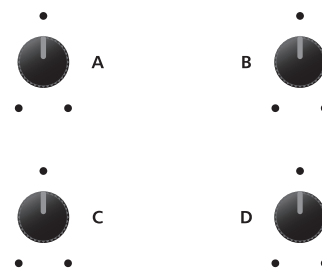

EXIT



Alternatively, turn the control knobs (A, B, C, D) to adjust the parameter assigned to that knob.

Press the EXIT button to return to the main EDIT menu.

2 E.PIANO section

The MP11SE's E.PIANO section features 12 different electric piano sounds arranged into TINE, REED, MODERN, and E.GRAND/CLAVI categories. Each electric piano sound has been lovingly sampled from original, vintage instruments (complete with imperfections), and can be enjoyed in their 'organic' form, or with analogue effects and amp/speaker simulations applied for added warmth and character.

■ E.PIANO section sounds

Category	No.	Sound Name	Description
TINE	1	Tine EP 1	A suitcase-type vintage tine electric piano.
	2	Tine EP 2	A suitcase-type vintage tine electric piano modified for a brighter, harder sound.
	3	Tine EP 3	A stage-type vintage tine electric piano.
REED	1	Reed EP 1	A highly playable vintage reed electric piano.
	2	Reed EP 2	A bright vintage reed electric piano.
	3	Reed EP 3	A warm vintage reed electric piano.
MODERN	1	Modern EP 1	An FM type electric piano.
	2	Modern EP 2	An FM type electric piano with a fuller sound.
	3	Modern EP 3	An FM type electric piano with a mellow sound.
E.GRAND / CLAVI	1	Electric Grand	An electric grand piano with a strong attack.
	2	Clavi 1	A funky keyboard sound with electric pick-ups.
	3	Clavi 2	A fatter sounding Clavi sound.

■ Feature Parameters: Amp Simulator & Virtual Technician

As explained on page 24, the E.PIANO section features a dedicated Amp Simulator to recreate the tonal character of various amplifier/speaker cabinets. In addition, the E.PIANO section's Virtual Technician includes parameters to adjust key-off behaviour.

■ Amp Simulator parameters

Please refer to page 25 for a full list of amp simulator parameters.

■ Virtual Technician parameters

Page	Knob	Parameter	Description	Value range
1	A	Key-off Noise	Adjust the volume of the noise heard when the keys are released.	OFF, 1 ~ 127
	B	Key-off Delay	Adjusts the delay time before the Key-off Noise is heard.	0 ~ 127

* For more detailed information about the E.PIANO section's Virtual Technician parameters, please refer to page 51.

■ Adjusting Virtual Technician parameters

Please refer to page 29 for a full explanation of how to enter the Virtual Technician menu and adjust parameters.

3 SUB section

The MP11SE's SUB section features 16 additional 'subsidiary' sounds arranged into STRINGS, PAD, HARPSI/MALLET, and BASS categories. These sounds are suitable for layering with PIANO or E.PIANO section sounds, or for assigning to keyboard splits/zone, but can of course be played independently if desired.

■ SUB section sounds

Category	No.	Sound Name	Description
STRINGS	1	String Ensemble	A natural string sound with a lush, open character.
	2	Beautiful Str.	A mellow string sound with slow attack and fine treble.
	3	String Pad	A typical synth strings pad with a soft texture.
	4	Warm Strings	A warm string sound with a muted treble.
PAD	1	Pad 1	A typical synth pad.
	2	Pad 2	A fatter synth pad, with a slow release and attack characteristics.
	3	Pad 3	A warm synth pad with a vocal quality.
	4	Pad 4	A lush, airy synth pad with bell and vocal characteristics.
HARPSI / MALLETT	1	Harpichord	A baroque period plucked instrument.
	2	Vibraphone	A percussive, tuned instrument played using mallets.
	3	Celesta	A metallic instrument with a soft timbre, played using a keyboard.
	4	Marimba	A percussive instrument with wooden bars, played using mallets.
BASS	1	Wood Bass	A large, low-pitched string instrument often used to accompany jazz.
	2	Finger Bass	A standard electric bass guitar with a clean tone.
	3	Fretless Bass	An electric bass guitar without frets.
	4	Wood Bass & Ride	A typical double bass combined with a ride cymbal.

■ Feature Parameters: Virtual Technician

When Harpsichord or Bass sounds are selected, the SUB section's Virtual Technician includes parameters to adjust key-off behaviour.

■ Virtual Technician parameters

Page	Knob	Parameter	Description	Value range
1	A	Key-off Noise	Adjust the volume of the noise heard when the keys are released.	OFF, 1 ~ 127
	B	Key-off Delay	Adjusts the delay time before the Key-off Noise is heard.	0 ~ 127

* The above parameters will only be available when a Harpsichord or Bass sound is selected.

* For more detailed information about the SUB section's Virtual Technician parameters, please refer to page 51.

■ Adjusting Virtual Technician parameters

Please refer to page 29 for a full explanation of how to enter the Virtual Technician menu and adjust parameter.

1 EQ


The EQ function consists of a 4-band graphic equaliser that can be used to shape the overall tone of the MP11SE's internal sound sections. Two of the mid-range frequency bands can also be adjusted as a parametric equaliser.

The equaliser setting is common to all internal sound sections.

■ Turning EQ ON or OFF

Press the EQ button to turn the MP11SE's equaliser ON or OFF.

The LED indicator for the EQ button will turn ON or OFF to indicate the current status of the equaliser.

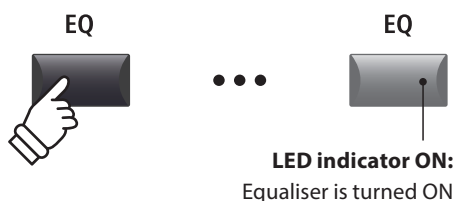


■ EQ parameters

Page	Knob	Parameter	Description	Value range
1	A	Low Gain	Adjusts the gain of the low range frequency band (20 ~ 100 Hz).	-10 dB ~ +10 dB
	B	High Gain	Adjusts the gain of the high range frequency band (5000 ~ 20000 Hz).	-10 dB ~ +10 dB
	C	Mid1 Gain	Adjusts the gain of the Mid1 frequency band (200 ~ 3150 Hz).	-10 dB ~ +10 dB
	D	Mid2 Gain	Adjusts the gain of the Mid2 frequency band (200 ~ 3150 Hz).	-10 dB ~ +10 dB
2	A	Mid1 Q	Adjusts the bandwidth of the Mid1 band.	0.5 ~ 4.0
	B	Mid2 Q	Adjusts the bandwidth of the Mid2 band.	0.5 ~ 4.0
	C	Mid1 Freq.	Adjusts the frequency of the Mid1 band.	200 Hz ~ 3150 Hz
	D	Mid2 Freq.	Adjusts the frequency of the Mid2 band.	200 Hz ~ 3150 Hz

■ Adjusting EQ parameters

Press and hold the EQ button.


The gain page of the EQ will be shown in the LCD display.

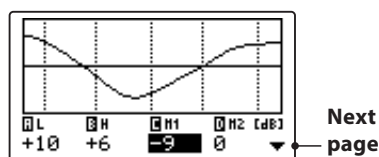

Press the CURSOR ◀▶ buttons to select the desired EQ parameter, then press the +/YES or -/NO buttons to increase or decrease the values.

Alternatively, turn the control knobs (A, B, C, D) to adjust the EQ parameter assigned to that knob.

* The F1~F4 buttons can also be used to select the desired EQ parameter. If the parameter is already selected, the F1~F4 buttons can be used to alternate between the gain and frequency pages of the EQ.

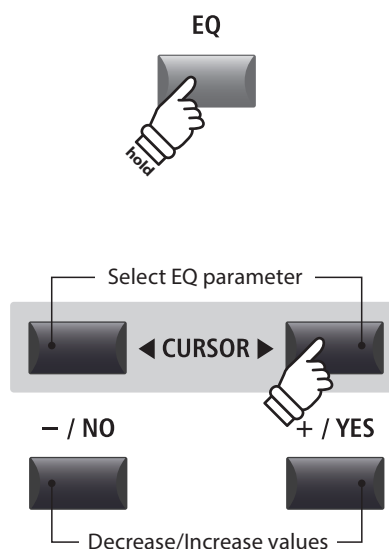


■ Adjusting EQ parameters (cont.)

While the gain page of the EQ is shown:


Press the CURSOR ▼ button.

The frequency page of the EQ will be shown in the LCD display.

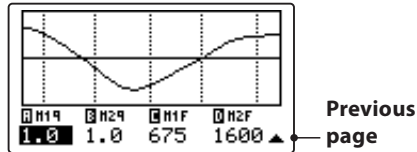

Press the CURSOR ◀▶ buttons to select the desired EQ parameter, then press the +/YES or -/NO buttons to increase or decrease the values.

Alternatively, turn the control knobs (A, B, C, D) to adjust the EQ parameter assigned to that knob.

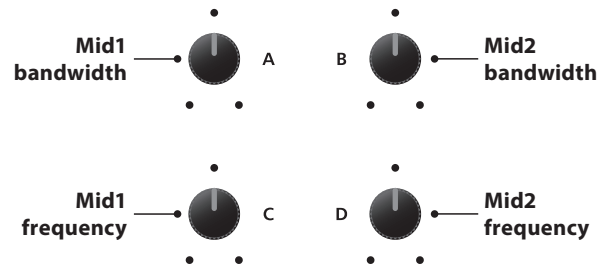

Press the EXIT button to return to the main playing screen.




■ Jump to EQ Offset shortcut

The EQ Offset is a SYSTEM parameter used to offset adjustments made by the EQ. The purpose of the EQ Offset is to allow a 'baseline' EQ to be applied independently of the EQ function, and therefore independently of the selected SETUP. EQ Offset must be enabled in the SYSTEM menu for this shortcut to function.

To jump to the EQ Offset screen, at any time:

Press and hold the EQ button, then press one of the F1~F4 buttons.

The EQ Offset screen will be shown in the LCD display.

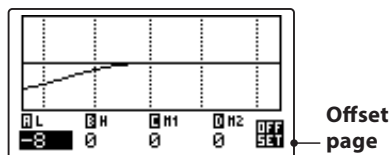


The EQ Offset parameters are adjustable in the same manner as the EQ gain parameters.

* The EQ Offset values will be added to the regular EQ values. The combined EQ values are limited to ± 10 dB.

Press the EXIT button to return to the EQ screen.

Press the EXIT button again to return to the main playing screen.

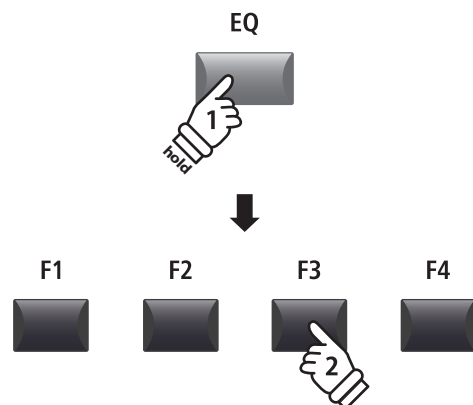

2 Transpose


The Transpose function allows the pitch of the MP11SE's keyboard to be raised or lowered in semi-tone steps. This is particularly useful when accompanying instruments tuned for different keys, or when a song learned in one key must be played in another key.

■ Turning Transpose ON or OFF

Press the TRANSPOSE button to turn the transpose function ON or OFF.

The LED indicator for the TRANSPOSE button will turn ON or OFF to indicate the current status of the transpose function.

* The previous transpose setting will be remembered after the transpose function is turned OFF, allowing rapid adjustment of the keyboard pitch.

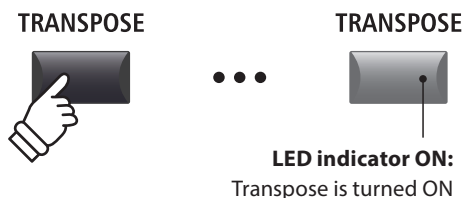

■ Checking the Transpose setting

Press and hold the TRANSPOSE button.

The current transpose setting will pop-up in the LCD display.


* The default value, 0, indicates no transposition.



■ Setting the Transpose value: Method 1

Press and hold the TRANSPOSE button, then press the +/YES or -/NO buttons to increase or decrease the transpose value in semi-tone steps.


* The TRANSPOSE value can be adjusted within the range of -24 ~ +24.

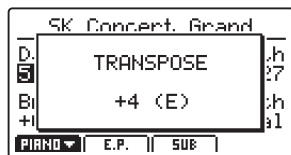

The LED indicator for the TRANSPOSE button will turn ON automatically to indicate that transpose is activated.

* To reset the transpose value to 0 (no transposition), press both the -/NO and +/YES buttons simultaneously.

* The transpose value will be stored to SYSTEM memory automatically, however the transpose ON/OFF state will not be stored.

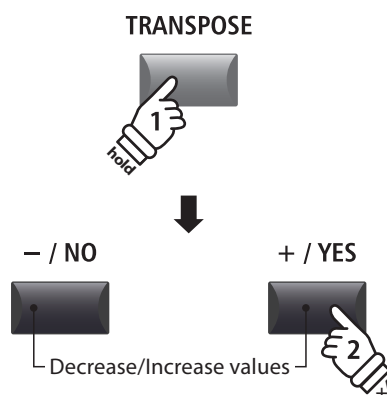

Example: To raise the keyboard pitch by 4 semi-tones, press and hold the TRANSPOSE button, then press the +/YES button four times.

■ Setting the Transpose value: Method 2

Press and hold the TRANSPOSE button, then press a key on the keyboard to the left or right of middle C.

The pressed key will become the new transpose key.


* The TRANSPOSE value can be adjusted within the range of -24 ~ +24.



The LED indicator for the TRANSPOSE button will turn ON automatically to indicate that transpose is activated.

* To reset the transpose value to 0 (no transposition), press both the -/NO and +/YES buttons simultaneously.

* The transpose value will be stored to SYSTEM memory automatically, however the transpose ON/OFF state will not be stored.

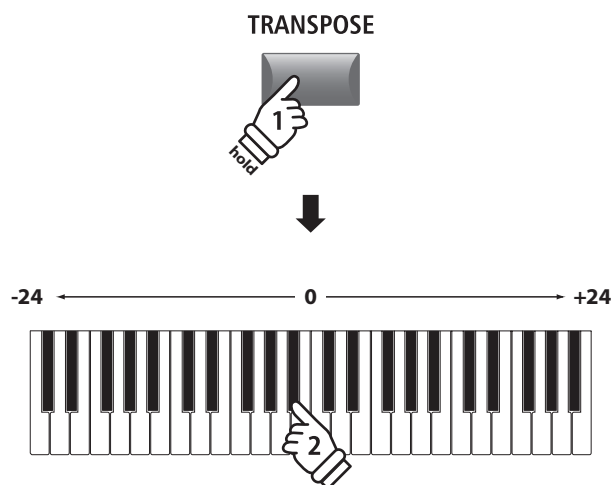

Example: To lower the keyboard pitch by 2 semitones, press and hold the TRANSPOSE button, then press the B^b key closest to the middle C key.

MIDI OUT Section


The MP11SE's MIDI OUT section features four independently adjustable zones that can be used to control external MIDI devices. MIDI channels can be assigned to each zone, then adjusted using the four real-time control knobs. By default, each zone will utilise all 88 keys of the keyboard, however as with the internal sound sections, it is possible to create upper/lower splits or specify a key range between two defined keys.

Turning a Zone ON or OFF


Press a ZONE button to turn each Zone ON or OFF.

The LED indicator for the pressed ZONE button will turn ON or OFF to indicate the current status of the Zone.

The active Zones and assigned MIDI channels will be shown in the LCD display.

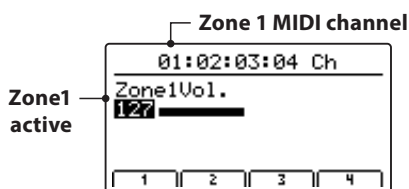

This is the MIDI zone volume screen, and will be shown automatically whenever a zone is turned ON or OFF.

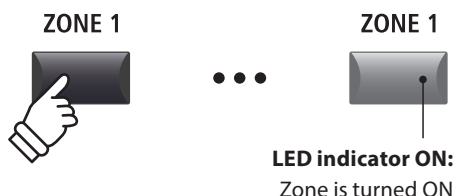

Example: To turn on (activate) Zone1, press the ZONE1 button.



* By default Zone1~4 will be assigned MIDI channels 01, 02, 03, and 04 respectively. For information about changing the MIDI channel assigned to each zone, please refer to page 54.

Adjusting Zone volumes

When a Zone is turned on and the MIDI zone volume screen is shown:

Turn the control knobs (A, B, C, D) to adjust the volume of the zone assigned to that knob.

* Zone volumes can be adjusted within the range 0~127.

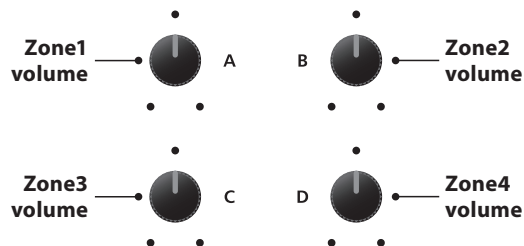
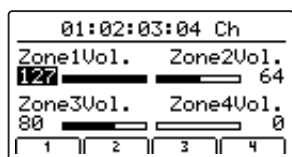


* It is also possible to adjust zone volumes by pressing the CURSOR buttons to select the desired zone, then pressing the -/NO or +/YES buttons to decrease or increase values.

Toggling between internal sections and MIDI zones

Press the INT/MIDI button to toggle between showing the internal sections and MIDI zone volumes in the LCD display.

INT / MIDI

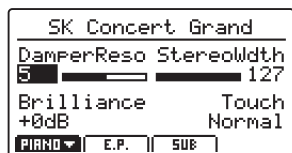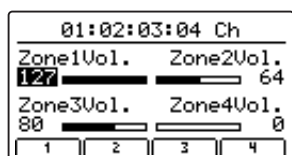


■ Adjusting Zone parameters (MIDI control change)

From the MIDI zone volume screen:

Press one of the F1~F4 buttons.


The first page of MIDI control change for the selected zone will be shown in the LCD display.

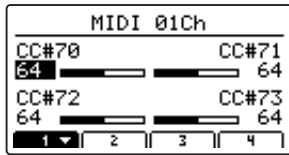

Turn the control knobs (A, B, C, D) to adjust the MIDI control change parameters assigned to that knob.

* For information about changing the MIDI control change parameters assigned to each control knob, please refer to page 59.

* When a zone is selected, pressing the F1~F4 button corresponding to that zone will toggle between the first and second pages of parameters.

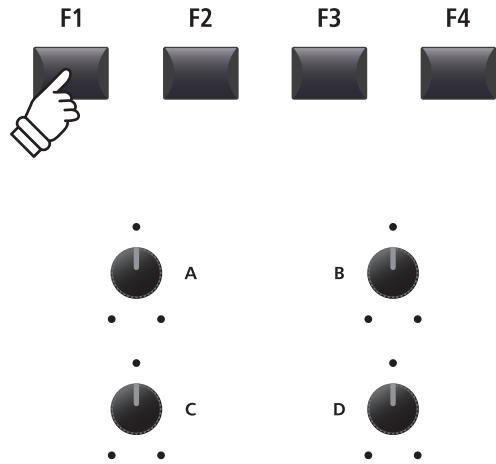


* It is also possible to adjust parameters by pressing the CURSOR buttons to select the desired parameter, then pressing the -/NO or +/YES buttons to decrease or increase values.


■ Adjusting the Zone key range

Press and hold a ZONE button, press the desired top key, and then the desired bottom key of the keyboard.

The names of the pressed top and bottom keys will be shown in the LCD display, and will become the new key range for the selected zone.

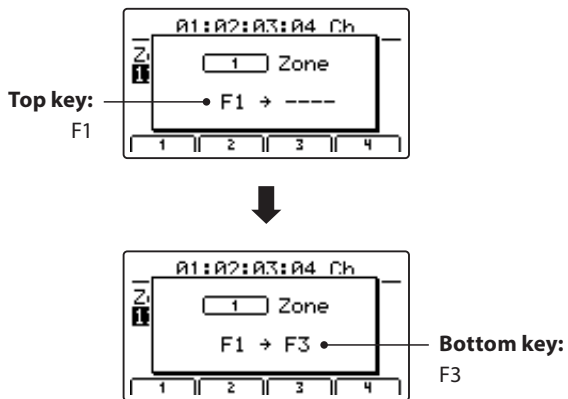

* To reset the key range back to all 88 keys (Full Keyboard), press and hold a zone button, then press the topmost and bottommost keys.

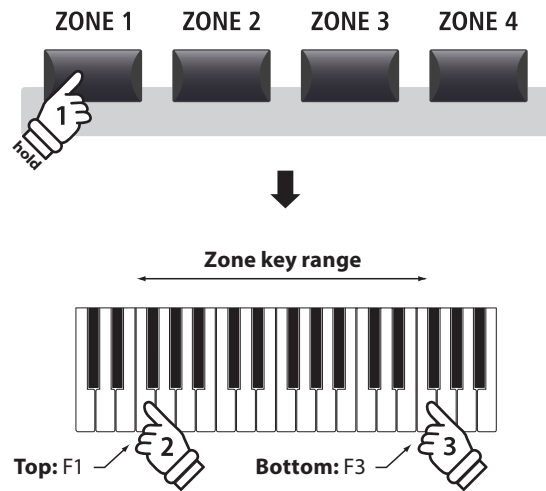


Example: To set the Zone1 key range between key F1 and F3, press and hold the ZONE1 button, press the F1 key, and then press the F3 key.

■ LOCAL OFF button

Press the LOCAL OFF button to disable the connection between the MP11SE's keyboard and internal tone generator.

The LED indicator for the LOCAL OFF button will turn ON or OFF to indicate the current status of the LOCAL OFF function.

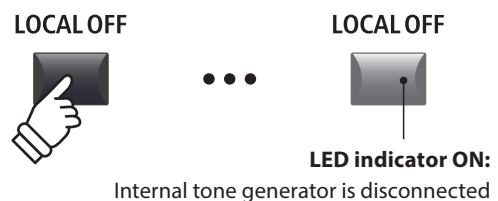

Overview of the EDIT Menu (PIANO, E.PIANO, SUB)

The EDIT menu contains various parameters that can be used to adjust the MP11SE's internal sound sections. The parameters are grouped by category, allowing close control over the instrument with just a few button presses.

* The EDIT menu can also be used to adjust parameters of the MIDI OUT section. For more information, please refer to page 54.

This collection of parameters, together with other adjustable settings, can be stored as a SETUP memory (page 61). The MP11SE provides 26 banks x 8 setups, for a total of 208 user programmable SETUP memories.

About Common parameters (🔑 icon)

Unless stated, parameter settings for the PIANO, E.PIANO, and SUB sound sections are independent for each section. However, parameters marked with a 🔑 icon are common for all three sound sections. For example, changing the 🔑 Reverb Type parameter for the PIANO section will automatically change the 🔑 Reverb Type parameter for the E.PIANO, and SUB sections. Moreover, the 🔑 Split Point parameter is unique in that it is common for all three sound sections and four MIDI zones.

PIANO/E.PIANO/SUB section parameters

No.	Category	Parameters
1	REVERB	🔑Type, 🔑Pre Delay, 🔑Time, Depth
2	EFX	Category, Type, Parameters (prm1~prm10, depending on EFX type)
	AMP	Amp Type, Drive, Level, Amp EQ Lo, Amp EQ Mid, Amp EQ Hi, Mid Freq., Mic Type, Mic Position, Ambience
3	Sound	🔑Master Volume, Panpot, Filter Cut-off, Filter Resonance, DCA Attack Time, DCA Decay Time, DCA Sustain Level, DCA Release Time, DCF Attack Time, DCF Attack Level, DCF Decay Time, DCF Sustain Level, DCF Release Time, DCF Touch Depth, DCA Touch Depth, Vibrate Depth, Vibrate Rate, Vibrate Delay, Octave Layer Switch, Octave Layer Level, Octave Layer Range, Octave Layer Detune, Layer Vocal, Layer Bell, Layer Air
4	Tuning	Fine Tune, Stretch Tuning, Temperament, Key of Temperament
5	Key Setup	Touch Curve, Dynamics, Key Volume, Minimum Touch, Octave Shift, Zone Transpose, Key Scaling Damping, Key Scaling Key, Key Range Type, 🔑Split Point, Key Range Zone Lo, Key Range Zone Hi
6	Controllers	Right Pedal, 🔑Right Pedal Assign, Damper Pedal Mode, Center Pedal, 🔑Center Pedal Assign, Left Pedal, 🔑Left Pedal Assign, Pitch Bend, Pitch Bend Range, Soft Pedal Depth, Modulation Wheel, Modulation Wheel Assign, Modulation Depth Range, Foot Switch Pedal, 🔑Foot Switch Pedal Assign, Expression Pedal, 🔑Expression Pedal Assign
7	Knob Assign	Knob A Assign, Knob B Assign, Knob C Assign, Knob D Assign, Knob2 A Assign, Knob2 B Assign, Knob2 C Assign, Knob2 D Assign
8	Virtual Technician	PIANO: Voicing, String Resonance, Undamped Resonance, Damper Resonance, Key-off Effect, Damper Noise, Hammer Delay, Fall-back Noise, Topboard, Stereo Width, Brilliance
		E.PIANO/SUB*: Key-off Noise, Key-off Delay

* SUB section Virtual Technician parameters applicable to Harpsichord and Bass sounds only.

Entering the EDIT Menu

When either the PIANO, E.PIANO, or SUB section is selected:

Press the EDIT button.

The LED indicator for the EDIT button will turn ON, and the Edit Menu for the selected section will be shown in the LCD display.





* To change the selected sound section, press the F1~F3 buttons.

■ Selecting the parameter category

After entering the EDIT Menu:

Press the CURSOR buttons to select the desired category, then press the +/YES button to enter the selected category.

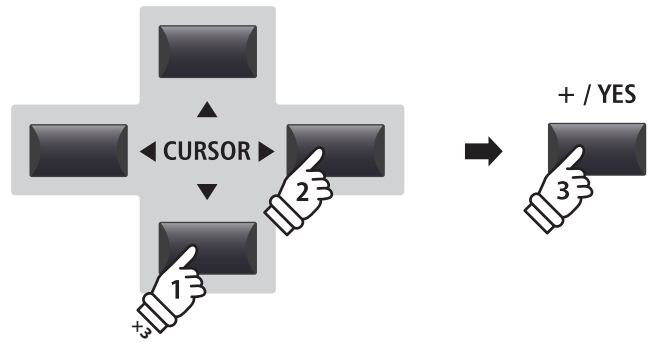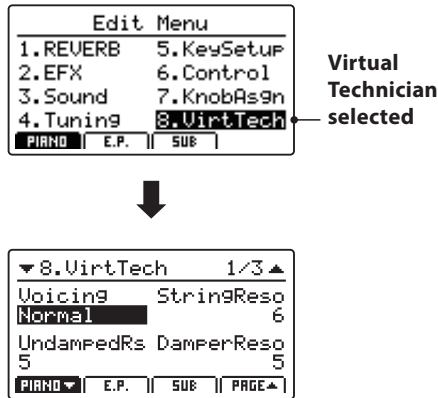

Example: To enter the Virtual Technician category, press the CURSOR▼ button three times and the CURSOR► button once, then press the +/YES button.


■ Adjusting parameters

After selecting the parameter category:

Turn the four control knobs (A, B, C, D) to adjust the parameters assigned to those knob.

Parameters can also be adjusted by using the CURSOR buttons to move the selection cursor, and +/YES or -/NO buttons to increase or decrease the value of the selected parameter.

Press the EXIT button to exit the parameter category, or return to the Play Mode screen.

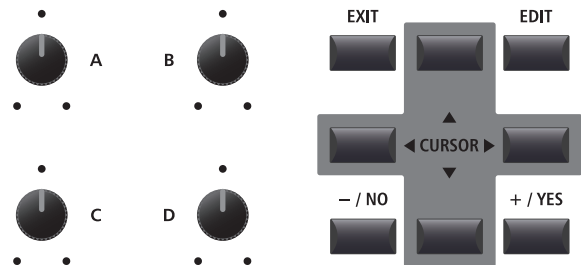

⚠ Parameter adjustments made to the selected sound will be lost upon selecting another sound.
 * To store the adjusted sound, use the STORE button (page 60).


■ Quick Compare function

The Quick Compare function allows any sound being adjusted to be compared 'on the fly' with the previously stored (i.e. preset) sound.

While in EDIT mode:


Press the variation button of the sound that is being adjusted.

The LED for the variation button will start to flash, and the keyboard will play the previously stored sound.

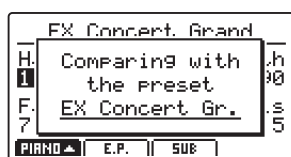

Press the variation button again.

The LED for the variation button will stop flashing, turn ON, and the keyboard will return to playing the adjusted sound.

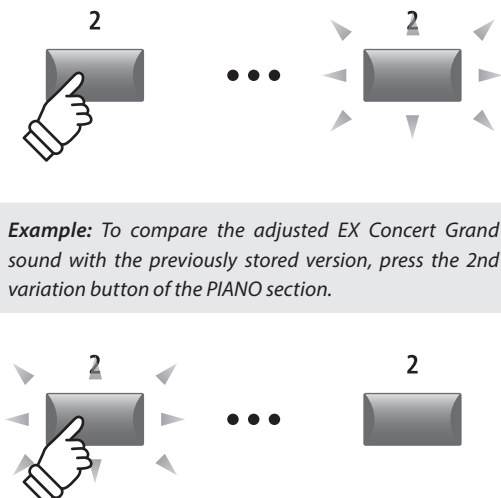

Example: To compare the adjusted EX Concert Grand sound with the previously stored version, press the 2nd variation button of the PIANO section.

EDIT Menu parameters (PIANO, E.PIANO, SUB)

1 Reverb

1. Type

6 TYPES

This parameter selects the reverb type.

* For more information about reverb, please refer to page 22.

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

2. Pre Delay

VALUE: 0 ~ 200 MS

This parameter adjusts the delay time before the start of the reverberation.

* For more information about reverb, please refer to page 22.

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

3. Time

VALUE: 300 MS ~ 10.0 S

This parameter adjusts the reverb time.

* For more information about reverb, please refer to page 22.

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

4. Depth

VALUE: 0 ~ 127

This parameter adjusts the reverb depth.

* For more information about reverb, please refer to page 22.

2.1 EFX

1. Category

23 CATEGORIES

This parameter selects the effect category.

* For more information about effects, please refer to page 23.

* The E.PIANO section lists two pages for EFX1 and EFX2.

2. Type

129 TYPES

This parameter selects the effect type.

* For more information about effects, please refer to page 23.

* The E.PIANO section lists two pages for EFX1 and EFX2.

3. Parameters

N/A

These parameters change depending on the selected EFX type, and are used to adjust the mixing amount of the effected (wet) and bypassed (dry) sound, depth, speed, feedback, etc.

* For more information about effects, please refer to page 23.

2.2 Amp Simulator (E.PIANO)

1. Amp Type

5 TYPES

This parameter selects the simulated amplifier type.

* For more information about the various Amp Simulator model types, please refer to page 24.

3. Level

VALUE: 0 ~ 127

This parameter adjusts the volume of the simulated amplifier.

* For more information about the Amp Simulator, please refer to page 24.

4. Amp EQ Lo

VALUE: -10 dB ~ +10 dB

This parameter adjusts the level of the low frequencies of the simulated amplifier.

* This parameter functions independently of the global EQ.

* For more information about the Amp Simulator, please refer to page 25.

6. Amp EQ Hi

VALUE: -10 dB ~ +10 dB

This parameter adjusts the level of the high frequencies of the simulated amplifier.

* For more information about the Amp Simulator, please refer to page 25.

* This parameter functions independently of the global EQ.

8. Mic Type

CONDENSER, DYNAMIC

This parameter selects the type of microphone used for the simulated amplifier.

Mic Type	Description
Condenser	A microphone with a very broad frequency response that is typically found in studios.
Dynamic	A microphone with a more limited frequency response that is typically used for live playing.

* For more information about the Amp Simulator, please refer to page 25.

10. Ambience

VALUE: 0 ~ 127

This parameter adjusts the level (mix ratio) of an additional set of stereo microphones, that are placed away from the simulated amplifier in order to capture the ambient sound within a room.

* For more information about the Amp Simulator, please refer to page 25.

2. Drive

VALUE: 0 ~ 127

This parameter adjusts the amount of overdrive produced by the simulated amplifier.

* For more information about the Amp Simulator, please refer to page 24.

5. Amp EQ Mid

VALUE: -10 dB ~ +10 dB

This parameter adjusts the level of the mid frequencies of the simulated amplifier.

* This parameter functions independently of the global EQ.

* For more information about the Amp Simulator, please refer to page 25.

7. Mid Frequency

VALUE: 200 Hz ~ 3150 Hz

This parameter adjusts the mid frequency band of the simulated amplifier, levelled by the Amp EQ Mid parameter.

* For more information about the Amp Simulator, please refer to page 25.

* This parameter functions independently of the global EQ.

9. Mic Position

ON AXIS, OFF AXIS

This parameter selects the position of the microphone used for the simulated amplifier.

Mic Position	Description
On Axis	The microphone is placed in the centre of the speaker, producing a direct, aggressive sound with strong high/mid range.
Off Axis	The microphone is placed to the side of the speaker, producing a smoother and more ambient sound.

* For more information about the Amp Simulator, please refer to page 25.

3 Sound

1. **Master Volume**

VALUE: 0 ~ 127

This parameter adjusts the total SETUP volume. This parameter is used to adjust the balance among each stored SETUPS (page 61).

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

3. **Filter Cut-off**

VALUE: -64 ~ +63

This parameter adjusts the frequency of the cut-off. Raising the cut-off level increases the brightness of the sound, while lowering the cut-off level results in a duller sound.

5. **DCA Attack Time**

VALUE: -64 ~ +63

This parameter adjusts the length of the attack. Higher values increase the attack time, resulting in a longer, slower attack for the selected sound.

7. **DCA Sustain Level**

VALUE: -64 ~ +63

This parameter adjusts the volume level of the sustain heard while the key is held for the selected sound.

9. **DCF Attack Time**

VALUE: -64 ~ +63

This parameter adjusts the length of the filter's attack. Higher values increase the attack time, resulting in a longer, slower attack for the filter.

11. **DCF Decay Time**

VALUE: -64 ~ +63

This parameter adjusts the length of the decay from peak level to sustain level for the filter.

13. **DCF Release Time**

VALUE: -64 ~ +63

This parameter adjusts the amount of time required for the filter to fade out after the keys are released.

15. **DCA Touch Depth**

VALUE: -64 ~ +63

This parameter adjusts how much the velocity affects the amplitude envelope depth.

2. **Panpot**

VALUE: L64 ~ R63

This parameter adjusts the left/right position of the selected sound within the stereo field.

4. **Filter Resonance**

VALUE: -64 ~ +63

This parameter adjusts the amount of the harmonic overtone around the cut-off frequency for the selected sound.

6. **DCA Decay Time**

VALUE: -64 ~ +63

This parameter adjusts the length of the decay from peak level to sustain level for the selected sound.

8. **DCA Release Time**

VALUE: -64 ~ +63

This parameter adjusts the amount of time required for the sound to fade out after the keys are released for the selected sound.

10. **DCF Attack Level**

VALUE: -64 ~ +63

This parameter adjusts the level of the filter's attack.

12. **DCF Sustain Level**

VALUE: -64 ~ +63

This parameter adjusts the level of the filter's sustain heard while the key is held for the selected sound.


14. **DCF Touch Depth**

VALUE: -64 ~ +63

This parameter adjusts how much the velocity affects the filter envelope depth.

■ About DCA Parameters

The DCA (Digitally Controlled Amplifier) parameters, are used to adjust the volume level of a sound over time using an envelope. The diagram below indicates the MP11SE's DCA parameters.

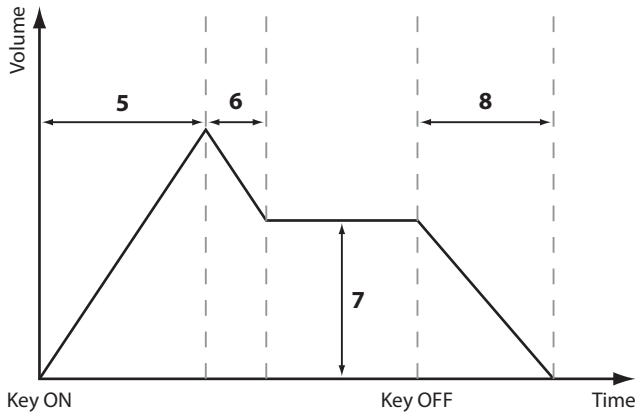

16. Vibrate Depth

VALUE: -64 ~ +63

This parameter adjusts the depth of the vibration applied to the selected sound.

18. Vibrate Delay

VALUE: -64 ~ +63

This parameter adjusts the delay time before the start of the vibration.

19. Octave Layer Switch

OFF, ON

This parameter turns the additional Octave Layer ON or OFF.

21. Octave Layer Range

VALUE: -2 ~ +2

This parameter sets the amount of octave transposition for the Octave Layer.

23. Layer Vocal

VALUE: -3 ~ +3

This parameter adjusts the amount of Vocal sound that is added to the selected sound.


25. Layer Air

VALUE: OFF, 1 ~ 127

This parameter adjusts the amount of Air sound that is added to the selected sound.

■ About DCF Parameters

The DCF (Digitally Controlled Filter) parameters, are used to adjust a low-pass filter applied to the sound over time. The diagram below indicates the MP11SE's DCF parameters.

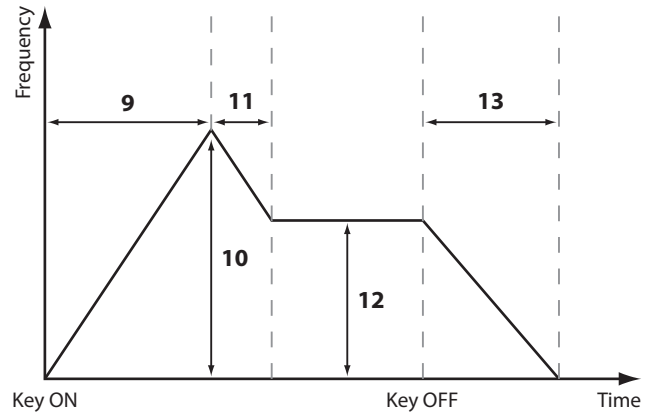

17. Vibrate Rate

VALUE: -64 ~ +63

This parameter adjusts the speed of the vibration applied to the selected sound.

20. Octave Layer Level

VALUE: 0 ~ 127

This parameter adjusts the volume level of the Octave Layer.

22. Octave Layer Detune

VALUE: -64 ~ +63

This parameter adjusts the tuning of the Octave Layer.

24. Layer Bell

VALUE: OFF, 1 ~ 127

This parameter adjusts the amount of Bell sound that is added to the selected sound.

4 Tuning

1. Fine Tune

VALUE: -64 ~ +63

This parameter adjusts the tuning of the selected sound for values smaller than a semi-tone.

2. Stretch Tuning

9 TYPES + 5 USER

This parameter selects the level of stretch tuning.

The human ear typically detects high and low frequencies less accurately than those frequencies within the middle range. The tuning of an acoustic piano is therefore 'stretched' to compensate, ensuring that the sound will be heard more naturally to the ears.

* For information about creating User Stretch Tuning, please refer to the User Edit explanation in the SYSTEM menu chapter (page 109).

3. Temperament

7 TYPES + 2 USER

This parameter selects the tuning system of the selected sound.

* For information about creating User Temperaments, please refer to the User Edit explanation in the SYSTEM menu chapter (page 107).

4. Key of Temperament

RANGE: C ~ B

This parameter selects the key of the selected temperament. When using a temperament other than Equal Temperament, use this setting to specify the key signature of the piece.

* This parameter will only affect the 'balance' of the tuning system, the pitch of the keyboard will remain unchanged.

■ Temperament types

Temperament type	Description
Equal Temperament (Equal)	This is the most popular tuning method that divides the scale into twelve equal semi-tones. This produces the same chordal intervals in all twelve keys, and has the advantage of limitless modulation of the key. However, the tonality of each key becomes less characteristic and no chord is in pure consonance.
Pure Temperament (Pure Maj./Pure Min.)	This temperament, which eliminates dissonances for thirds and fifths is still popular for choral music because of its perfect harmony. When playing in a major key select 'Pure Maj' and when playing in a minor key select 'Pure Min'.
Pythagorean Temperament (Pythagorean)	This temperament, which uses mathematical ratios to eliminate dissonance for fifths, is very limited for use with chords, but it produces very characteristic melodic lines.
Meantone Temperament (Meantone)	This temperament, which uses a mean between a major and minor whole tone to eliminate dissonance for thirds, was devised to eliminate the lack of consonances experienced with certain fifths for the Mersenne pure temperament. It produces chords that are more beautiful than those with the equal temperament.
Werkmeister III Temperament (Werkmeis) Kirnberger III Temperament (Kirnberg)	These two temperaments are placed in between Meantone and Pythagorean. For music with few accidentals, this temperament produces the beautiful chords of the mean tone, but as accidentals increase, the temperament produces the characteristic melodies of the Pythagorean temperament. They are used primarily for classical music written in the Baroque era to revive the original characteristics.
User Temperament (Sys.User1/2)	User defined temperament created by raising or lowering the pitch for each semi-tone.

* For information about creating User Temperaments, please refer to the User Edit explanation in the SYSTEM menu chapter (page 107).

5 Key Setup

1. Touch Curve

6 TYPES + 5 USER

This parameter selects the touch response curve of the keyboard for the selected sound.

* For information about creating User Touch Curves, please refer to the User Edit explanation in the SYSTEM menu chapter (page 106).

2. Dynamics

VALUE: OFF, 1 ~ 10

This parameter adjusts the keyboard response (velocity compression) of the selected sound independently of the touch curve.

When the value is 10 (default), the keyboard response is normal. As the value decreases the keyboard response gradually becomes less dynamic, and when set to OFF becomes completely flat (i.e. fixed touch response).


Touch Curve types

Touch Curve	No.	Description
Light +	1	Requires less striking force to achieve a forte note. * This touch curve is intended for players with a very delicate touch.
Light	2	A louder volume is produced even when playing with a soft touch. * This touch curve is intended for players who are still developing finger strength.
Normal	3	Reproduces the standard touch sensitivity of a typical acoustic piano.
Heavy	4	Requires a heavier touch to produce a loud volume. * This touch curve is intended for players with stronger fingers.
Heavy +	5	Requires considerably more striking force to achieve a loud volume.
Off (constant)	6	A constant volume is produced regardless of how hard the keys are struck. * This touch curve is intended for playing sounds of instruments that have a fixed dynamic range (e.g. harpsichord).
User* (User 1~User 5)	-	A custom touch curve, created to suit an individual's personal playing style.

* For information about creating User touch curves, please refer to the User Edit explanation in the SYSTEM menu chapter (page 106).


Touch Curve graph

The illustration below provides a visual representation of the different Touch Curve types.

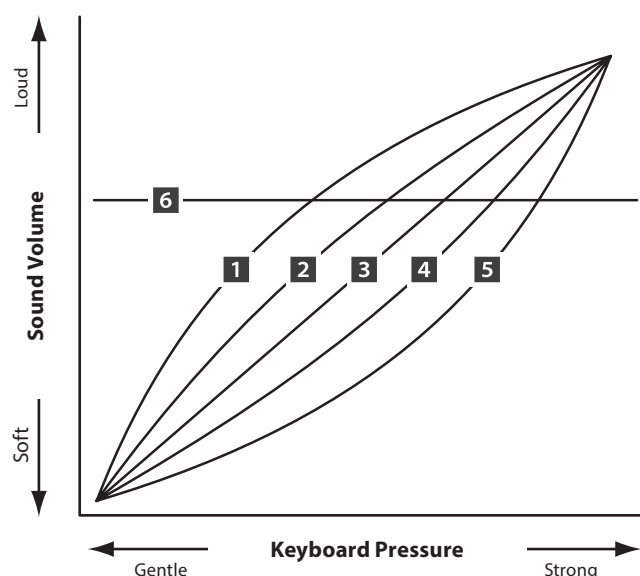

Dynamics graph

The illustration below provides a visual representation of the Dynamics parameter.

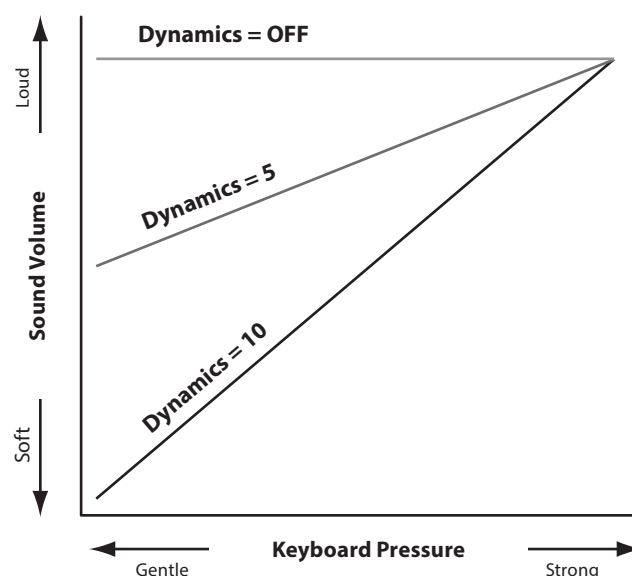

5 Key Setup (cont.)

3. Key Volume

5 TYPES + 5 USER

This parameter selects the Key Volume setting for the selected sound section, if desired.

Key Volume	Description
Normal (default)	An evenly balanced volume throughout the keyboard.
High Damping	Gradually reduces the volume of the keyboard towards the treble region.
Low Damping	Gradually reduces the volume of the keyboard towards the bass region.
High & Low Damping	Gradually reduces the volume of the keyboard in both the treble and bass regions.
Center Damping	Gradually reduces the volume of the keyboard in the central region.
User	A custom keyboard volume, allowing the volume of each key to be individually adjusted.

* For information about creating User Key Volumes, please refer to the User Edit explanation in the SYSTEM menu chapter (page 108).

7. Key Scaling Damping

ON, OFF

This parameter determines whether or not damping (velocity reduction) should be applied to a sound over a specific range.

This parameter may be useful when layering a piano sound with a strings sound, in order to reduce the level of the strings in the higher key range.

9. Key Range Type

OFF, UPPER, LOWER, ZONE

This parameter selects the Key Range type for the selected section.

Type	Description
Off	The sound is used for all 88 keys of the keyboard.
Upper	The sound is used for the upper split.
Lower	The sound is used for the lower split.
Zone	The sound is used for a defined zone between two keys.

* This parameter is not stored to SOUND but to SETUP only.

11. Key Range Zone Lo

RANGE: A0 ~ C8

This parameter defines the bottom key of the key range zone.

* For more information about Key Range functions, please refer to page 26.

* This parameter is not stored to SOUND but to SETUP only.

4. Minimum Touch

VALUE: 1 ~ 20

This parameter adjusts the minimum key velocity required to produce a sound.

5. Octave Shift

VALUE: -3 ~ +3 OCTAVES

This parameter adjusts the amount of octave transposition for the selected sound.

* This parameter is not stored to SOUND but to SETUP only.

6. Zone Transpose

VALUE: -12 ~ +12

This parameter adjusts the amount of transposition for the selected sound.

* This parameter is not stored to SOUND but to SETUP only.

8. Key Scaling Key

RANGE: A0 ~ C8

This parameter defines the point on the keyboard from which Key Scaling Damping should be applied, up to the highest key.

10. Split Point

RANGE: A0 ~ C8

This parameter defines the point on the keyboard at which the upper and lower parts are divided.

* For more information about Key Range functions, please refer to page 26.

* This parameter is common for all three sound sections and all MIDI zones.

* This parameter is not stored to SOUND but to SETUP only.

12. Key Range Zone Hi

RANGE: A0 ~ C8

This parameter defines the top key of the key range zone.

* For more information about Key Range functions, please refer to page 26.

* This parameter is not stored to SOUND but to SETUP only.

6 Controllers

1. Right Pedal

ON, OFF

This parameter determines whether or not the right pedal of the GFP-3 pedal unit is active for the selected section.

* This parameter is not stored to SOUND but to SETUP only.

3. Damper Pedal Mode

NORMAL, HOLD

This parameter determines whether or not the damper pedal should sustain sounds indefinitely without decay.

4. Center Pedal

ON, OFF

This parameter determines whether or not the centre pedal of the GFP-3 pedal unit is active for the selected section.

* This parameter is not stored to SOUND but to SETUP only.

6. Left Pedal

ON, OFF

This parameter determines whether or not the left pedal of the GFP-3 pedal unit is active for the selected section.

* This parameter is not stored to SOUND but to SETUP only.

8. Pitch Bend

ON, OFF

This parameter determines whether or not the pitch bend wheel is active for the selected section.

10. Soft Pedal Depth

VALUE: 1 ~ 10

This parameter adjusts the effectiveness (i.e. depth/strength) of the soft pedal.

11. Modulation Wheel

ON, REVERSE, OFF

This parameter determines whether or not the modulation wheel is active for the selected section.

When set to 'Reverse', the wheel's output values will be inverted.

2. Right Pedal Assign

18 FUNCTIONS (PIANO, SUB)
28 FUNCTIONS (E.PIANO)

This parameter selects the function assigned to the right pedal of the GFP-3 pedal unit.

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

5. Center Pedal Assign

This parameter selects the function assigned to the centre pedal of the GFP-3 pedal unit.

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

7. Left Pedal Assign

18 FUNCTIONS (PIANO, SUB)
28 FUNCTIONS (E.PIANO)

This parameter selects the function assigned to the left pedal of the GFP-3 pedal unit.

* This parameter is common for all three sound sections.

* This parameter is not stored to SOUND but to SETUP only.

9. Pitch Bend Range

VALUE: 0 ~ 7

This parameter sets the range of the pitch bend wheel in semi-tone steps.

* The range differs for the internal sound (0 ~7) and MIDI (0~12) sections.

12. Modulation Wheel Assign

18 FUNCTIONS (PIANO, SUB)
28 FUNCTIONS (E.PIANO)

This parameter selects the function assigned to the MP11SE's modulation wheel.

6 Controllers (cont.)

13. Modulation Depth Range VALUE: 0 ~ 127

This parameter sets the range of the pitch modulation function in steps of 600/127 cents.

14. Foot Switch Pedal ON, OFF

This parameter determines whether or not the foot switch pedal (if connected) is active for the selected section.

- * For more information about connecting pedals, please refer to page 18.
- * This parameter is not stored to SOUND but to SETUP only.

16. Expression Pedal ON, REVERSE, OFF

This parameter determines whether or not the expression pedal (if connected) is active for the selected section.

When set to 'Reverse', the pedal's output values will be inverted.

- * For more information about connecting pedals, please refer to page 18.
- * This parameter is not stored to SOUND but to SETUP only.

15. Foot Switch Pedal Assign 18 FUNCTIONS (PIANO, SUB) 28 FUNCTIONS (E.PIANO)

This parameter selects the function assigned to the foot switch pedal (if connected).

- * This parameter is common for all three sound sections.
- * For more information about connecting pedals, please refer to page 18.
- * This parameter is not stored to SOUND but to SETUP only.

17. Expression Pedal Assign 18 FUNCTIONS (PIANO, SUB) 28 FUNCTIONS (E.PIANO)

This parameter selects the function assigned to the expression pedal (if connected).

- * This parameter is common for all three sound sections.
- * For more information about connecting pedals, please refer to page 18.
- * This parameter is not stored to SOUND but to SETUP only.

■ Assignable pedal/modulation wheel functions

Function
Modulation
Panpot
Expression

Function
Damper
Sostenuto
Soft

Function
Resonance
Cut-off
EFX Parameter 1 ~ 10 (PIANO, SUB)
EFX1 Parameter 1 ~ 10, EFX2 Parameter 1 ~ 10 (E.PIANO)

7 Knob Assign



The Knob Assign screen is used to assign EDIT menu parameters to the four main control knobs A, B, C, and D for direct, real-time adjustment in Play Mode. Two groups of knob parameters (primary and secondary) can be assigned to each of the PIANO, E.PIANO, and SUB sections, providing extensive control over the selected sounds.

■ Assigning parameters to each knob



Enter the Knob Assign screen for the desired section.

Turn the four control knobs (A, B, C, D) to specify which parameter should be assigned to each control knob in Play Mode.

Parameters can also be assigned by using the CURSOR buttons to move the selection cursor, and +/-YES or -/NO buttons to cycle through the available parameters.

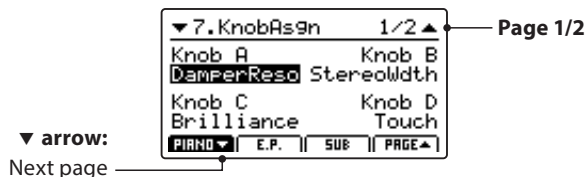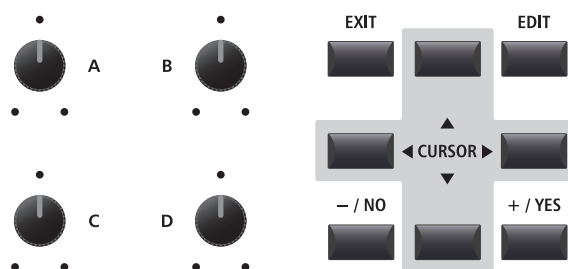

Press the F1~F3 buttons (depending on the selected section) or CURSOR ▲▼ buttons to show the secondary group of knob parameters in the LCD display.

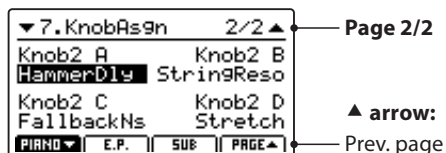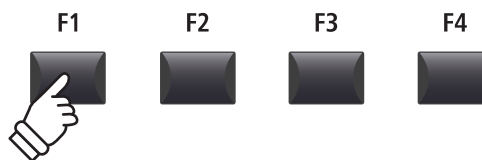

* Assignable parameters differ slightly for each sound section. For a full list of assignable parameters, please refer to the page 141.



* For more information about adjusting parameters in Play Mode, please refer to page 21.

■ About EFX parameter placeholder names (EFX Para1~10)

Some EFX offer a wide range of available parameters, while others are less flexible and feature fewer adjustable parameters. When assigning EFX parameters to the four control knobs, the names of the available parameters for the selected EFX (e.g. Wah:LowEQ) will be shown.


If the selected EFX features a smaller number of available parameters, a placeholder name (e.g. 'EFX Para 5') will be substituted in the Knob Assign menu, and the knob will become inactive in the main play screen.

Knob Assign screen
ClassichTch Wah selected,
LowEQ parameter assigned
to control knob D.

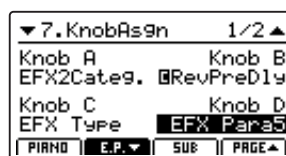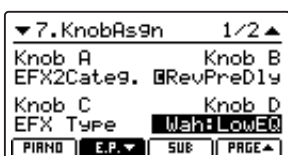

Knob Assign screen
LpfPd1 Wah selected, control
knob D changes to EFX
Para5 parameter
(i.e. inactive).

Play screen
ClassichTch Wah selected,
control knob D shows
Wah:LowEQ parameter.

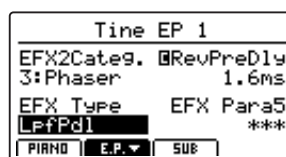

Play screen
LpfPd1 Wah selected, control
knob D changes to EFX
Para5 (i.e. inactive).

8 Virtual Technician (PIANO section)

1. Voicing

6 TYPES + 5 USER

This parameter attempts to recreate the technique of adjusting the action, hammers and strings of an acoustic piano, allowing the tonal character and dynamics of the MP11SE's piano sounds to be dramatically altered.

Voicing types

Voicing Type	Description
Normal	The normal tonal character of an acoustic piano throughout the entire dynamic range.
Mellow 1	A softer, more mellow tonal character throughout the entire dynamic range.
Mellow 2	An even softer tonal character than Mellow 1.
Dynamic	A tonal character that changes dramatically from mellow to bright, depending on the strength of key strike.
Bright 1	A bright tonal character throughout the entire dynamic range.
Bright 2	An even brighter tonal character than Bright 1.
User	A custom tonal character, allowing each key to be individually voiced.

* For information about creating User Voicing, please refer to the User Edit explanation in the SYSTEM menu chapter (page 110).

2. String Resonance

VALUE: OFF, 1 ~ 10

This parameter adjusts the volume of the string resonance.

String Resonance refers to a phenomenon that exists in acoustic pianos whereby the strings of held notes resonate 'sympathetically' with other notes of the same harmonic series.

3. Undamped Resonance

VALUE: OFF, 1 ~ 10

This parameter adjusts the volume of the undamped resonance.

The dampers of an acoustic piano span almost the full width of the keyboard. However, the topmost 18 keys (approximately 1.5 octaves) do not incorporate dampers, as the shorter strings for these treble notes decay quickly and therefore do not need to be dampened. As a result, the strings of these 'undamped' treble notes are free to vibrate in sympathetic resonance with those of lower keys – independently of the damper pedal position – helping to enrich the sound with additional harmonics and tonal colour.

4. Damper Resonance

VALUE: OFF, 1 ~ 10

This parameter adjusts the volume of the damper resonance.

Depressing the damper pedal of an acoustic piano raises all dampers, allowing the strings to vibrate freely. When a note or chord is played on the piano with the sustain pedal depressed, not only will the strings of the notes played vibrate, but also the strings of other notes, vibrating in sympathetic resonance.

5. Key-off Effect

VALUE: OFF, 1 ~ 10

This parameter adjusts the volume of the key-off effect.

When playing an acoustic piano - particularly in the bass region of the keyboard - if a key is played with force and released quickly, it is often possible to hear the faint sound of the damper touching the strings immediately before the vibrations are stopped.

6. Damper Noise

VALUE: OFF, 1 ~ 10

This parameter adjusts the volume of the damper noise.

When the damper pedal is depressed and released, it is often possible to hear the sound of the damper head touching and releasing the strings.

7. Hammer Delay

VALUE: OFF, 1 ~ 10

This parameter adjusts the delay of the hammer striking the string when playing with pianissimo.

8. Fall-back Noise

VALUE: OFF, 1 ~ 10

This parameter adjusts the volume of the noise heard when the keyboard action 'falls back' after a key is released.

10. Stereo Width

VALUE: 0 ~ 127

This parameter adjusts the width of the stereo sound.

9. Topboard

CLOSE, OPEN1, OPEN2, OPEN3

This parameter changes the position of the piano's topboard.

When playing an acoustic grand piano, the position of the instrument's topboard (lid) affects both the volume and 'openness' of the tone produced. A fully open topboard allows sound waves to reflect off the polished lid surface and project into the room, while a closed lid has the opposite effect, resulting in a darker, more opaque tone.

11. Brilliance

VALUE: -10 dB ~ +10 dB

This parameter adjusts the overall brightness of the piano sound independently of the Voicing parameter.

8 Virtual Technician (E.PIANO, SUB sections)

1. Key-off Noise

VALUE: OFF, 1 ~ 127

When the E.PIANO sound section is selected, this parameter adjusts the volume of the noise heard when the keys of an electromechanical instrument are released.

When the SUB section is selected, this parameter adjusts the volume of the release noise for harpsichord and bass sounds.

2. Key-off Delay

VALUE: 0 ~ 127

This parameter adjusts the delay time before the Key-off Noise is heard.

Overview of the EDIT Menu (MIDI OUT)

The EDIT menu can also be used to adjust parameters for the MIDI OUT section. As with the sound section EDIT menus, the parameters are grouped by category, providing direct control over any connected MIDI devices.

This collection of parameters, together with other adjustable settings, can be stored as a SETUP memory (page 61). The MP11SE provides 26 banks x 8 setups, for a total of 208 user programmable SETUP memories.

About Common parameters (🔑 icon)

Unless stated, parameter settings for the MIDI OUT sections can be adjusted independent for each ZONE1~ZONE4. However, parameters marked with a 🔑 icon are common for all four MIDI zones. For example, changing the 🔑Right Pedal Assign parameter for ZONE1 will automatically change the 🔑Right Pedal Assign parameter for ZONE2~ZONE4. As noted previously, the 🔑Split Point parameter is unique in that it is common for all three sound sections and four MIDI zones.

About System parameters (🔧 icon)

MIDI OUT section parameters marked with a 🔧 icon are SYSTEM parameters and memorised automatically, without the need to use the STORE function.

MIDI OUT section parameters


No.	Category	Parameters
1	Channel/Program	MIDI Transmitting Channel, Program, Bank MSB, Bank LSB
2	SETUP	Send Program, Send Bank, Send Volume, Send Knobs
3	Transmit 🔧	Transmit System Exclusive, Transmit Recorder
4	MMC 🔧	Transmit MMC, MMC Device ID, MMC Commands
5	Key Setup	Touch Curve, Dynamics, Transmit Keyboard, Octave Shift, Zone Transpose, Key Scaling Damping, Key Scaling Key, Key Range Type, 🔑Split Point, Key Range Zone Lo, Key Range Zone Hi, Solo, Solo Mode
6	Controllers	Right Pedal, 🔑Right Pedal Assign, Half Pedal Values, Center Pedal, 🔑Center Pedal Assign, Left Pedal, 🔑Left Pedal Assign, Pitch Bend, Pitch Bend Range, Modulation Wheel, Modulation Wheel Assign, Modulation Depth Range, Foot Switch Pedal, 🔑Foot Switch Pedal Assign, Expression Pedal, 🔑Expression Pedal Assign
7	Knob Assign	Knob A Assign, Knob B Assign, Knob C Assign, Knob D Assign, Knob2 A Assign, Knob2 B Assign, Knob2 C Assign, Knob2 D Assign

Entering the EDIT Menu

When MIDI OUT ZONE1~ZONE4 is selected:

Press the EDIT button.

The LED indicator for the EDIT button will turn ON, and the Edit Menu for the selected MIDI zone will be shown in the LCD display.


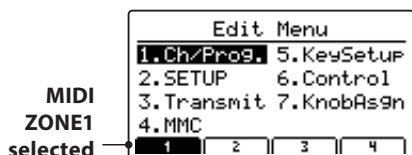


* To change the selected MIDI zone, press the F1~F4 buttons.

■ Selecting the parameter category

After entering the EDIT Menu:

Press the CURSOR buttons to select the desired category, then press the +/YES button to enter the selected category.

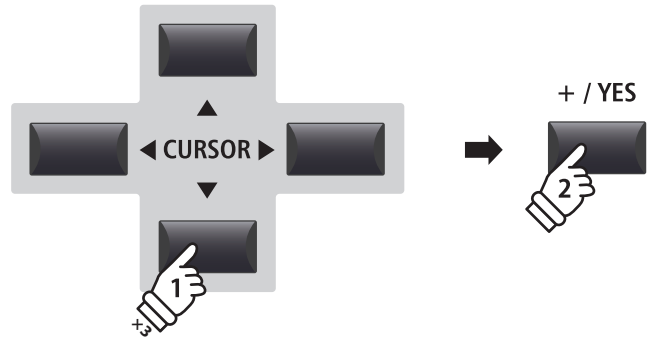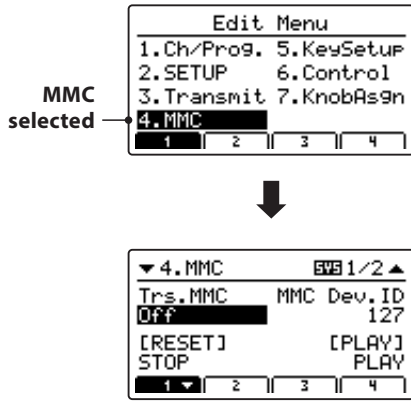

Example: To enter the MMC category, press the CURSOR button three times, then press the +/YES button.


■ Adjusting parameters

After selecting the parameter category:

Turn the four control knobs (A, B, C, D) to adjust the parameters assigned to those knob.

Parameters can also be adjusted by using the CURSOR buttons to move the selection cursor, and +/YES or -/NO buttons to increase or decrease the value of the selected parameter.

Press the EXIT button to exit the parameter category, or return to the Play Mode screen.

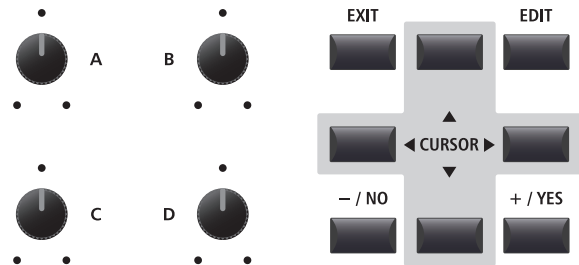

EDIT Menu parameters (MIDI OUT)

1 Channel/Program

1. MIDI Transmitting Channel VALUE: 01CH ~ 16CH

This parameter determines which MIDI channel will be used to transmit event information for the selected Zone.

- * By default, ZONE1~ZONE4 are assigned MIDI channels 01~04.
- * The specified MIDI transmit channel should match the MIDI Receive channel of the connected MIDI device.

2. Program VALUE: 1 ~ 128


This parameter determines which Program Change Number will be transmitted when a SETUP is recalled. For example, the desired Program number of a sound on the external MIDI device.

3/4. Bank MSB/Bank LSB VALUE: 0 ~ 127

This parameter determines which MSB and LSB number will be transmitted when a SETUP is recalled. The MIDI standard allocates 128 storage spaces, however this number can be expanded using an MSB and an LSB.

The diagram to the right illustrates how the Program Number, MSB Bank, and LSB Bank are organised.

- * Please refer to the owner's manual of the connected MIDI device for further information.

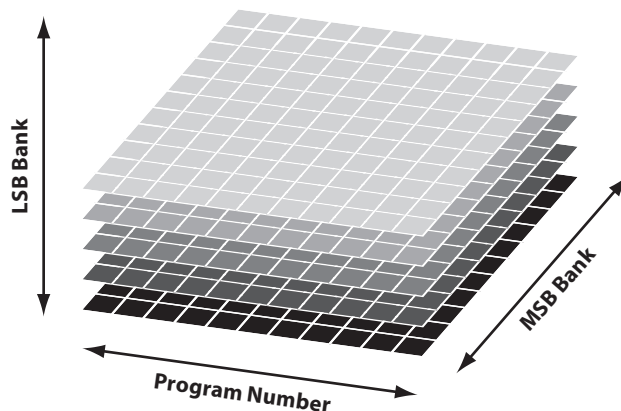

2 SETUP

1. Send Program ON, OFF

This parameter determines whether or not a Program Change Number will be transmitted when a SETUP is recalled.

To change sounds on external MIDI devices when recalling a SETUP, set this parameter to ON.

2. Send Bank ON, OFF

This parameter determines whether or not Program Bank Numbers (MSB, LSB) will be transmitted when a SETUP is recalled.

If the external MIDI device requires a Bank Select message, set this parameter to ON.

3. Send Volume ON, OFF

This parameter determines whether or not an initial MIDI Volume message will be transmitted when a SETUP is recalled.

- * Adjusting the volume of a Zone by turning the control knobs will still transmit values even if this parameter is set to OFF.

4. Send Knobs ON, OFF

This parameter determines whether or not control knob settings will be transmitted (ON) or not (OFF) when a SETUP is recalled.

- * Turning the control knobs will still transmit values even if this parameter is set to OFF.

■ SETUP parameters in the SYSTEM menu

The above Send parameters can be overridden by the SETUP Program, SETUP Bank, SETUP Volume, SETUP Knobs parameters in the MIDI category of the SYSTEM menu (page 104).

When these SETUP parameters are set to OFF, an asterisk will be shown beside the relevant Send parameter to indicate that the EDIT menu setting is being overridden.



3 Transmit MP11SE

The Transmit category parameters are all SYSTEM parameters. These parameters are memorised automatically and therefore do not need to be stored to each SETUP.

1. Transmit System Exclusive ON, OFF

This parameter determines whether or not System Exclusive (SYSEX) data will be transmitted to an external MIDI device.

* For more information about System Exclusive data transmitted by the MP11SE, please refer to page 134.

2. Transmit Recorder ON, OFF

This parameter determines whether or not data will be transmitted to an external MIDI device when playing internal recorder songs.

4 MMC MP11SE

The MMC category parameters are all SYSTEM parameters. These parameters are memorised automatically and therefore do not need to be stored to each SETUP.

1. Transmit MMC ON, OFF

This parameter determines whether or not the MP11SE's recorder control buttons will transmit MMC (MIDI Machine Control) data.

2. MMC Dev. ID VALUE: 0 ~ 127

This parameter determines the device ID of the MMC (MIDI Machine Control).

3. MMC Commands 13 MMC COMMANDS, 3 REALTIME COMMANDS

These parameters allow MMC or Realtime commands to be assigned to the MP11SE's six recorder control buttons.

* By default, the main MMC commands should be correctly mapped to the MP11SE's recorder control buttons.


■ Assignable recorder control commands

MMC Commands			
01	STOP	08	RECORD PAUSE
02	PLAY	09	PAUSE
03	DEFERRED PLAY	0A	EJECT
04	FAST FORWARD	0B	CHASE
05	REWIND	0C	COMMAND ERROR RESET
06	RECORD STROBE	0D	MMC RESET
07	RECORD EXIT		

Realtime Commands	
FA	Realtime START
FB	Realtime CONTINUE
FC	Realtime STOP

■ Recorder control buttons

The illustration below indicates the names of the six recorder control buttons:

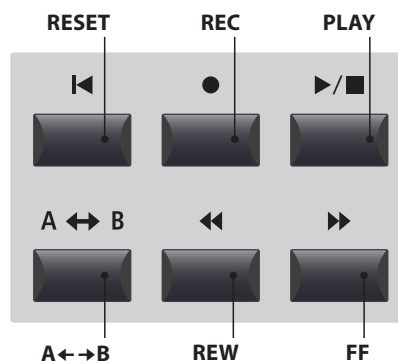

5 Key Setup

1. Touch Curve 6 TYPES + 5 USER

This parameter selects the touch response curve of the keyboard for the selected zone.

* For more information about touch curve types, please refer to page 45.

* For information about creating User Touch Curves, please refer to the User Edit explanation in the SYSTEM menu chapter (page 106).

3. Transmit Keyboard ON, OFF

This parameter determines whether or not keyboard Key ON/Key OFF event data will be transmitted to an external MIDI device.

5. Zone Transpose VALUE: -12 ~ +12

This parameter adjusts the amount of transposition for the selected zone.

6. Key Scaling Damping ON, OFF

This parameter determines whether or not damping (velocity reduction) should be applied to a zone over a specific range.

8. Key Range Type OFF, UPPER, LOWER, ZONE

This parameter selects the Key Range type for the selected zone.

Type	Description
Off	The zone is used for all 88 keys of the keyboard.
Upper	The zone is used for the upper split.
Lower	The zone is used for the lower split.
Zone	The zone is used for a defined zone between two keys.

* This parameter is not stored to SOUND but to SETUP only.

12. Solo ON, OFF

This parameter determines whether or not playing will be restricted to single notes, even when more than one note is played simultaneously.

This parameters can be used to effectively simulate the performance characteristics of a monophonic synthesizer.

2. Dynamics VALUE: OFF, 1 ~ 10

This parameter adjusts the keyboard response (velocity compression) of the selected zone independently of the touch curve.

* For more information about dynamics, please refer to page 45.

4. Octave Shift VALUE: -3 ~ +3 OCTAVES

This parameter adjusts the amount of octave transposition for the selected zone.

7. Key Scaling Key RANGE: A0 ~ C8

This parameter defines the point on the keyboard from which Key Scaling Damping should be applied, up to the highest key.

9. Split Point RANGE: A0 ~ C8

This parameter defines the point on the keyboard at which the upper and lower parts are divided.

* For more information about Key Range functions, please refer to page 26.

* This parameter is common for all three sound sections and all MIDI zones.

10./11. Key Range Zone Lo/Hi RANGE: A0 ~ C8

These parameters define the bottom and top keys of the key range zone.

* For more information about Key Range functions, please refer to page 26.

13. Solo Mode LAST, HIGH, LOW

This parameter selects the solo mode for the selected zone.

Solo Mode	Description
Last	Play the last note of a group of notes.
High	Play the highest note of a group of notes.
Low	Play the lowest note of a group of notes.

6 Controllers

1. Right Pedal

ON, OFF

This parameter determines whether or not the right pedal of the GFP-3 pedal unit is active for the selected zone.

2. Right Pedal Assign

CC#0 ~ CC#119, AFTERTOUCH

This parameter selects the function assigned to the right pedal of the GFP-3 pedal unit.

* This parameter is common for all four MIDI zones.

3. Half Pedal Values

NORMAL, HIGH, LOW, MID HIGH, MID LOW

This parameter changes the half pedal ranges sent by the right pedal of the GFP-3 pedal unit for the selected zone.

This parameter is useful when using the MP11SE to control external tone generators (e.g. software pianos) that respond to damper pedal behaviour differently.

Half Pedal Value	Value Range	Description
Normal (default)	0 ~ 127	The damper pedal sends a full range of evenly distributed values.
High	0, 64 ~ 127	The damper pedal sends a full range of evenly distributed values after the half-pedal point is reached.
Low	0 ~ 63, 127	The damper pedal sends a full range of evenly distributed values before the half-pedal point is reached.
Mid High	0, 50 ~ 100, 127	The damper pedal sends a full range of evenly distributed values between 50 and 100.
Mid Low	0, 25 ~ 75, 127	The damper pedal sends a full range of evenly distributed values between 25 and 75.

4. Center Pedal

ON, OFF

This parameter determines whether or not the centre pedal of the GFP-3 pedal unit is active for the selected zone.

5. Center Pedal Assign

CC#0 ~ CC#119, AFTERTOUCH

This parameter selects the function assigned to the centre pedal of the GFP-3 pedal unit.

* This parameter is common for all four MIDI zones.

6. Left Pedal

ON, OFF

This parameter determines whether or not the left pedal of the GFP-3 pedal unit is active for the selected zone.

7. Left Pedal Assign

CC#0 ~ CC#119, AFTERTOUCH

This parameter selects the function assigned to the left pedal of the GFP-3 pedal unit.

* This parameter is common for all four MIDI zones.

8. Pitch Bend

ON, OFF

This parameter determines whether or not the pitch bend wheel is active for the selected zone.

9. Pitch Bend Range

VALUE: 0 ~ 12

This parameter sets the range of the pitch bend wheel in semi-tone steps.

* The range differs for the internal sound (0 ~7) and MIDI (0~12) sections.

10. Modulation Wheel

ON, REVERSE, OFF

This parameter determines whether or not the modulation wheel is active for the selected zone.

When set to 'Reverse', the wheel's output values will be inverted.

11. Modulation Wheel Assign

CC#0 ~ CC#119, AFTERTOUCH

This parameter selects the function assigned to the MP11SE's modulation wheel.

12. Modulation Depth Range

VALUE: 0 ~ 127

This parameter sets the range of the pitch modulation function in steps of 600/127 cents.

6 Controllers (cont.)

13. Foot Switch Pedal

ON, OFF

This parameter determines whether or not the foot switch pedal (if connected) is active for the selected zone.

* For more information about connecting pedals, please refer to page 18.

15. Expression Pedal

ON, REVERSE, OFF

This parameter determines whether or not the expression pedal (if connected) is active for the selected zone.

When set to 'Reverse', the pedal's output values will be inverted.

* For more information about connecting pedals, please refer to page 18.

14. Foot Switch Pedal Assign

CC#0 ~ CC#119,
AFTERTOUCH

This parameter selects the function assigned to the foot switch pedal (if connected).

* This parameter is common for all four MIDI zones.

* For more information about connecting pedals, please refer to page 18.

16. Expression Pedal Assign

CC#0 ~ CC#119,
AFTERTOUCH

This parameter selects the function assigned to the expression pedal (if connected).

* This parameter is common for all four MIDI zones.

* For more information about connecting pedals, please refer to page 18.

7 Knob Assign



The Knob Assign screen is used to assign MIDI Control Change or Aftertouch messages to the four main control knobs A, B, C, and D for direct, real-time adjustment in Play Mode. Two groups of knob parameters (primary and secondary) can be assigned to each of the four MIDI zones, providing extensive control over external MIDI devices.

■ Assigning MIDI CC/Aftertouch messages to each knob


Enter the Knob Assign screen for the desired MIDI zone.

Turn the four control knobs (A, B, C, D) to specify which MIDI CC message should be assigned to each control knob.

MIDI CC messages can also be assigned by using the CURSOR buttons to move the selection cursor, and +/-YES or -/NO buttons to increase or decrease the values.

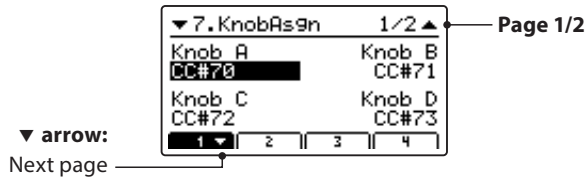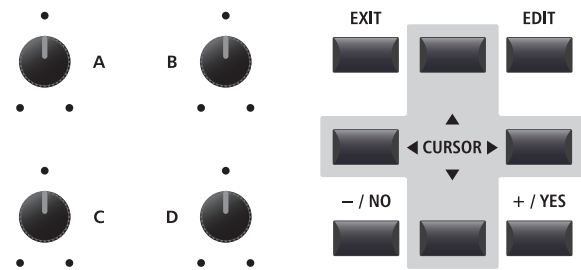

Press the F1~F4 buttons (depending on the selected MIDI zone) to show the secondary group of knob parameters in the LCD display.

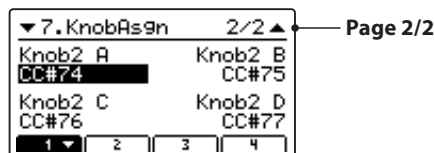

* For more information about adjusting parameters in Play Mode, please refer to page 21.

Overview of the STORE Button

After using the EDIT menu and control knobs to adjust the parameters for the selected sound, the STORE button is used to memorise the settings, and ensure the changes are not lost when turning the instrument OFF or selecting other sounds.

The STORE button has three different functions: to store individual sounds, to store the entire panel configuration (SETUP), and to store the current panel configuration as the default (POWERON).

■ STORE button functions

STORE function	Description
SOUND	Store the selected sound's EDIT menu parameters* to the variation button.
SETUP	Store all EDIT menu parameters, all sound section panel settings, and EQ section settings to a SETUP memory.
POWERON	Store all EDIT menu parameters, all sound section panel settings, and EQ section settings as the default.

* Common parameters are not stored to SOUND memory. For more information about common parameters, please refer to page 38.


1 Storing a SOUND

This function will store the selected sound's EDIT menu parameters to the variation button, thus overwriting the existing preset sound.

1. Entering the STORE screen

Press the STORE button.

The LED indicator for the STORE button will turn ON, and the store selection screen will be shown in the LCD display.

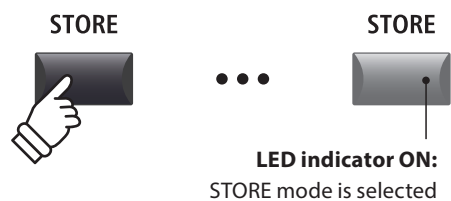


2. Selecting the Store Sound function

Press the F1 button (SOUND) to select the Store Sound function, then press the F4 button (EXEC).



The Store Sound confirmation screen will be shown in the LCD display.

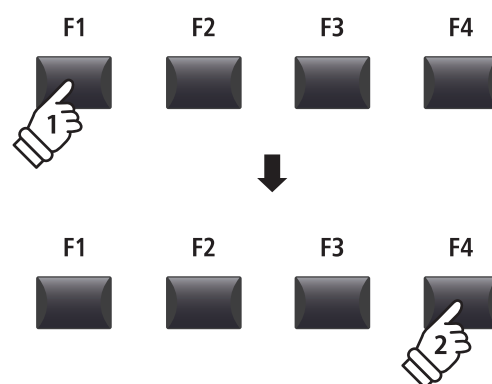


3. Confirming the Store Sound operation

Press the F2 button (YES) to confirm the Store Sound operation, or the F3 button (NO) to return to the store selection screen.

* The existing sound will be overwritten with the adjusted sound.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

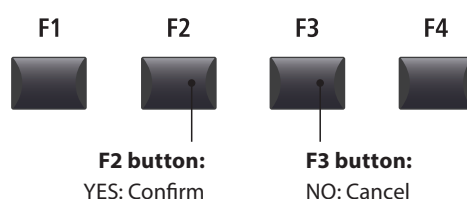


2 Storing a SETUP

This function will store all the EDIT menu parameters for the PIANO, E.PIANO, SUB, and MIDI OUT sections, panel button and knob states, and EQ settings to one of the MP11SE's 208 SETUP memories.

1. Entering the STORE screen

Press the STORE button.


The LED indicator for the STORE button will turn ON, and the store selection screen will be shown in the LCD display.

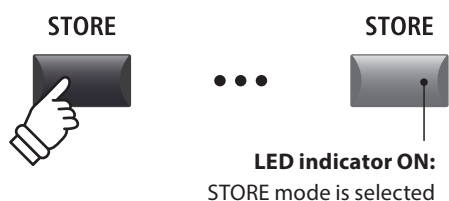

2. Selecting the Store Setup function

Press the F2 button (SETUP) to select the Store Setup function, then press the F4 button (EXEC).

The Store Setup screen will be shown in the LCD display.

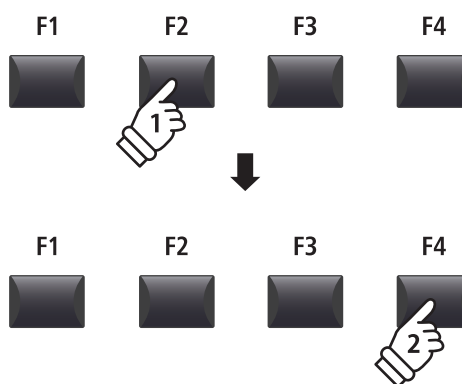

3. Naming the SETUP, selecting the bank/memory


Turn control knobs A and B to move the cursor position and select the characters for the SETUP name.

Press the BANK ◀ ▶ buttons and SETUP memory buttons (1~8) to select the bank and memory for the new SETUP.



Press the F4 function button (EXEC).

The Store Setup confirmation screen will be shown in the LCD display.

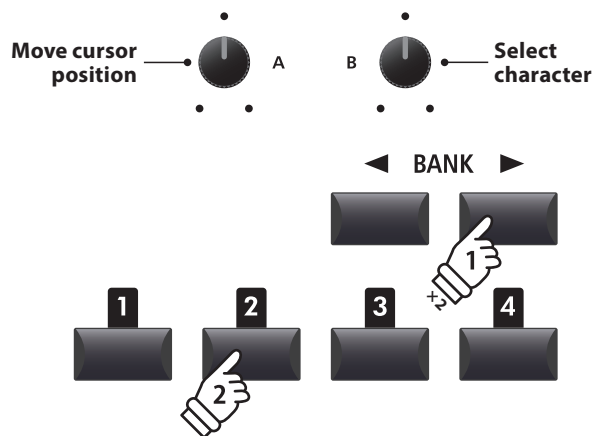

Example: To select SETUP memory C-2, press the BANK ▶ button twice, then press the 2 memory button.


4. Confirming the Store Setup operation

Press the F2 button (YES) to confirm the Store Setup operation, or the F3 button (NO) to return to the previous screen.

* The existing SETUP memory will be overwritten with the new SETUP.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

* When the SETUP has been stored and the SETUP button has been turned OFF, the panel settings will return to the POWERON state.

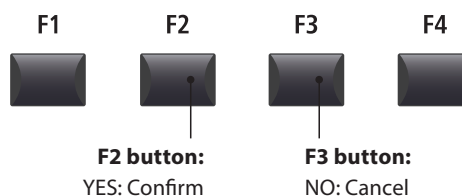

3 Storing POWERON settings

This function will store the EQ setting and current state (section ON/OFF, selected sound) of the PIANO, E.PIANO, SUB, and MIDI OUT sections to the MP11SE's default POWERON memory.

* Please note that only the selected SOUND position (e.g. SK Concert Grand) will be stored to POWERON memory, not the individual EDIT menu settings (e.g. String Resonance) of that SOUND.

1. Entering the STORE screen


Press the STORE button.

The LED indicator for the STORE button will turn ON, and the store selection screen will be shown in the LCD display.





2. Selecting the Store PowerOn function

Press the F3 function button (PWRON) to select the Store PowerOn function, then press the F4 button (EXEC).

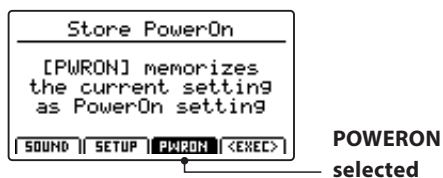

The Store PowerOn confirmation screen will be shown in the LCD display.

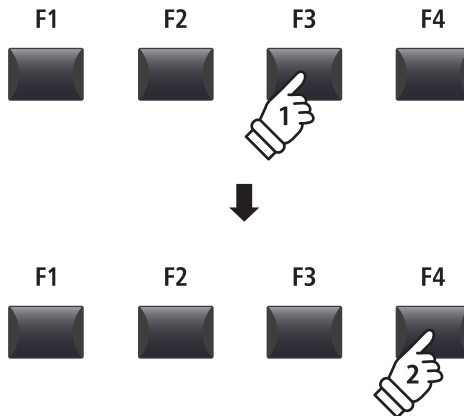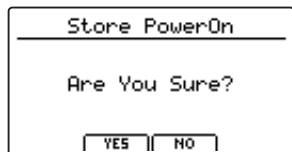


3. Confirming the Store PowerOn operation

Press the F2 button (YES) to confirm the Store PowerOn operation, or the F3 (NO) button to return to the previous screen.

* The existing POWERON memory will be overwritten.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

* Please note that only the selected SOUND position (e.g. SK Concert Grand) will be stored to POWERON memory, not the individual EDIT menu settings (e.g. String Resonance) of that SOUND. In order to memorise EDIT menu settings, please store each section's sound to the SOUND memory. (see page 60)

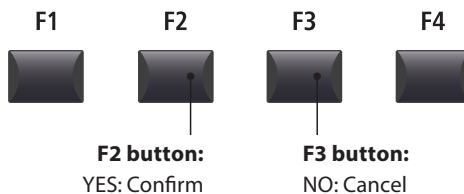

SETUP memories

The MP11SE's **SETUP** memories allow the entire instrument configuration, including selected sounds, section volume levels, parameter settings, and EQ adjustments, etc. to be stored and recalled immediately at the touch of a button. **SETUPS** are numbered 1~8, and arranged in 26 banks A~Z, allowing for a total of 208 individual memories.

This page explains how to select the bank and memory, and recall the **SETUP**.

Turning SETUP mode ON or OFF

Press the **SETUP** section's **ON/OFF** button to turn **SETUP** mode ON or OFF.



The LED indicators for the **SETUP** section's **ON/OFF** button and selected **SETUP** memory will turn ON or OFF accordingly.

When **SETUP** mode is turned ON, a list of **SETUPS** for the current bank will be briefly shown in the LCD display, with the selected memory highlighted.

* The previously selected **SETUP** memory will be recalled automatically.



After a few seconds, the **Play** mode screen will be shown in the LCD display, with the name of selected **SETUP** indicated.

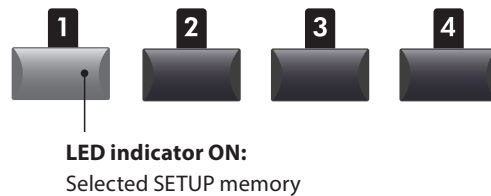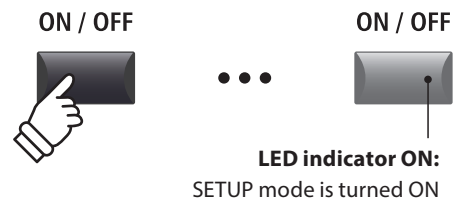


Selecting SETUPS

While **SETUP** mode is turned ON:



Press the **BANK** ◀▶ buttons to cycle through the available **SETUP** banks.

The **SETUP** list for the selected bank will be briefly shown in the LCD display.

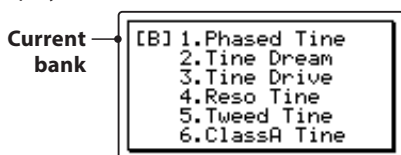


While the **SETUP** list is shown in the LCD display:

Press the **SETUP** memory buttons to select the desired **SETUP** memory.

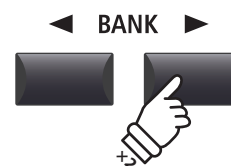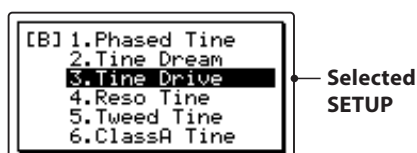

*Example: To select bank B, press the **BANK** ▶ button twice.*

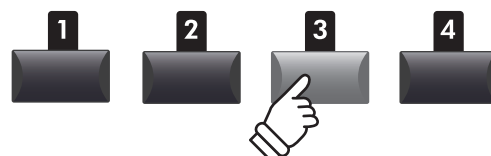

*Example: To select **SETUP** memory 3, press the **3** **SETUP** memory button.*

* **SETUP** memories from within the current bank can still be selected, even when the bank list is not shown.

Overview of the Recorder

The MP11SE's Recorder features convenient functions to record and playback performances from the instrument's internal memory or a connected USB memory device. The characteristics of each method are outlined below.

■ MP11SE Recorder characteristics


	Song Recorder (Internal Memory)	Audio Recorder (USB Memory)
Stored/saved format	SMF (MIDI)	MP3/WAV (audio)
Maximum song length	90,000 notes	Depends on device capacity
Maximum no. of songs	10 songs	Depends on device capacity
Example applications	Sketching ideas, recording finished performances,	remixing and further editing on a computer. Emailing to friends, burning to audio CD, etc.
Playback methods	Playback songs on MP11SE and other MIDI devices	Playback songs on MP11SE and audio players etc.
Adjustable tempo	Yes, before and during playback	No
Overdubbing	No	Yes, unlimited overdubs
Conversion options	Can be converted to MP3/WAV	Cannot be converted to SMF (MIDI)

■ Turning Recorder mode ON or OFF

Press the RECORDER section's ON/OFF button to turn Recorder mode ON or OFF.



The LED indicator for the RECORDER section's ON/OFF button will turn ON or OFF accordingly.

When Recorder mode is turned ON, the recorder screen will be shown in the LCD display.

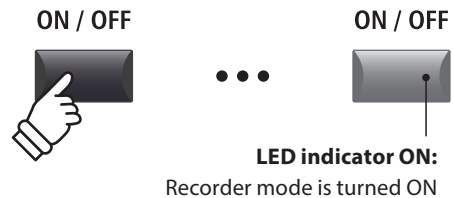

■ Selecting the Recorder mode

Press the F1 function button to alternate between the Internal Song Recorder and the USB Audio Recorder functions.

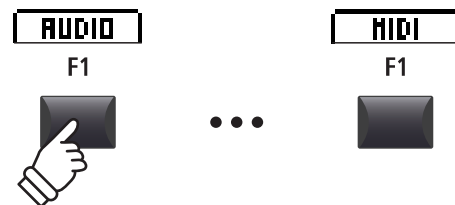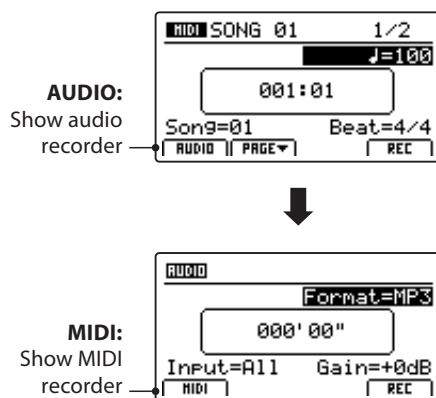

* If a USB memory device is connected when Recorder mode is turned ON, the USB Audio Recorder function will be selected automatically.

* If a USB memory device is not connected when Recorder mode is turned ON, the Internal Song Recorder function will be selected automatically.

■ USB Functions

Additional USB functions to delete and rename files stored on USB memory devices can be found in the USB Menu. For information about USB functions, please refer to page 93.

Song Recorder (Internal Memory)

The Song Recorder function allows up to 10 different songs to be recorded, stored in internal memory, and played back at the touch of a button. Once recorded, songs can be saved to USB memory in Standard MIDI File (SMF) format, or converted to MP3/WAV audio files.

1 Recording a song


1. Turning the Recorder mode ON

Press the RECORDER section's ON/OFF button to turn Recorder mode ON.

The LED indicator for the RECORDER section's ON/OFF button will turn ON, and the MIDI recorder screen will be shown in the LCD display.



If a USB memory device is connected, press the F1 button (MIDI) to select the MIDI recorder function.

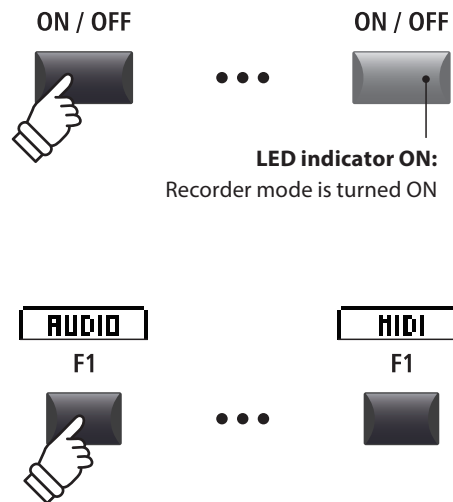

2. Selecting the song memory, adjusting tempo/beat

Turn control knob C to select the song memory to be used for the new recording.


* There are 10 internal song recorder memories.

* If the selected song memory already contains recording data, it will be erased automatically when the new song is recorded.

If recording with the metronome or a drum rhythm:

Turn control knobs B and D to adjust the tempo and beat (time signature) or drum rhythm used for the new recording.

* For more information about recording with the metronome or drum rhythms, please refer to page 91.


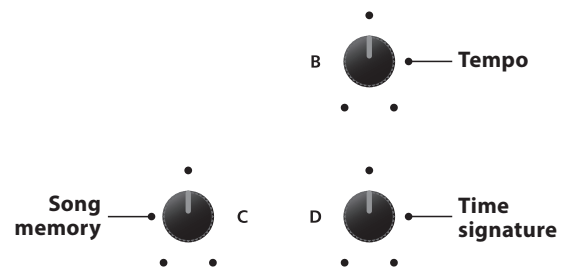


3. Starting the song recorder (standby mode)

Press the ● recorder control button.

The LED indicator for the ● button will start to flash, to indicate that the recorder is in standby mode.

* The F4 function button (REC) can also be used to engage standby mode.

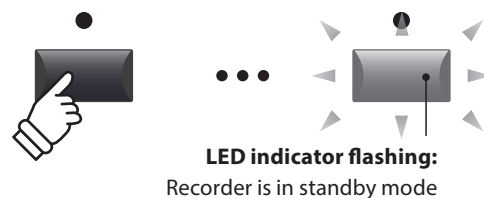
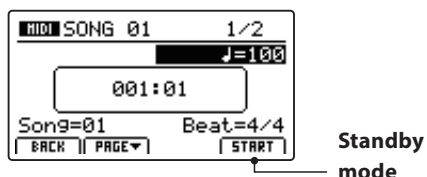


1 Recording a song (cont.)

4. Starting the song recorder (recording)

Press a key on the keyboard.

The LED indicators for the ● and ▶/■ buttons will turn ON, the bar/beat counter shown in the centre of the LCD will begin to increase, and recording will start.

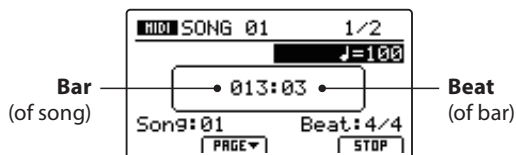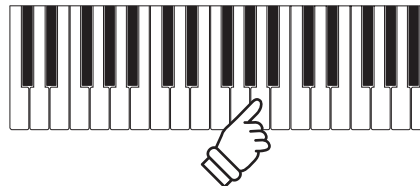

LED indicators ON:
Recording is in progress

* Recording can also be started by pressing the ▶/■ button. This allows a rest period or empty bar to be inserted at the beginning of the song.

* The metronome can be enabled before recording to assist with timing etc. When enabled, a one bar count-in will be added before recording begins.

5. Stopping the song recorder

Press the ▶/■ recorder control button.


The LED indicators for the ● and ▶/■ buttons will turn OFF, and recording will stop.

* The F4 function button (STOP) can also be used to stop recording.



LED indicators OFF:
Recording has stopped

After a brief pause, the MIDI player screen will be shown in the LCD display.

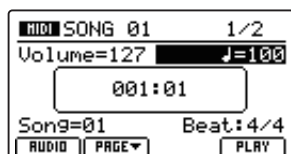

For information about playing the recorded song, please refer to page 67.

* The maximum recording capacity is approximately 90,000 notes, with button and pedal presses also counted as one note.

* If the maximum recording capacity is reached during recording, the recorder will stop automatically.

* To prevent data loss, avoid turning the power OFF while the MP11SE is saving internal recorder songs.

* Recorder songs will remain in memory after the power is turned OFF.

2 Playing back a song

This function is used to playback recorder songs stored in internal memory. To playback a song immediately after recording, start this process from step 3.


1. Turning the Recorder mode ON

Press the RECORDER section's ON/OFF button to turn Recorder mode ON.

The LED indicator for the RECORDER section's ON/OFF button will turn ON, and the MIDI recorder screen will be shown in the LCD display.



If a USB memory device is connected, press the F1 button (MIDI) to select the MIDI recorder function.

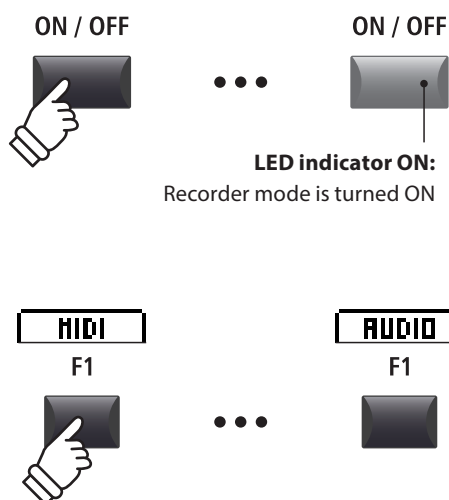

2. Selecting the song to playback

Turn control knob C to select the song memory to be played back.

* Song selection is not possible during playback.




3. Starting song playback

Press the ▶/■ recorder control button.

The LED indicator for the ▶/■ button will turn ON, and the selected song will start to play.

* The F4 function button (PLAY) can also be used to start song playback.

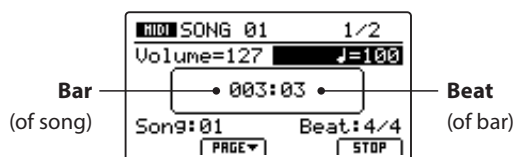

■ Adjusting playback volume and tempo

Turn control knobs A and B to adjust the playback volume and tempo of the song.

* The playback volume and tempo of the song can be adjusted both before and during playback.




Song Recorder (Internal Memory)

■ Moving the playback position (seek)

Press the ◀◀ or ▶▶ recorder control buttons to move the playing position of the song backward and forward in single bar increments.

* The playback position can be moved both before and during playback.

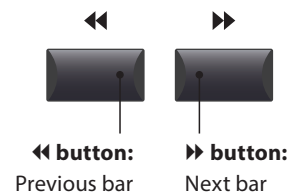

4. Stopping song playback


While a song is playing:

Press the ▶/■ recorder control button.

The LED indicator for the ▶/■ button will turn OFF, and song playback will stop.

* The F4 function button (STOP) can also be used to stop song playback.

Press the ▶/■ button again to continue playback from the stopped position, or the ◀ button to reset the playback position to the beginning of the song.

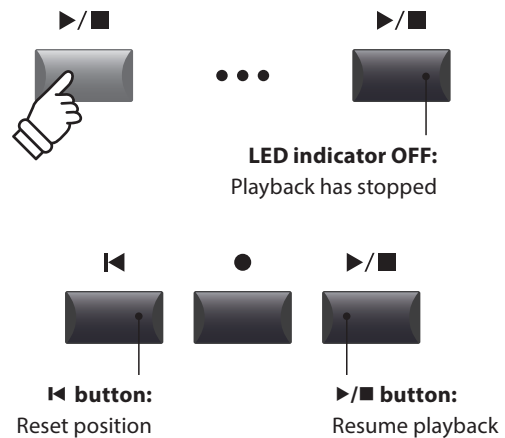

■ A-B Repeat function

The A-B Repeat function allows one section of a song to be repeated continuously (looped). This function can be activated both before and during song playback.

Press the A↔B recorder control button once to set the start point of the loop.


The LED indicator for the A↔B button will start to flash.

Press the A↔B button again to set the end point of the loop.

The LED indicator for the A↔B button will turn ON and the specified section will repeat continuously.

Press the A↔B button once again to cancel the loop.

The LED indicator for the A↔B button will turn OFF and normal playback will resume.

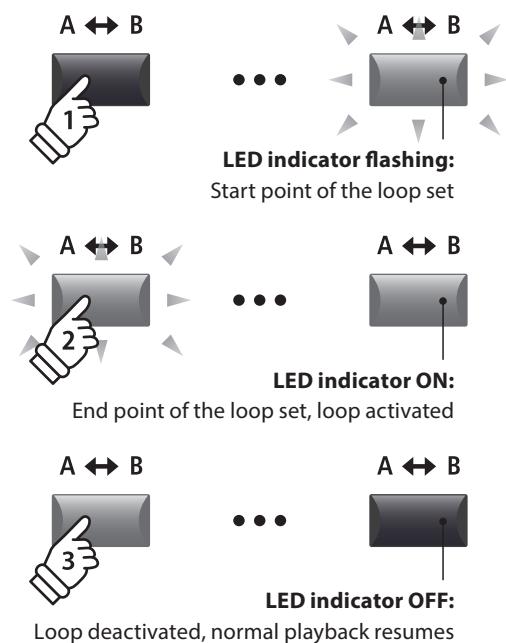

■ Chain Play mode

Chain Play mode allows all recorder songs stored in memory to be played continuously, in sequence.

Press and hold the ▶/■ recorder control button.

The Chain Play icon will be shown in the LCD display, and the recorder songs will start to play continuously, in sequence.




3 Saving a song as an SMF file

This function is used to save recorder songs to a USB memory device in SMF (Standard MIDI File) format.

1. Selecting the song memory

After turning Recorder mode ON, and recording a song:

Turn control knob C to select the song memory to be saved to the USB memory in SMF format.



2. Connecting a USB memory device

Connect a USB memory device to the USB to Device port.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.

The USB device will be scanned, and the SAVE function will appear at the bottom of the LCD display.



* If the SAVE button is not displayed, please use the Save SMF function accessible from the USB Menu (page 95).



3. Selecting the Save SMF function

Press the F3 function button (SAVE).

The Save SMF screen will be shown in the LCD display.

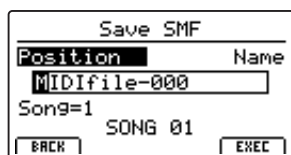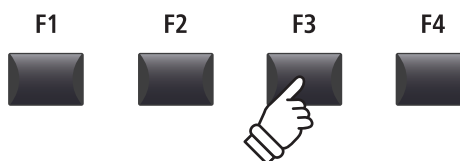


4. Entering a filename

Turn control knobs A and B to move the cursor position and select the characters for the song name.

* Saved SMF files are limited to a maximum name length of 18 characters.

* The saved SMF file will be stored in the root folder of the USB memory device. It is not possible to store the file in a different folder.

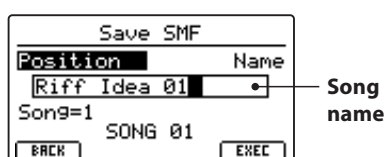


Song Recorder (Internal Memory)

5. Saving the song

Press the F4 function button (EXEC).


The Save SMF confirmation screen will be shown in the LCD display.

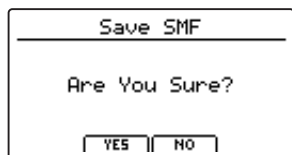

Press the F2 button (YES) to confirm the Save SMF operation, or the F3 button (NO) to return to the Save SMF screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the save operation.

* To prevent data loss, avoid turning the power OFF while the MP11SE is saving files to USB memory.

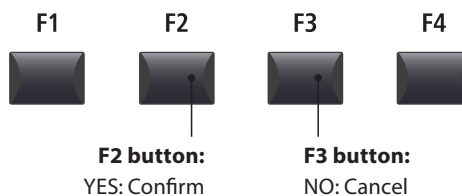

4 Loading an SMF file into memory

This function can be used to load SMF files into an empty recorder song memory.

■ Preparing the USB memory device

Prepare a selection of SMF MIDI files, copying the data to a USB memory device.



1. Selecting an empty song memory

After turning Recorder mode ON:

Turn control knob C to select an empty song memory.




2. Connecting a USB memory device

Connect a USB memory device to the USB to Device port.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.

The USB device will be scanned, and the LOAD function will appear at the bottom of the LCD display.



* If the LOAD button is not displayed, please use the Load SMF function accessible from the USB Menu (page 94).

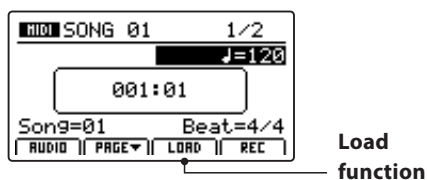

3. Selecting the Load SMF function


Press the F3 function button (LOAD).

A listing of the SMF files stored in the root folder of the USB device will be shown in the LCD display.

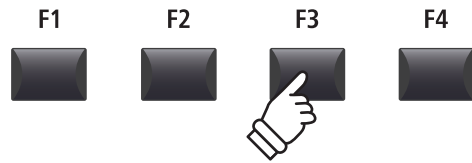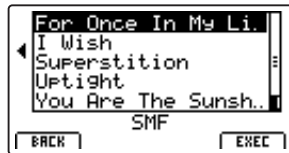

■ USB device file/folder listing screen


The MP11SE's file/folder listing screen lists relevant files and folders stored in the root of the USB device.

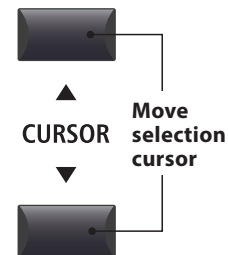

Press the CURSOR ▲▼ buttons to move the selection cursor.


* Control knob A can also be used to move the selection cursor.

Press the F4 function button (EXEC) or +/YES button to select the file or enter the selected folder.

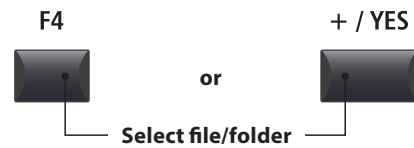



4. Selecting the SMF file to load

Press the CURSOR ▲▼ buttons to select the desired MIDI file.

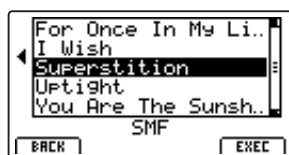

Press the F4 function button (EXEC) or +/YES button.

The Load SMF screen will be shown in the LCD display.

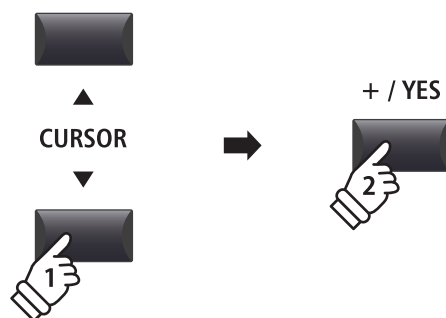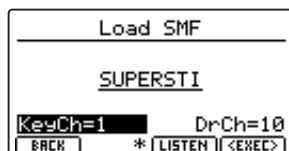


4 Loading an SMF file into memory (cont.)

5. Selecting the keyboard and drum channels

Turn control knobs C and D to specify which channels of the SMF file should be loaded into the MP11SE recorder's keyboard and drum tracks.

* The MP11SE will attempt to detect the correct keyboard and drum tracks automatically, based on the contents of the SMF file.


* When loading an SMF file created by the MP11SE, the drum track will be turned OFF.

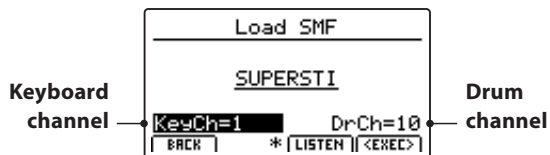

Press the F3 function button (LISTEN) to audition the current channel settings.


Press the F4 function button (EXEC) to load the selected SMF file into the song memory.

The Load SMF confirmation screen will be shown in the LCD display.

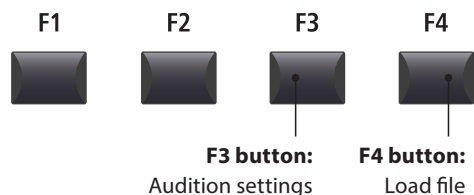


6. Confirming the Load SMF operation

Press the F2 button (YES) to confirm the Load SMF operation, or the F3 (NO) button to return to the previous screen.

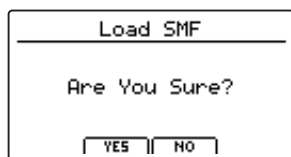


* The +/YES and -/NO buttons can also be used to confirm or cancel the load SMF operation.

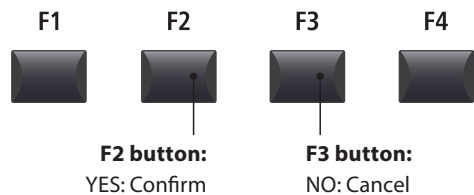

7. Playing the loaded SMF file

After loading the SMF file, the recorder screen will be shown in the LCD display.

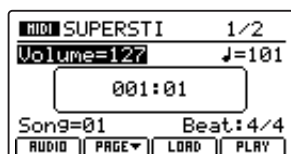

For information about playing the loaded MIDI file, please refer to page 67.


5 Erasing a song

This function is used to erase songs that have been recorded incorrectly, or are simply no longer required.

1. Selecting the song to erase

After turning Recorder mode ON and recording a song:

Turn control knob C to select the song memory to be erased.





* To erase all recorder songs, use the Reset Recorder function in the Reset category of the SYSTEM menu (page 111).

2. Showing the additional recorder functions

Press the F2 function button (PAGE).



An additional page of recorder functions will be shown in the LCD display.

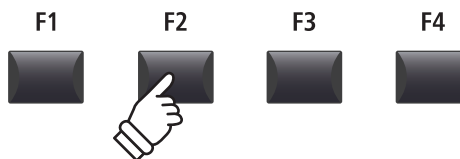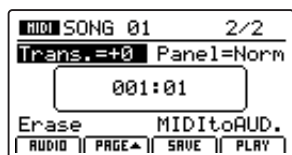

* The CURSOR ▲▼ buttons can also be used to alternate between pages.

3. Selecting the Erase Song function

Turn control knob C to highlight the Erase Song function.

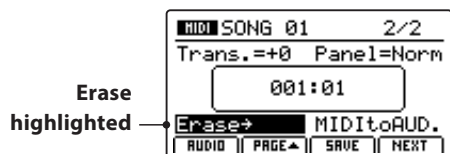

* The CURSOR buttons can also be used to move the selection cursor.

Press the +/YES button to select the Erase Song function.

The Erase Song confirmation screen will be shown in the LCD display.



+ / YES



* It is also possible to select the Erase Song function at any time by pressing the ● and ►/■ recorder control buttons simultaneously.

4. Confirming the Erase Song operation

Press the F2 button (YES) to confirm the Erase Song operation, or the F3 (NO) button to return to the previous screen.

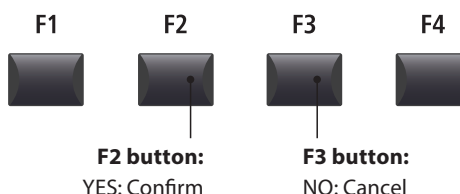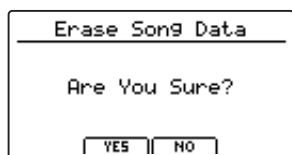

* The +/YES and -/NO buttons can also be used to confirm or cancel the Erase Song operation.


6 Song Transpose

This parameter allows the playback pitch of songs stored in memory to be raised or lowered in semi-tone steps. This may be useful when wishing to transpose a loaded SMF file into another key.

■ Changing the song transpose value

Press the F2 function button (PAGE▼) to show the second page of recorder functions.

Turn control knob A to change the song transpose value.

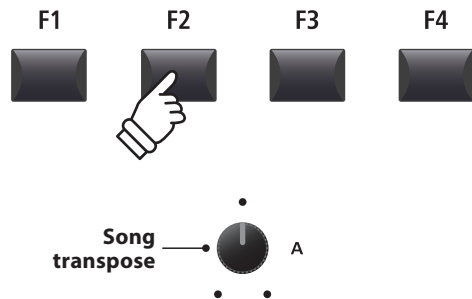

* The Song Transpose value can be adjusted within the range of -12 ~ +12.

7 Panel Mode

This parameter determines whether or not changes made to the panel during recording will be replicated when a song is played back, thus influencing the current keyboard settings.

■ Panel Mode types



Panel Mode	Description
Normal (default)	Panel settings will not change during song playback, and will not influence the current keyboard settings.
Play	Panel settings will change during song playback, and will also influence the current keyboard settings.

	Normal panel mode	Play panel mode
Advantages	Keyboard settings are independent of recorder song.	All functions (including EFX) are played back perfectly.
Disadvantages	Some functions (e.g. EFX) are not played back perfectly.	Keyboard settings are dependent on recorder song.

■ Changing the panel mode type

Press the F2 function button (PAGE▼) to show the second page of recorder functions.

Turn control knob B to change the panel mode type.

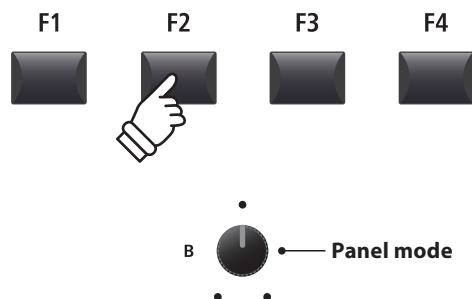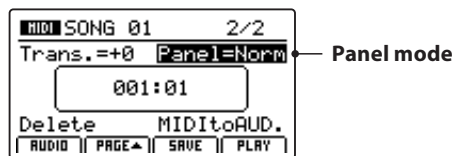

8 MIDI to Audio

For information about the MIDI to Audio function, please refer to page 84.

Audio Record/Playback (USB Memory)

1 Recording an audio file

The MP11SE is also capable of recording performances (including LINE IN input audio) as digital audio – saving the data to a USB memory device in either MP3 or WAV format. This useful function allows professional quality recordings to be produced directly on the instrument – without the need for additional sound equipment – then emailed to band members, listened to away from the instrument, or edited and remixed further using an audio workstation.

■ Audio Recorder format specifications

Audio Format	Specifications	Bitrate
MP3	44.1 kHz, 16 bit, Stereo	192 kbit/s (fixed)
WAV	44.1 kHz, 16 bit, Stereo	1,411 kbit/s (uncompressed)

* MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
MP3 codec is Copyright (c) 1995-2007, SPIRIT

1. Connecting a USB memory device

Connect a USB memory device to the USB to Device port.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.



The USB device will be scanned.



2. Turning the Recorder mode ON

Press the RECORDER section's ON/OFF button to turn Recorder mode ON.

The LED indicator for the RECORDER section's ON/OFF button will turn ON, and the Audio recorder screen will be shown in the LCD display.

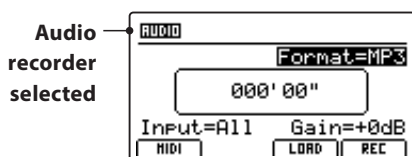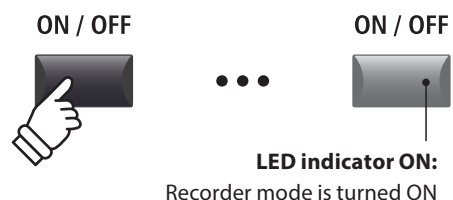

* If the MIDI recorder screen is shown, press the F1 function button (AUDIO) to select the Audio recorder.

■ Selecting the audio recorder file format

Turn control knob B to select the desired audio recorder format.



* MP3 audio files require less storage space than WAV audio files.

* A 1 GB USB memory device can store over 12 hours of MP3 audio data.

1 Recording an audio file (cont.)


■ Selecting the audio recorder input, adjusting gain level

Turn control knob C to select the desired audio recorder input.

Turn control knob D to adjust the gain level of the recorder.

Increasing the audio recorder gain level parameter may be useful when recording quieter passages.

Input	Description
All	Record the keyboard sound and the LINE IN sound.
Line	Record the LINE IN sound only.

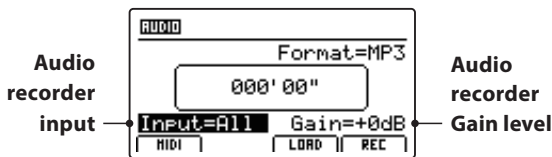

* The gain level can be set within the range of -18 dB ~ +18 dB.



3. Starting the audio recorder (standby)

Press the ● recorder control button.

The LED indicator for the ● button will start to flash, to indicate that the recorder is in standby mode.

* The F4 function button (REC) can also be used to engage standby mode.




* Depending on the USB memory device connected, there may be a brief delay before standby mode is engaged.

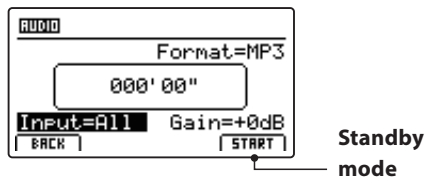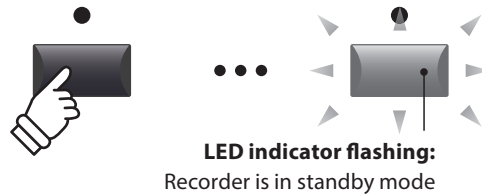

4. Starting the audio recorder (record)

Press a key on the keyboard.

The LED indicators for the ● and ►/■ buttons will turn ON, the time counter shown in the centre of the LCD will begin to increase, and recording will start.

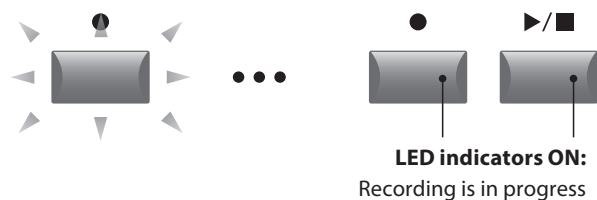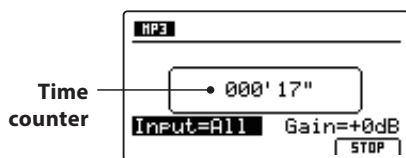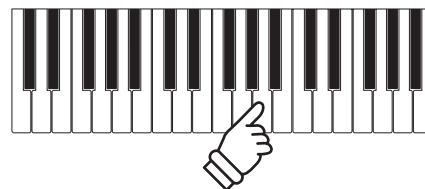

* Recording can also be started by pressing the ►/■ button. This allows a rest period or empty bar to be inserted at the beginning of the song.

* The metronome can be enabled before recording to assist with timing etc. When enabled, a one bar count-in will be added before recording begins.

5. Stopping the audio recorder, auditioning the recording

Press the ►/■ recorder control button.


The LED indicators for the ● and ►/■ buttons will turn OFF, and recording will stop.

* The F4 function button (STOP) can also be used to stop recording.

After a brief pause, the Audio player screen will be shown in the LCD display.



Press the F4 function button (PLAY) to audition the recording before saving.

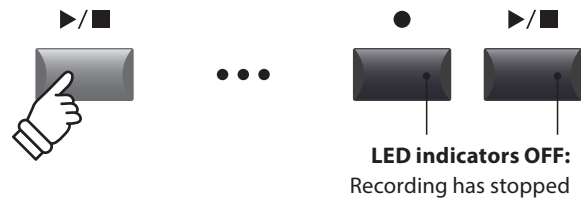


* Press the ● and ►/■ recorder control buttons simultaneously to erase the recorded audio file from memory.





6. Selecting the save function, entering the audio file name

Press the F3 function button (SAVE).

The save audio screen will be shown in the LCD display.

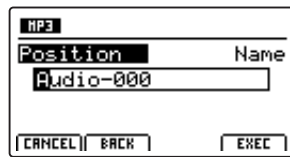

Turn control knobs A and B to move the cursor position and select the characters for the audio file name.

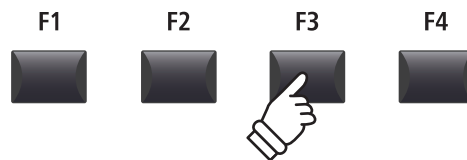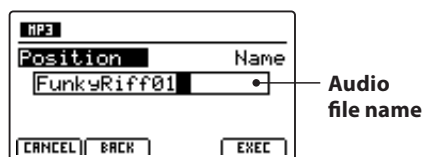


* Saved audio files are limited to a maximum name length of 18 characters.

* The saved audio file will be stored in the root folder of the USB memory device. It is not possible to store the file in a different folder.

7. Saving the audio file

Press the F4 function button (EXEC).


The save audio confirmation screen will be shown in the LCD display.

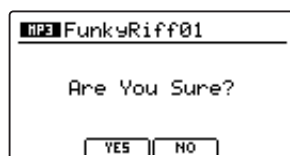

Press the F2 button (YES) to confirm the save audio operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the save operation.

* To prevent data loss, avoid turning the power OFF while the MP11SE is saving files to USB memory.

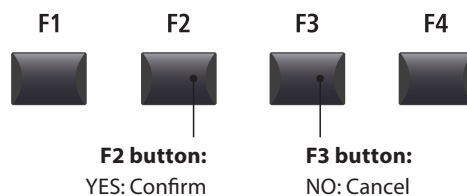

2 Playing an audio file

The MP11SE is also capable of playing MP3 and WAV audio files stored on a USB memory device. This function allows performing musicians to play along with professional backing tracks, or conveniently learn the chords or melody for a new piece.

■ Audio Player supported format specifications

Audio Format	Specifications	Bitrate
MP3	32 kHz/44.1 kHz/48 kHz, Mono/Stereo	8-320 kbit/s (fixed & variable)
WAV	32 kHz/44.1 kHz/48 kHz, Mono/Stereo, 8 bit/16 bit	-

* MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
MP3 codec is Copyright (c) 1995-2007, SPIRIT

■ Preparing the USB memory device

Prepare a selection of MP3 or WAV audio files, copying the data to a USB memory device.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.



1. Connecting a USB memory device

Connect the USB memory device to the USB to Device port.



The USB device will be scanned.



2. Turning the Recorder mode ON

Press the RECORDER section's ON/OFF button to turn Recorder mode ON.

The LED indicator for the RECORDER section's ON/OFF button will turn ON, and the Audio recorder screen will be shown in the LCD display.

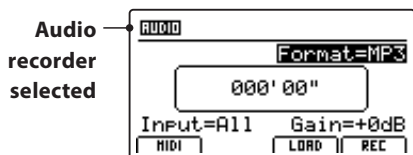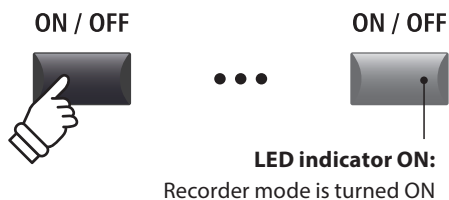


* If the MIDI recorder screen is shown, press the F1 function button (AUDIO) to select the Audio recorder.

3. Selecting the Load Audio function


Press the F3 function button (LOAD).

A listing of the MP3 files stored in the root folder of the USB device will be shown in the LCD display.

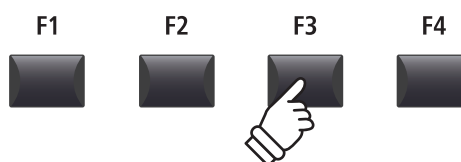

■ USB device file/folder listing screen

The MP11SE's file/folder listing screen lists relevant files and folders stored in the root of the USB device.

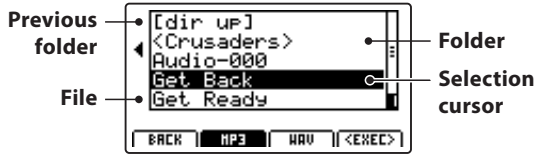



Press the CURSOR ▲▼ buttons to move the selection cursor.

* Control knob A can also be used to move the selection cursor.

Press the F3 or F2 function buttons to alternate between showing WAV or MP3 format audio files.

* By default, MP3 files will be shown.

Press the F4 function button (EXEC) or +/YES button to select the file or enter the selected folder.

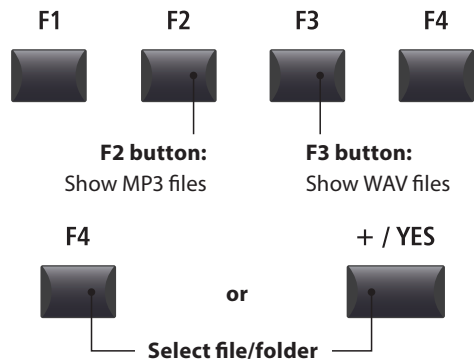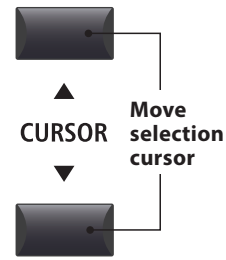


4. Selecting the audio file to load

Press the CURSOR ▲▼ buttons to select the desired audio file.




Press the F4 function button (EXEC) or +/YES button.

The audio player screen will be shown in the LCD display.

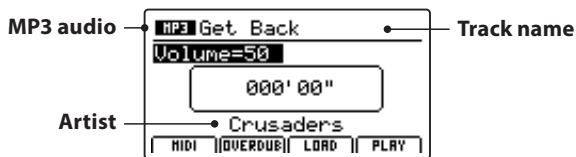

* If available, the audio file's metadata (ID3 tags etc.) will also be shown.

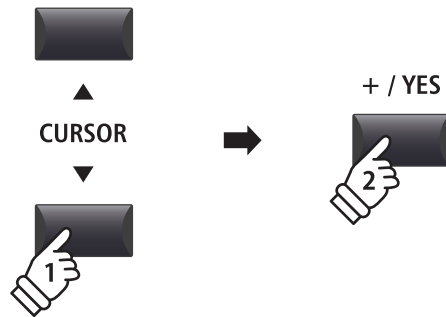


5. Starting audio file playback

Press the ►/■ recorder control button.

The LED indicator for the ►/■ button will turn ON, and the selected song will start to play.


* The F4 function button (PLAY) can also be used to start song playback.

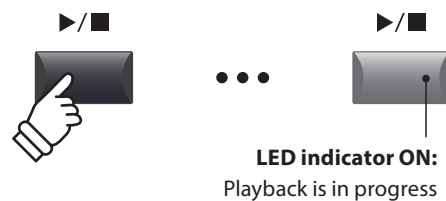

■ Moving the playback position (seek)

Press the ◀◀ or ▶▶ recorder control buttons to rewind or fast-forward the playing position of the audio file.

* The playback position can be moved both before and during playback.

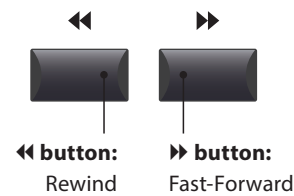

6. Stopping audio file playback


While an audio file is playing:

Press the ▶/■ recorder control button.

The LED indicator for the ▶/■ button will turn OFF, and audio file playback will stop.

Press the ▶/■ button again to continue playback from the stopped position, or the ◀ button to reset the playback position to the beginning of the audio file.

* The F4 function button (STOP) can also be used to reset audio playback.

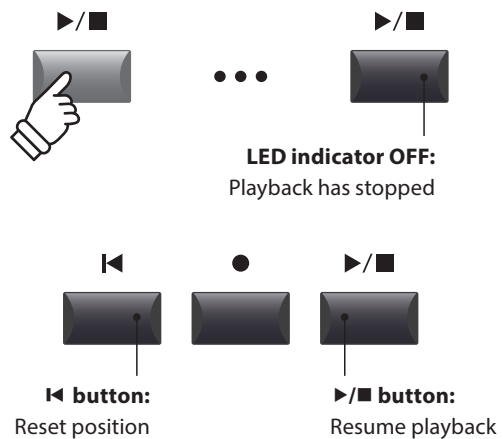

■ A-B Repeat function

The A-B Repeat function allows one section of an audio file to be repeated continuously (looped). This function can be activated both before and during audio file playback.

Press the A↔B recorder control button once to set the start point of the loop.


The LED indicator for the A↔B button will start to flash.

Press the A↔B button again to set the end point of the loop.

The LED indicator for the A↔B button will turn ON and the specified section will repeat continuously.

Press the A↔B button once again to cancel the loop.

The LED indicator for the A↔B button will turn OFF and normal playback will resume.

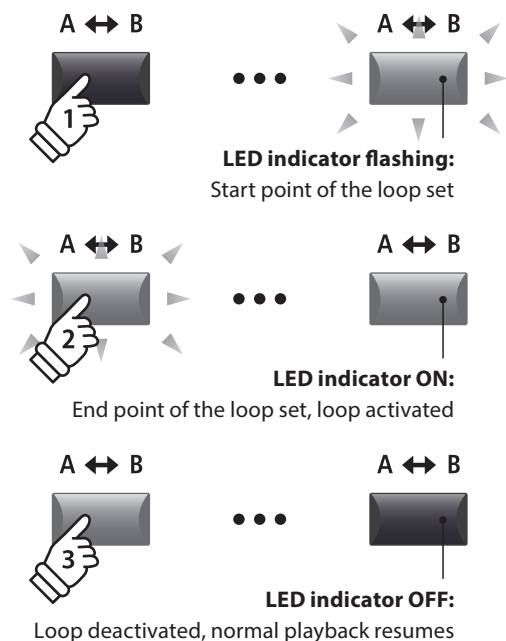

■ Chain Play mode

Chain Play mode allows all audio files stored in a folder to be played continuously, in sequence.

Press and hold the ▶/■ recorder control button.

The Chain Play icon will be shown in the LCD display, and the audio files will start to play continuously, in sequence.



3 Overdubbing an audio file

The overdub function adds supplementary recording(s) to an existing audio file, facilitating simple multi-track recordings to be produced directly on the instrument.

Each overdub is recorded to a temporary file (i.e. the original audio file is not modified), allowing an unlimited number of overdubs that to be made before eventually saving the final recording.

1. Connecting a USB memory device

Connect the USB memory device to the USB to Device port.



The USB device will be scanned.



2. Turning the Recorder mode ON

Press the RECORDER section's ON/OFF button to turn Recorder mode ON.

The LED indicator for the RECORDER section's ON/OFF button will turn ON, and the Audio recorder screen will be shown in the LCD display.

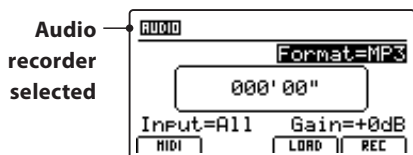
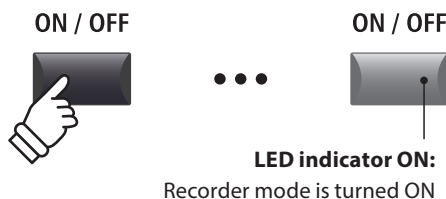


* If the MIDI recorder screen is shown, press the F1 function button (AUDIO) to select the Audio recorder.

3. Selecting the Load Audio function

Press the F3 function button (LOAD).

A listing of the MP3 files stored in the root folder of the USB device will be shown in the LCD display.

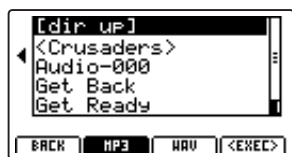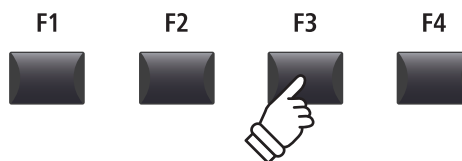


4. Selecting the audio file to load

Press the CURSOR ▲▼ buttons to select the desired audio file.



Press the F4 function button (EXEC) or +/YES button.

The audio player screen will be shown in the LCD display.

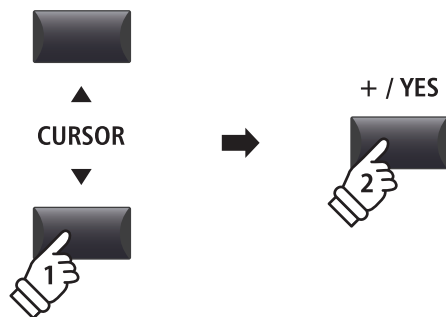



3 Overdubbing an audio file (cont.)

5. Selecting the overdub function and file format

Press the F2 function button (OVERDUB).

The overdub file format selection screen will be shown in the LCD display.

Turn control knob B to select the desired overdub file format, and control knob A to adjust the volume of the source audio.

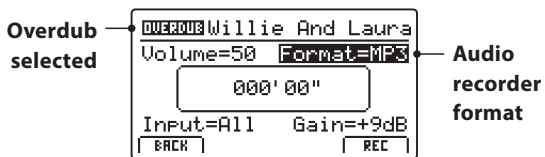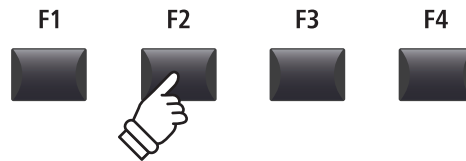

- * MP3 audio files require less storage space than WAV audio files.
- * A 1 GB USB memory device can store over 12 hours of MP3 audio data.


Selecting the audio recorder input, adjusting gain level

Turn control knob C to select the desired audio recorder input.

Turn control knob D to adjust the gain level of the overdub.

Increasing the audio recorder gain level parameter may be useful when recording quieter passages.

Input	Description
All	Record the keyboard sound and the LINE IN sound.
Line	Record the LINE IN sound only.

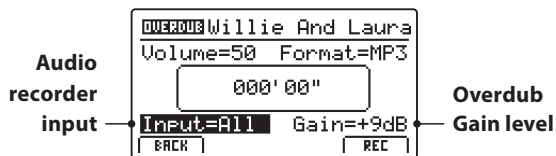



- * The gain level can be set within the range of -18 dB ~ +18 dB.

6. Starting the overdub (standby)

Press the ● recorder control button.

The LED indicator for the ● button will start to flash, to indicate that the recorder is in standby mode.



- * The F4 function button (REC) can also be used to engage standby mode.
- * Depending on the USB memory device connected, there may be a brief delay before standby mode is engaged.

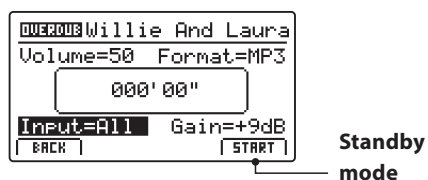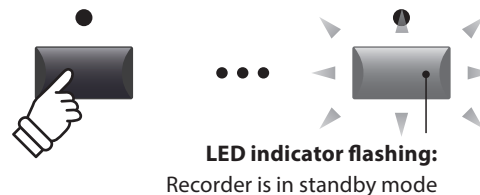

7. Starting the overdub (record)

Press a key on the keyboard.

The LED indicators for the ● and ▶/■ buttons will turn ON, the time counter shown in the centre of the LCD will be to increase, and overdubbing will start.

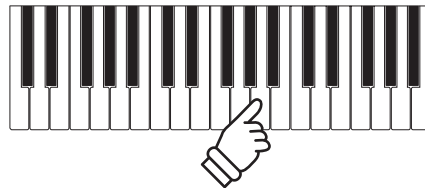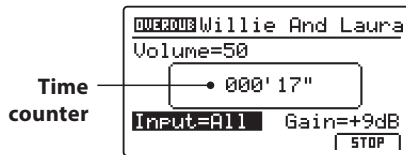

LED indicators ON:
Overdubbing is in progress

* Overdubbing can also be started by pressing the ▶/■ button. This allows a rest period or empty bar to be inserted at the beginning of the song.

* The metronome can be enabled before overdubbing to assist with timing etc. When enabled, a one bar count-in will be added before overdubbing begins.


8. Stopping and auditioning the overdub

Press the ▶/■ recorder control button.

The LED indicators for the ● and ▶/■ buttons will turn OFF, and overdubbing will stop.

* The F4 function button (STOP) can also be used to stop overdubbing.

After a brief pause, the Audio player screen will be shown in the LCD display.

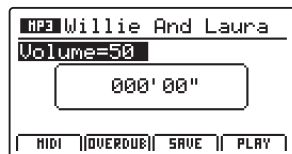

Audition overdub

Press the F4 function button (PLAY) to audition the overdub before saving.



LED indicators OFF:
Recording has stopped


* Press the ● and ▶/■ recorder control buttons simultaneously to erase the overdubbed audio file from memory.



9. Selecting the save function, entering the audio file name


Press the F3 function button (SAVE).

The save audio screen will be shown in the LCD display.

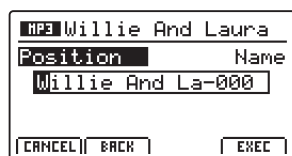

Audio file name

Turn control knobs A and B to move the cursor position and select the characters for the audio file name.

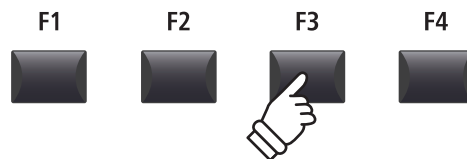


* Saved audio files are limited to a maximum name length of 18 characters.

* The saved audio file will be stored in the root folder of the USB memory device. It is not possible to store the file in a different folder.

10. Saving the dubbed file

Press the F4 function button (EXEC).


The save audio confirmation screen will be shown in the LCD display.

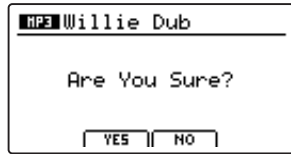

Press the F2 button (YES) to confirm the save audio operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the save operation.

* To prevent data loss, avoid turning the power OFF while the MP11SE is saving files to USB memory.

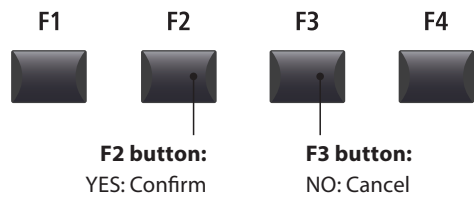

4 Converting a recorder song to an audio file

This function allows recorder songs stored in internal memory to be played back and saved (converted) as an audio file to a USB device in either MP3 or WAV format.

1. Connecting a USB memory device

Connect the USB memory device to the USB to Device port.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.


The USB device will be scanned.




2. Selecting the MIDI to Audio function

After selecting the MIDI recorder and recording a song:

Press the F2 function button (PAGE▼) to show the additional MIDI recorder functions.

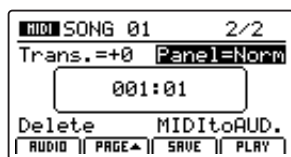

Turn control knob D to highlight the MIDI to Audio function.

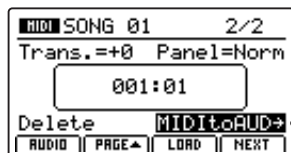


MIDI to AUDIO highlighted

* The CURSOR buttons can also be used to move the selection cursor.

Press the +/YES button to select the MIDI to Audio function.

The MIDI to Audio screen will be shown in the LCD display.


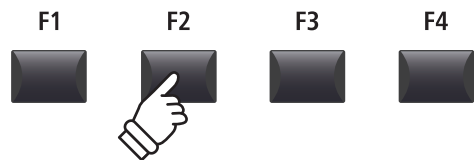


+ / YES



3. Selecting the MIDI to Audio file format

Turn control knob B to select the desired MIDI to Audio file format, and control knob A to adjust the volume of the song playback.

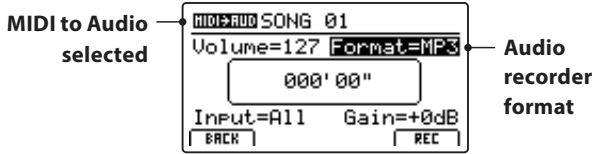

- * MP3 audio files require less storage space than WAV audio files.
- * A 1 GB USB memory device can store over 12 hours of MP3 audio data.


Selecting the audio recorder input, adjusting gain level

Turn control knob C to select the desired audio recorder input.

Turn control knob D to adjust the gain level of the MIDI to Audio conversion/recording.

Input	Description
All	Record the keyboard sound and the LINE IN sound.
Line	Record the LINE IN sound only.

Increasing the audio recorder gain level parameter may be useful when recording quieter passages.

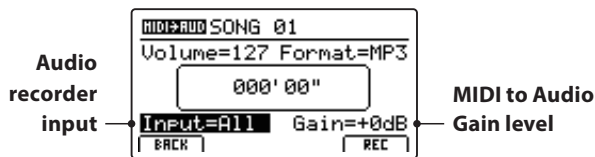



- * The gain level can be set within the range of -18 dB ~ +18 dB.

4. Starting the conversion (standby)

Press the ● recorder control button.

The LED indicator for the ● button will start to flash, to indicate that the recorder is in standby mode.


- * The F4 function button (REC) can also be used to engage standby mode.
- * Depending on the USB memory device connected, there may be a brief delay before standby mode is engaged.

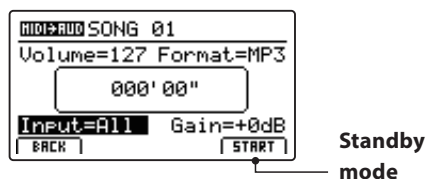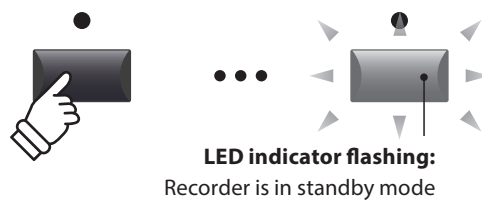

5. Starting the conversion (record)

Press the ▶/■ recorder control button.

The LED indicators for the ● and ▶/■ buttons will turn ON, the time counter shown in the centre of the LCD will begin to increase, and the conversion will start.

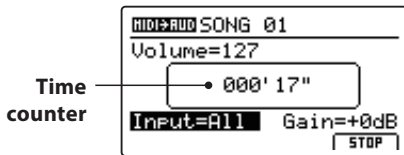

Conversion will stop automatically when the end of the recorder song is reached.

* The ▶/■ button or F4 function button (STOP) can also be used to stop the conversion before the end of the song.

The LED indicators for the ● and ▶/■ buttons will turn OFF, and the conversion will stop.



* Conversion can also be started by pressing the F4 function button (START).


* Notes played on the keyboard will also be recorded to the audio file..




6. Selecting the save function, entering the audio file name

Press the F3 function button (SAVE).


The save audio screen will be shown in the LCD display.

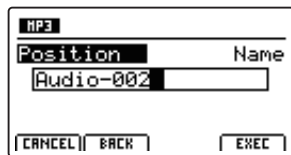

Turn control knobs A and B to move the cursor position and select the characters for the audio file name.

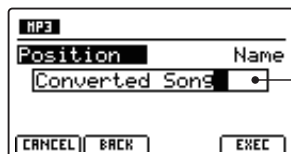

Audio file name

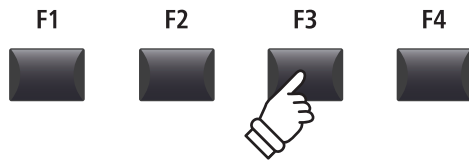


* Saved audio files are limited to a maximum name length of 18 characters.

* The saved audio file will be stored in the root folder of the USB memory device. It is not possible to store the file in a different folder.

7. Saving the converted audio file

Press the F4 function button (EXEC).


The save confirmation screen will be shown in the LCD display.

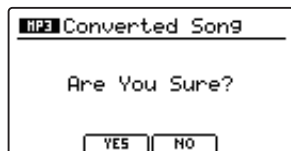

Press the F2 button (YES) to confirm the save audio operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the save operation.

* To prevent data loss, avoid turning the power OFF while the MP115E is saving files to USB memory.

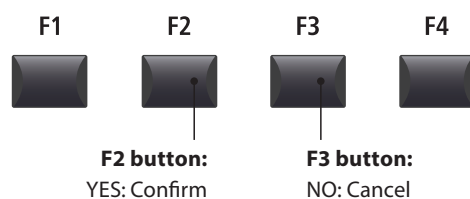

Metronome

The Metronome function provides a steady beat to aid practicing the piano at a consistent tempo. In addition to regular metronome beats in various time signatures, the MP11SE also features a selection of drum rhythms to accompany most playing styles and musical genres.



1 Click mode

In Click mode, the metronome function provides a simple click track in a number of different time signatures.

■ Activating the metronome function

Press the METRONOME button.

The LED indicator for the METRONOME button will turn ON to indicate that the metronome function is in use, and the Metronome screen will be shown in the LCD display.

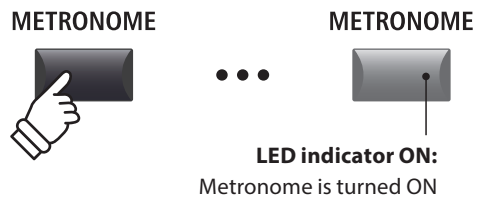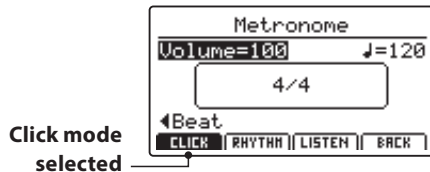


* The metronome will be set to Click mode by default.


■ Starting and Stopping the metronome

Press the F3 function button (LISTEN)

The LISTEN icon will become highlighted and the metronome will start counting a 4/4 beat at 120 bpm (beats per minute).


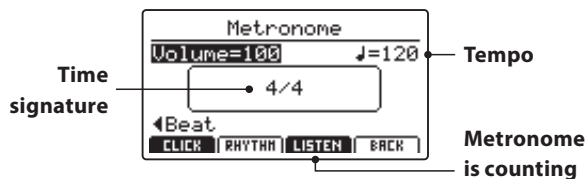


Press the F3 function button again to stop the metronome.

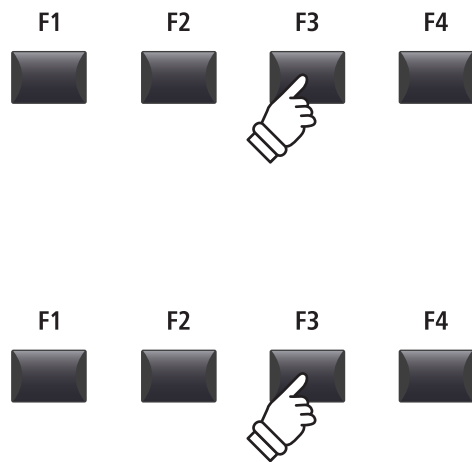

■ Adjusting the Metronome volume, tempo, and time signature (beat)

Turn control knobs A and B to adjust the metronome volume and tempo, and knob C to change the time signature (beat).

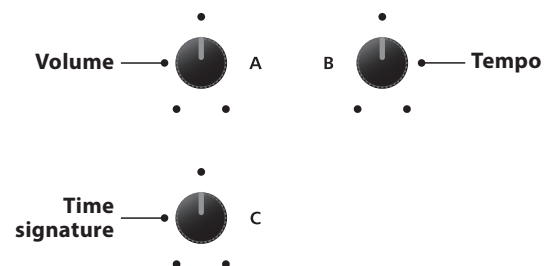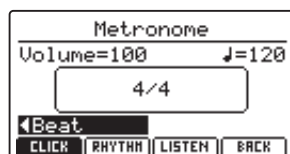

* The metronome tempo can be adjusted within the range of 30-300 bpm (60-600 bpm for eighth note time signatures).

* There are ten different types of beat/time signature available: 1/4, 2/4, 3/4, 4/4, 5/4, 3/8, 6/8, 7/8, 9/8, and 12/8.


* Preferred metronome settings can be saved to a SETUP or POWERON memory for immediate recall.

1 Click mode (cont.)

■ Returning to the previous screen (BACK function)

While the metronome is counting:

Press the F4 function button (BACK) to return to the previous screen without stopping or deactivating the metronome.

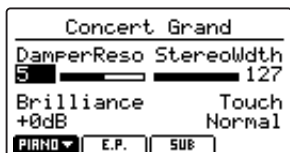

Press and hold the METRONOME button again to show the Metronome screen in the LCD display.



2 Rhythm mode



In Rhythm mode, the metronome function provides a more musically inspiring drum track. There are 100 different drum patterns available, grouped into 13 categories.

* For a full listing of available drum patterns, please refer to page 90.

■ Activating the metronome function

Press the METRONOME button.

The LED indicator for the METRONOME button will turn ON to indicate that the metronome function is in use, and the Metronome screen will be shown in the LCD display.

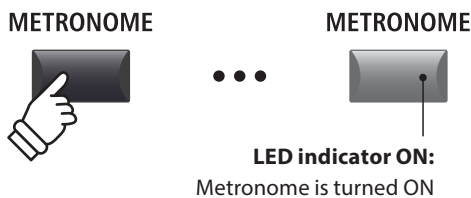
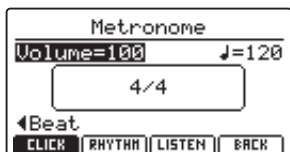


* The metronome will be set to Click mode by default.

■ Selecting Rhythm mode

Press the F2 function button (RHYTHM)

The RHYTHM icon will become highlighted, and the currently selected drum rhythm category and variation will be shown in the LCD display.

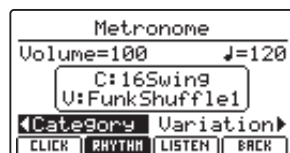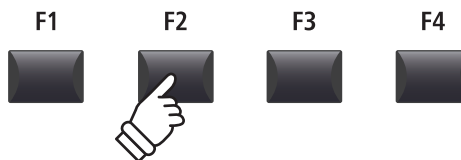


Rhythm mode selected


Starting and Stopping the drum rhythm

Press the F3 function button (LISTEN)

The LISTEN icon will become highlighted and the currently selected drum rhythm category and variation will start to play.

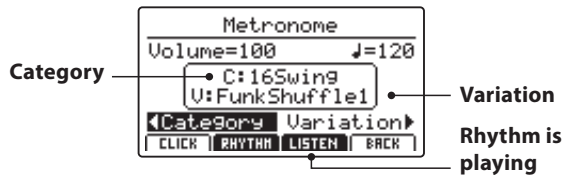



Press the F3 function button again to stop the drum rhythm.

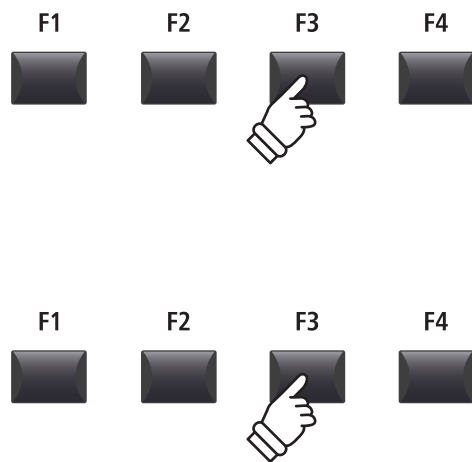

Adjusting the drum rhythm volume, tempo, category, and variation

Turn control knobs A and B to adjust the drum rhythm volume and tempo.

Turn control knobs C and D to select the drum rhythm category and variation.

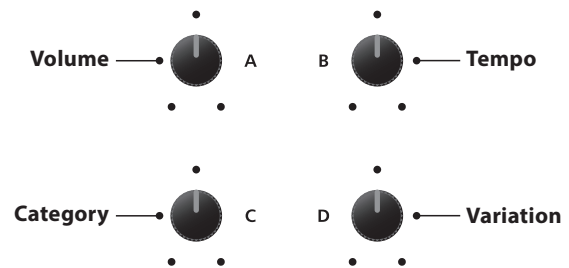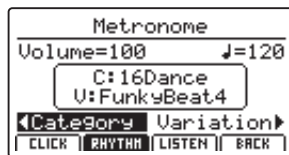

* The metronome tempo can be adjusted within the range of 30-300 bpm.

* For a full listing of available drum patterns, please refer to page 90.

* Preferred drum rhythm settings can be saved to a SETUP or POWERON memory for immediate recall.


Returning to the previous screen (BACK function)

While the drum rhythm is playing:

Press the F4 function button (BACK) to return to the previous screen without stopping or deactivating the metronome.



Press and hold the METRONOME button again to show the Metronome screen in the LCD display.

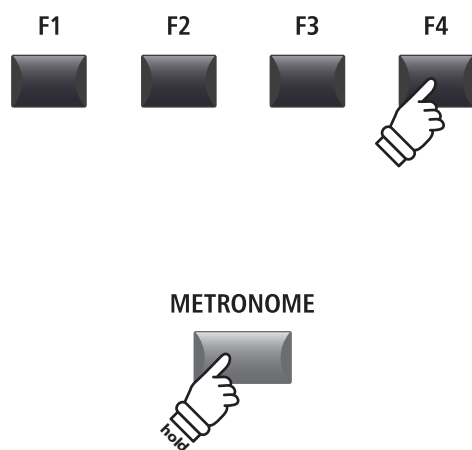

2 Rhythm mode (cont.)

■ Drum rhythm categories and variations

16 Swing	
1	Funk Shuffle 1
2	Funk Shuffle 2
3	Hip Hop 1
4	Hip Hop 2
5	Hip Hop 3
6	Hip Hop 4
7	16 Shuffle 1
8	16 Shuffle 2
9	16 Shuffle 3

16 Funk	
10	Funky Beat 1
11	Funky Beat 2
12	Funky Beat 3
13	Funk 1
14	Funk 2
15	Funk 3

16 Straight	
16	Jazz Funk
17	16 Beat 1
18	16 Beat 2
19	16 Beat 3
20	16 Beat 4
21	Ride Beat 4
22	Rim Beat
23	Roll Beat
24	Light Ride 1
25	Dixie Rock

16 Latin	
26	Surdo Samba
27	Latin Groove
28	Light Samba
29	Songo
30	Samba
31	Merenge

16 Dance	
32	Funky Beat 4
33	16 Beat 5
34	Disco 1
35	Disco 2
36	Techno 1
37	Techno 2
38	Techno 3
39	Heavy Techno

16 Ballad	
40	Ballad 1
41	Ballad 2
42	Ballad 3
43	Ballad 4
44	Ballad 5
45	Light Ride 2
46	Electro Pop 1
47	Electro Pop 2
48	16 Shuffle 4

8 Ballad	
49	Slow Jam
50	50's Triplet
51	R&B Triplet

8 Straight	
52	8 Beat 1
53	8 Beat 2
54	Smooth Beat
55	Pop 1
56	Pop 2
57	Ride Beat 1
58	Ride Beat 2
59	Ride Beat 3
60	Slip Beat

8 Rock	
61	Jazz Rock
62	8 Beat 3
63	Rock Beat 1
64	Rock Beat 2
65	Rock Beat 3
66	Rock Beat 4
67	Blues/Rock
68	Heavy Beat
69	Hard Rock
70	Surf Rock
71	R&B

8 Swing	
72	Motown 1
73	Fast Shuffle
74	Motown 2
75	Country 2 Beat

Triplet	
76	Triplet Rock 1
77	Triplet Rock 2
78	Bembe
79	Rock Shuffle 1
80	Rock Shuffle 2
81	Boogie
82	Triplet 1
83	Triplet 2
84	Reggae
85	Gospel Ballad
86	Waltz

Jazz	
87	H.H. Swing
88	Ride Swing
89	Fast 4 Beat
90	Afro Cuban
91	Jazz Waltz 1
92	Jazz Waltz 2
93	5/4 Swing

8 Latin	
94	H.H. Bossa
95	Ride Bossa
96	Beguine
97	Mambo
98	Cha Cha
99	Tango
100	Habanera

3 Recording with the metronome


Recording with the metronome is a convenient way to maintain consistent timing and rhythm while playing. This is especially important when integrating recordings into a sequencer or DAW.

The explanation below uses the internal song recorder as an example, however the procedure for recording with the metronome to an MP3/WAV audio file is identical.

1. Turning the Recorder mode ON

Press the RECORDER section's ON/OFF button to turn Recorder mode ON.



The LED indicator for the RECORDER section's ON/OFF button will turn ON, and the MIDI recorder screen will be shown in the LCD display.

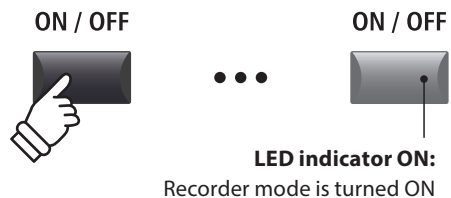

2. Activating the metronome function



Press the METRONOME button.

The LED indicator for the METRONOME button will turn ON to indicate that the metronome function is in use, and the Metronome screen will be shown in the LCD display.

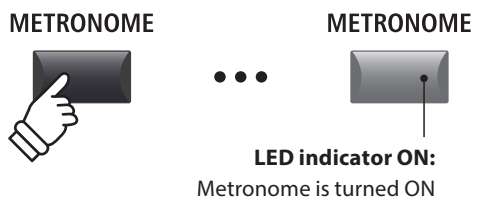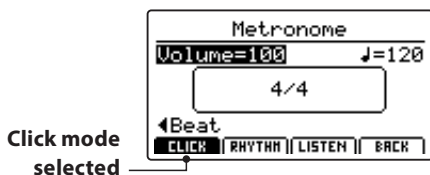

3. Adjusting the Metronome volume, tempo, and time signature (beat)

Turn control knobs A and B to adjust the metronome volume and tempo, and knob C to change the time signature (beat).

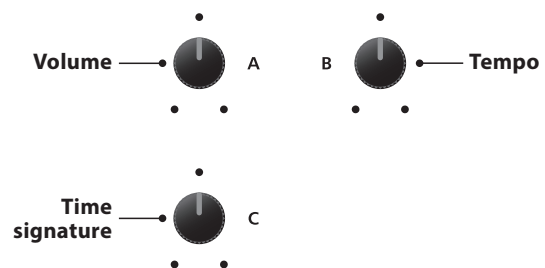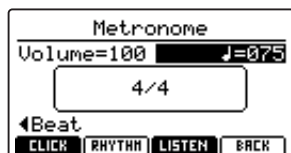


Press the F3 function button (LISTEN) to listen to the current metronome settings.

* The metronome tempo can be adjusted within the range of 30-300 bpm (60-600 bpm for eighth note rhythms).

* There are ten different types of beat/time signature available: 1/4, 2/4, 3/4, 4/4, 5/4, 3/8, 6/8, 7/8, 9/8, and 12/8.


* Preferred metronome settings can be saved to a SETUP or POWERON memory for immediate recall.

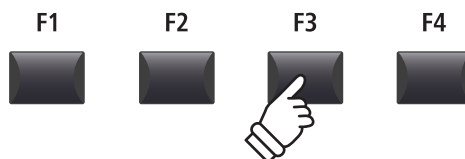

4. Returning to the Recorder function

Press the F4 function button (BACK) to return to the recorder function.

The LED indicator for the METRONOME button will remain lit, indicating that the metronome function is still activated.

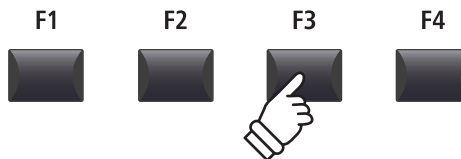

METRONOME



LED indicator remains ON:
Metronome is still activated

5. Starting the song recorder (standby mode)

Press the ● recorder control button.

The LED indicator for the ● button will start to flash, to indicate that the recorder is in standby mode.

* The F4 function button (REC) can also be used to engage standby mode.




LED indicator flashing:
Recorder is in standby mode

6. Starting the song recorder (recording)

Press the ▶/■ recorder control button or F4 button (REC).

The LED indicators for the ● and ▶/■ buttons will turn ON, a one bar count-in will be played, and recording will start.

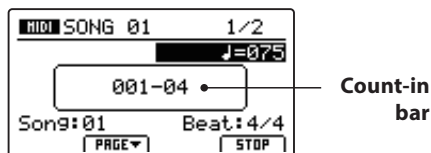

LED indicators ON:
Recording is in progress

* Recording can also be started by pressing a key on the keyboard. In this case, recording will start immediately and the one bar count-in will not be played.

* When recording with the metronome in Click mode, the metronome sound will not be heard during playback. However, when recording with the metronome in Rhythm mode, the drum pattern will be heard during playback.

7. Stopping the song recorder

Press the ▶/■ recorder control button.


The LED indicators for the ● and ▶/■ buttons will turn OFF, and recording will stop.

* The F4 function button (STOP) can also be used to stop recording.



LED indicators OFF:
Recording has stopped

After a brief pause, the MIDI player screen will be shown in the LCD display.

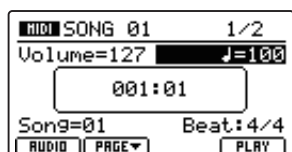

* The maximum recording capacity is approximately 90,000 notes, with button and pedal presses also counted as one note.

* If the maximum recording capacity is reached during recording, the recorder will stop automatically.

* Recorder songs will remain in memory after the power is turned OFF.

Overview of the USB Menu

The USB Menu contains functions to load, save, delete, and rename the various types of MP11SE data stored on a USB memory device. It is also possible to format the memory device, erasing all stored data.

■ MP11SE data types

Data type	Description	File extension
SOUND	A backup of a single SOUND's parameters.	.km5
SETUP	A backup of a single SETUP memory.	.km6
SMF	A standard MIDI format (SMF) song file.	.mid
Song	A MP3/WAV audio file or SMF song file.	.mp3, .wav, .mid
All Sound	A backup of all the MP11SE's stored SOUND parameters.	.km2
All Setup	A backup of all the MP11SE's SETUP memories.	.km3
All Backup	A backup of all the MP11SE's SETUP memories, SOUND parameters, and SYSTEM settings.	.km4


■ Entering the USB Menu

Connect a USB memory device.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.

Press the USB button.

The LED indicator for the USB button will turn ON, and the USB Menu will be shown in the LCD display.

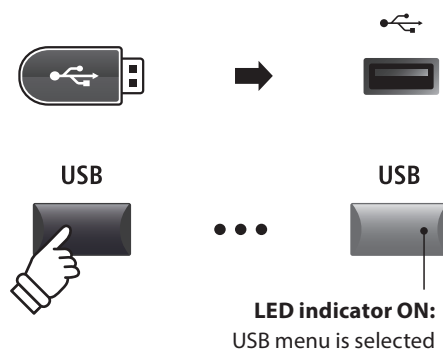


■ Selecting USB functions

Press the CURSOR buttons then the +/YES button or F4 function button (NEXT) to select and enter the desired category page.


Use the same control method again to select each function.

Press the -/NO or F1 function button (BACK) to return to the previous screen.

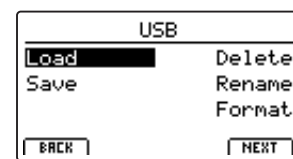

■ USB device file/folder listing screen


The MP11SE's file/folder listing screen lists relevant files and folders stored in the root of the USB device.

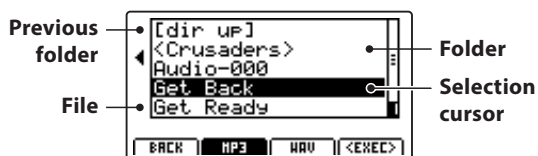

Press the CURSOR ▲▼ buttons to move the selection cursor.

* Control knob A can also be used to move the selection cursor.

Press the F4 function button (EXEC) or +/YES button to select the file or enter the selected folder.

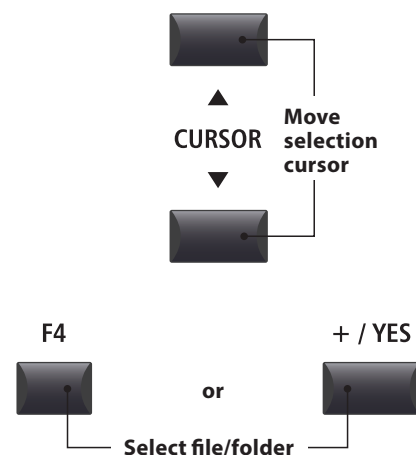

USB Menu functions

1 Load

These functions allow data stored on a USB memory device to be loaded into the instrument's internal memory.



Load functions will overwrite the existing data stored in internal memory. Exercise caution when using these functions in order to prevent accidental data loss.

1. Load One Sound

This function loads a SOUND file stored on a USB memory, replacing the preset parameters for that specific sound.

After selecting this function, select the desired SOUND file from the file/folder listing screen.

Finally, press the F2 or F3 function buttons to confirm or cancel the load operation.

* After loading, the SOUND will be selected automatically, and all other sections will be turned OFF. SETUPs will also be turned OFF.

3. Load SMF

This function loads an SMF song file stored on a USB memory device into the MP11SE's internal song recorder memory.

After selecting this function, select the desired SMF file from the file/folder listing screen. Then use the control knobs A, C, and D to specify the destination song memory and keyboard/drum channels.



Finally, press the F2 or F3 function buttons to confirm or cancel the load operation.

* After loading, the MIDI record/playback screen will be shown in the LCD display and the destination song memory will be selected automatically.

* For more information about the song recorder, please refer to page 65.

5. Load All Setup

This function restores all SETUP memories from an All Setup file stored on a USB memory device.

After selecting this function, select the desired All Setup file from the file/folder listing screen.

Finally, press the F2 or F3 function buttons to confirm or cancel the load operation.

2. Load One Setup

This function loads a SETUP file stored on a USB memory device into one of the MP11SE's 208 SETUP memories.

After selecting this function, select the desired SETUP file from the file/folder listing screen. Then press the BANK and SETUP memory buttons to specify the destination SETUP memory.

Finally, press the F2 or F3 function buttons to confirm or cancel the load operation.

* After loading, the SETUP will be selected automatically.

4. Load All Sound

This function replaces the preset parameters for all internal sounds from an All Sound file stored on a USB memory device.

After selecting this function, select the desired All Sound file from the file/folder listing screen.

Finally, press the F2 or F3 function buttons to confirm or cancel the load operation.

6. Load All Backup

This function restores the parameters for all SETUP memories, SOUND parameters, and SYSTEM settings from an All Backup file stored on a USB memory device.

After selecting this function, select the desired All Backup file from the file/folder listing screen.

Finally, press the F2 or F3 function buttons to confirm or cancel the load operation.

2 Save

These functions allow data stored in the instrument's internal memory to be saved to a USB memory device.

1. Save One Sound



This function saves the currently selected sound's parameters to a USB memory device.

* If the MIDI section is currently selected, the current PIANO section sound will be saved automatically.

After selecting this function, a confirmation screen will be shown in the LCD display. Press the F4 function button (NEXT) to continue.

Enter a name for the saved SOUND file using control knobs A and B, then press the F4 function button (EXEC).

Finally, press the F2 or F3 function buttons to confirm or cancel the save operation.

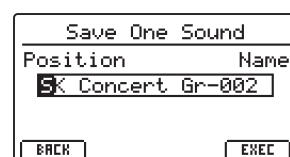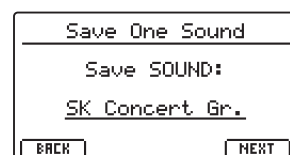



2. Save One Setup

This function saves a SETUP memory to a USB memory device.

After selecting this function, a confirmation screen will be shown in the LCD display. Press the BANK and SETUP memory buttons to specify the destination SETUP memory, then press the F4 function button (NEXT) to continue.

Enter a name for the saved SETUP file using control knobs A and B, then press the F4 function button (EXEC).

Finally, press the F2 or F3 function buttons to confirm or cancel the save operation.

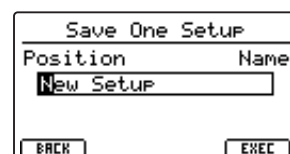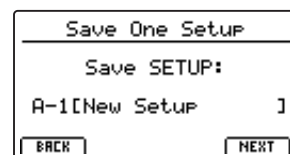


3. Save SMF

This function saves an internal recorder song to a USB memory device in SMF format.

After selecting this function, the Save SMF screen will be shown in the LCD display. Select the song memory to be saved using control knob C, and enter a name for the saved SMF file using control knobs A and B, then press the F4 function button (EXEC).

Finally, press the F2 or F3 function buttons to confirm or cancel the save operation.

* For more information about the song recorder, please refer to page 65.

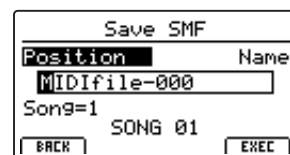

4. Save All Sound

This function saves the parameters for all internal sounds to a USB memory device.

After selecting this function, enter a name for the saved AllSound file using control knobs A and B, then press the F4 function button (EXEC).

6. Save All Backup

This function saves the parameters for all internal sounds, all SETUP memories, and all SYSTEM settings to a USB memory device.

After selecting this function, enter a name for the saved AllBackup file using control knobs A and B, then press the F4 function button (EXEC).

5. Save All Setup

This function saves all of the SETUP memories stored in the instrument to a USB memory device.

After selecting this function, enter a name for the saved AllSetup file using control knobs A and B, then press the F4 function button (EXEC).

3 Delete

These functions allow data stored on a USB memory device to be deleted.




Delete functions will erase data from the connected USB memory device.

Exercise caution when using these functions in order to prevent accidental data loss.

1. Selecting the type of file to delete

Press the CURSOR buttons then the +/YES button or F4 function button (NEXT) to select the type of file to be deleted.


Press the -/NO or F1 function button (BACK) to return to the previous screen.

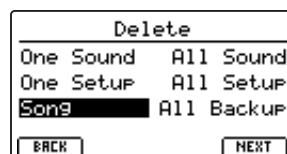

2. Selecting the file to delete

Turn control knob A or press the CURSOR buttons to move the selection cursor. Then press the +/YES button or F4 function button (EXEC) to delete the file.

Press the -/NO or F1 function button (BACK) to return to the previous screen.

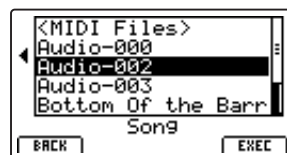

3. Confirming the file deletion

Press the F2 function button (YES) or F3 function button (NO) to confirm or cancel the delete file operation.

After deleting the file, the main USB Menu will screen will be shown in the LCD display.




4 Rename

These functions allow data stored on a USB memory device to be renamed.

1. Selecting the type of file to rename

Press the CURSOR buttons then the +/YES button or F4 function button (NEXT) to select the type of file to be renamed.


Press the -/NO or F1 function button (BACK) to return to the previous screen.

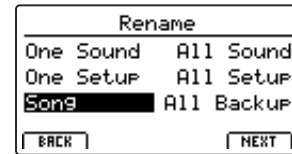

2. Selecting the file to rename

Turn control knob A or press the CURSOR buttons to move the selection cursor. Then press the +/YES button or F4 function button (EXEC) to rename the file.

Press the -/NO or F1 function button (BACK) to return to the previous screen.

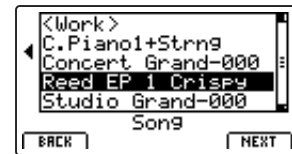

3. Renaming the file


Turn control knobs A and B to move the position of the cursor and change the character, then press the F4 function button (EXEC) to rename the file.



4. Confirming the file rename

Press the F2 function button (YES) or F3 function button (NO) to confirm or cancel the rename file operation.

After renaming the file, the main USB Menu will screen will be shown in the LCD display.

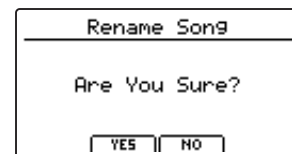

5 Format

This function allows a USB memory device to be formatted, erasing all stored data.




The Format function will erase all data stored on the connected USB memory device. Exercise caution when using this function in order to prevent accidental data loss.

1. Selecting the Format function

Press the CURSOR buttons then the +/YES button or F4 function button (NEXT) to select the format function.

Press the -/NO or F1 function button (BACK) to return to the previous screen.

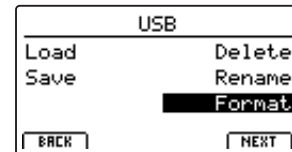


2. First confirmation prompt

The first confirmation prompt will be shown in the LCD display.

Press the +/YES button or F4 function button (EXEC) to select the proceed with the format function.

Press the -/NO or F1 function button (BACK) to return to the previous screen.

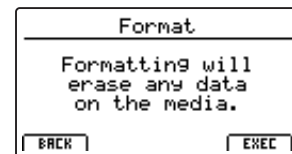


3. Final confirmation prompt

A final confirmation prompt will be shown in the LCD display.

Press the +/YES button or F4 function button (EXEC) to select the proceed with the format function.



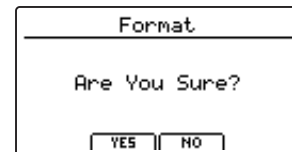


Press the -/NO or F1 function button (BACK) to return to the previous screen.



Overview of the SYSTEM Menu

The SYSTEM menu contains parameters and settings that affect the general operation of the MP11SE. These settings are grouped into six categories: Utility, Pedal, MIDI, Offset, User Edit, and Reset. SYSTEM parameters will be memorised automatically when instrument is turned OFF.



SYSTEM Menu parameters

Category	Parameters
Utility 	System Tuning, Eff. SW Mode, Knob Action, Volume Fader Action, LCD Contrast, LCD Reverse, Input Level, Audio Output Mode, Lock SW Mode, Auto Power Off
Pedal/Mod. 	Right Pedal Mode, Center Pedal Mode, Left Pedal Mode, Half Pedal Adjust, FSW Pedal Mode, FSW Pedal Polarity, Modulation Wheel Curve, EXP Pedal Curve, EXP Pedal Calibrate
MIDI 	System Channel, Key to MIDI, Key to USB, MIDI to MIDI, MIDI to USB, USB to MIDI, SETUP Program, SETUP Bank, SETUP Volume, SETUP Knobs, Receive Mode, PIANO Channel, E.PIANO Channel, SUB Channel
Offset 	EQ Offset On/Off, Reverb Offset, EQ Offset Low, EQ Offset High, EQ Offset Mid1, EQ Offset Mid2
User Edit 	User Touch Curve, User Temperament, User KeyVolume, User Stretch, User Voicing
Reset	One Sound, All Sound, One Setup, All Setup, System, Power On, Recorder, Factory

Entering the SYSTEM Menu


Press the SYSTEM button.

The LED indicator for the SYSTEM button will turn ON, and the SYSTEM Menu will be shown in the LCD display.

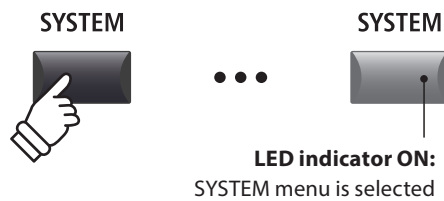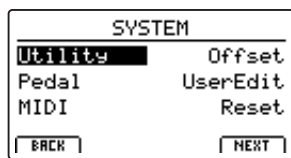

Selecting the SYSTEM parameter category

Press the CURSOR buttons to select, and then the F4 function button (NEXT) or +/YES button to enter the desired category.

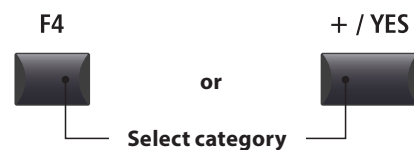


Adjusting SYSTEM parameters

Turn the four control knobs (A, B, C, D) to adjust the parameters assigned to those knob.

Parameters can also be adjusted by using the CURSOR buttons to move the selection cursor, and +/YES or -/NO buttons to increase or decrease the value of the selected parameter.

Press the F2 and F3 function buttons to cycle through the SYSTEM menu pages.

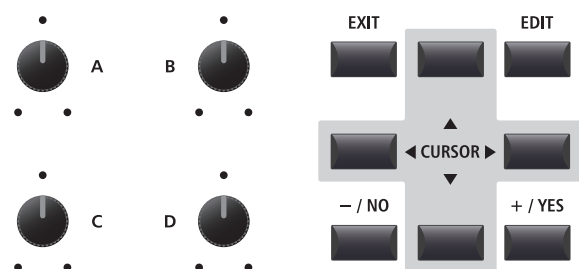

* The CURSOR ▲▼ buttons can also be used to cycle through pages.

* The adjusted SYSTEM parameters will be memorised automatically.

SYSTEM Menu parameters & functions

1 Utility

1. System Tuning

VALUE: 427.0 ~ 453.0 Hz

This parameter sets the global master tuning of the MP11SE in 0.5Hz increments.

* The default setting is A = 440.0 Hz

2. Eff. SW Mode

PRESET, TEMP., FIXED

This function determines whether selecting sounds affects the EFX, AMP, and REVERB button state and associated settings.

Mode	Description
Preset	ON/OFF state is recalled when selecting sounds.
Temp.	ON/OFF state is not recalled when selecting sounds.
Fixed	ON/OFF state and effect settings are not recalled when selecting sounds.

* The default setting is Preset.


Using the Eff.SW Mode 'Fixed' function to copy effects settings

The following procedure can be used to 'copy' favourite effects settings to multiple sounds within the same section.


1. First, select the sound with the desired effects settings.



2. Enter the SYSTEM:Utility menu and set Eff.SW Mode to Fixed.

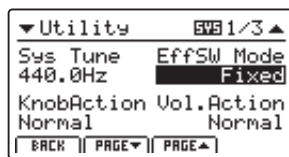


3. Next, select the sound to which the desired EFX settings should be applied.

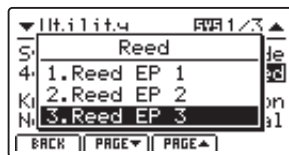

4. Then, store the sound (with the desired EFX settings) to memory.



5. Finally, restore the Eff.SW Mode to Preset.

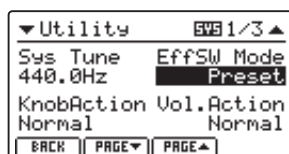

* The above procedure will 'copy' all EFX1/EFX and AMP settings, and the REVERB depth setting. Other settings will not be 'copied'.

3. Knob Action

NORMAL, CATCH

This parameter determines the adjustment behaviour of the four control knobs (A, B, C, D).

Mode	Description
Normal	Value changes immediately when control knob is turned.
Catch	Value does not change until control knob 'catches' the previously stored value, thus preventing unexpected jumps in parameter values.

* The default setting is Normal.

5. LCD Contrast

VALUE: 1 ~ 10

This parameter adjusts the contrast of the LCD display. The contrast becomes sharper as the value increases.

* The default setting is 5.

7. Input Level

VALUE: -18 dB ~ +18 dB

This parameter adjusts the gain of the MP11SE's LINE IN jacks.

If the output level of the external device is too high, reduce the value of this parameter. Alternatively, if the output is too low, increase the value of this parameter.

* The default setting is 0 dB.

9. Lock SW Mode

6 TYPES

This function determines which controls will be locked when the LOCK (🔒) button is pressed.

Mode	Description
Panel	The main control panel will be locked.
Bend	The pitch bend wheel will be locked.
Mod.	The modulation wheel will be locked.
Center	The centre pedal will be locked.
Left	The left pedal will be locked.
EXP	The expression pedal (EXP) will be locked.

* The default setting is Panel Lock.

4. Volume Fader Action

NORMAL, CATCH

This parameter determines the adjustment behaviour of the section volume faders.

Mode	Description
Normal	Volume changes immediately when fader is moved.
Catch	Volume does not change until fader 'catches' the previously stored volume value, thus preventing unexpected volume jumps.

* The default setting is Normal.

6. LCD Reverse

ON, OFF

This parameter inverts the black and white pixels of the LCD display, which may improve visibility in certain situations.

* The default setting is OFF.

8. Audio Out Mode

STEREO, 2xMONO

This parameter allows the MP11SE's LINE OUT signal to be changed from stereo to dual-mono.

This may be useful in certain situations, allowing one output to be used for a monitor speaker and the other to be plugged into the mixing console.

Mode	Description
Stereo	The Line-out signal is normal stereo.
2xMono	The Line-out signal is mono on both jacks.

* The default setting is Stereo.

* Stereo EFX such as AutoPan will be turned OFF when 2xMono is selected.


10. Auto Power Off

OFF, 15 MINS., 60 MINS., 120 MINS.

This parameter determines the period of inactivity that should pass before the MP11SE automatically turns OFF.

Value	Description
Off	The Auto Power Off function is disabled.
15 mins.	The MP11SE will turn off after 15 minutes of inactivity.
60 mins.	The MP11SE will turn off after 60 minutes of inactivity.
120 mins.	The MP11SE will turn off after 120 minutes of inactivity.

* The default setting for this parameter depends on the market region.

 Please note that changing the Auto Power Off setting to "Off", "60 Minutes", "120 Minutes" may increase the instrument's power consumption. To reduce the instrument's power consumption, it is recommended to set the Auto Power Off setting to "15 Minutes".

2 Pedal/Mod.

1. Right Pedal Mode

5 FUNCTIONS

This parameter determines the global operation for the right pedal of the GFP-3 pedal unit.

* The default setting is Normal.

2. Center Pedal Mode

5 FUNCTIONS

This parameter determines the global operation for the centre pedal of the GFP-3 pedal unit.

* The default setting is Normal.

4. Half Pedal Adjust

VALUE: 1 ~ 10

This parameter adjusts the point at which the damper/sustain pedal becomes effective (i.e. when the dampers of the piano begin to lift from the strings).

This parameter may be useful for pianists that habitually rest their right foot on the damper/sustain pedal, but do not necessarily wish to sustain the sound.

* The default setting is 5.

7. Modulation Wheel Curve

NORMAL, SLOW, FAST

This parameter changes the output level curve for the modulation wheel, providing additional control over the speed of modulation wheel controlled effects.

* The default setting is Normal.

■ Pedal modes

Mode	Description
Normal	The pedal will use the assigned EDIT menu function.
Setup+	The pedal will select the next SETUP memory.
Setup-	The pedal will select the previous SETUP memory.
Playback	The pedal will start/stop song playback.
Metro.	The pedal will start/stop the metronome.

3. Left Pedal Mode

5 FUNCTIONS

This parameter determines the global operation for the left pedal of the GFP-3 pedal unit.

* The default setting is Normal.

5. FSW Pedal Mode

5 FUNCTIONS

This parameter determines the global operation for the foot switch pedal.

* The default setting is Normal.

6. FSW Pedal Polarity

NORMAL, REVERSE

This parameter changes the polarity for the foot switch pedal. MP11SE's foot switch terminal is designed for use with 'Normal Close' polarity pedals. If using a foot switch with 'Normal Open' polarity, please change this parameter to Reverse.

* The default setting is Normal.


8. EXP Pedal Curve

NORMAL, SLOW, FAST


This parameter changes the output level curve for the connected expression (EXP) pedal, providing additional control over the speed of expression pedal controlled effects.

* The default setting is Normal.


Normal curve

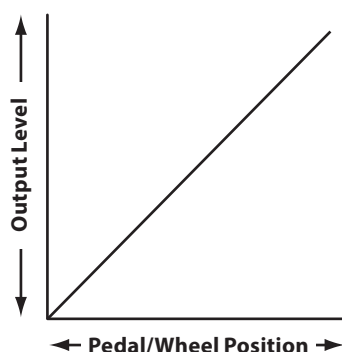

Slow curve

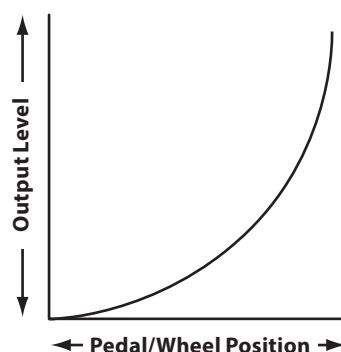

Fast curve

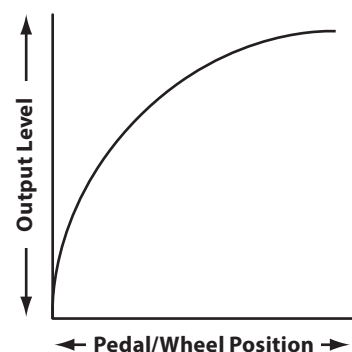


Expression pedal calibration


Depending on the brand and model of expression pedal connected to the MP11SE, it may be necessary to use the calibration function to ensure that the pedal's minimum and maximum range of values are detected correctly.

■ Calibrating the EXP pedal


Select the third page (3/3) of the Pedal SYSTEM menu.

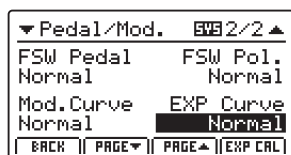

Press the F4 function button (EXP CAL) to show the expression pedal calibration screen in the LCD display.

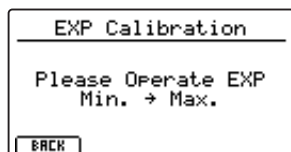

Press the expression pedal to the minimum and maximum positions several times to transmit the full range of values.

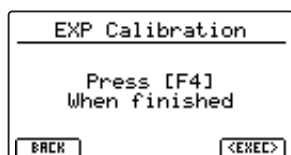

Press F4 function button (EXEC) to complete the expression pedal calibration.



The full range of operation for the connected expression pedal will be calculated automatically.

3 MIDI

1. System Channel VALUE: 01CH ~ 16CH

This parameter determines the System MIDI channel used to receive MIDI messages when Receive Mode is set to Panel.

* The default setting is 01Ch.

3. Key to USB ON, OFF

This parameter determines whether or not keyboard events are transmitted via USB-MIDI.

* The default setting is ON.

5. MIDI to USB ON, OFF

This parameter determines whether or not received MIDI IN events are transmitted via USB-MIDI.

* The default setting is OFF.

7. SETUP Program ON, OFF

This parameter determines whether or not the Send Program parameter in the EDIT menu (MIDI OUT/SETUP) is enabled.

* For more information about the Send Program parameter, please refer to page 54.

* The default setting is OFF.

9. SETUP Volume ON, OFF

This parameter determines whether or not the Send Volume parameter in the EDIT menu (MIDI OUT/SETUP) is enabled.

* For more information about the Send Volume parameter, please refer to page 54.

* The default setting is OFF.

11. Receive Mode PANEL, SECTION, OMNI ON

This parameter determines how the MP11SE receives MIDI data.

Mode	Description
Panel	Received data controls the entire panel.
Section	Received data controls sections individually via each receive channel.
Omni On	Received data controls the whole panel, regardless of the MIDI channel.

* The default setting is Panel.

13. E.PIANO Channel VALUE: 01CH ~ 16CH

This parameter determines the E.PIANO section's Receive Channel when the Receive Mode parameter is set to Section.

* The default setting is 02Ch.

2. Key to MIDI ON, OFF

This parameter determines whether or not keyboard events are transmitted via MIDI OUT.

* The default setting is ON.

4. MIDI to MIDI ON, OFF

This parameter determines whether or not received MIDI IN events are transmitted via MIDI OUT.

* The default setting is OFF.

6. USB to MIDI ON, OFF

This parameter determines whether or not received USB-MIDI events are transmitted via MIDI OUT.

* The default setting is OFF.

8. SETUP Bank ON, OFF

This parameter determines whether or not the Send Bank parameter in the EDIT menu (MIDI OUT/SETUP) is enabled.

* For more information about the Send Bank parameter, please refer to page 54.

* The default setting is OFF.

10. SETUP Knobs ON, OFF

This parameter determines whether or not the Send Knobs parameter in the EDIT menu (MIDI OUT/SETUP) is enabled.

* For more information about the Send Knobs parameter, please refer to page 54.

* The default setting is OFF.

12. PIANO Channel VALUE: 01CH ~ 16CH

This parameter determines the PIANO section's Receive Channel when the Receive Mode parameter is set to Section.

* The default setting is 01Ch.

14. SUB Channel VALUE: 01CH ~ 16CH

This parameter determines the SUB section's Receive Channel when the Receive Mode parameter is set to Section.

* The default setting is 03Ch.

4 Offset

1. EQ Offset ON/OFF ON, OFF

This parameter turns the EQ Offset function ON or OFF.

The EQ Offset function may be useful when performing at a venue with certain room acoustics, or simply different amplifier and speaker equipment to that used normally. The Offset values can be adjusted to create a 'baseline' character for the instrument, rather than readjusting the EQ settings prepared for each SETUP.

* The default setting is OFF.

* The EQ Offset values will be added to the EQ values defined in each SETUP. The combined EQ values are limited to ± 10 dB.

3. EQ Offset Low VALUE: -10 dB ~ +10 dB

This parameter adjusts the EQ Offset gain for the low range frequency band.

* The default setting is 0 dB.

5. EQ Offset Mid1 VALUE: -10 dB ~ +10 dB

This parameter adjusts the EQ Offset gain for the Mid1 range frequency band.

* The default setting is 0 dB.

2. Reverb Offset VALUE: 0% ~ 100%

This parameter adjusts the reverb depth offset, allowing the reverb for all sound section to be reduced globally.

Similar to the EQ Offset function, Reverb Offset may be useful when performing at a venue with reflective acoustics, or when connecting the instrument to a PA system with reverb pre-applied. The reverb offset depth is reduced globally for all sound sections, negating the need to readjust reverb settings for each SETUP.

* The default setting is 100%.

4. EQ Offset High VALUE: -10 dB ~ +10 dB

This parameter adjusts the EQ Offset gain for the high range frequency band.

* The default setting is 0 dB.

6. EQ Offset Mid2 VALUE: -10 dB ~ +10 dB

This parameter adjusts the EQ Offset gain for the Mid2 range frequency band.

* The default setting is 0 dB.

5 User Edit



The User Edit category contains functions to create custom touch curves and keyboard temperaments.

■ Selecting the User Touch Curve / Temperament / Key Volume / Stretch Tuning to edit

After selecting the User Edit SYSTEM menu category:

- Turn control knob A to select the desired User Touch Curve.
- Turn control knob B to select the desired User Temperament.
- Turn control knob C to select the desired User Key Volume.
- Turn control knob D to select the desired User Stretch Tuning.

The User Touch Curve, User Temperament, User Key Volume, and User Stretch Tuning can also be selected by using the CURSOR buttons and +/-/YES or -/NO buttons.

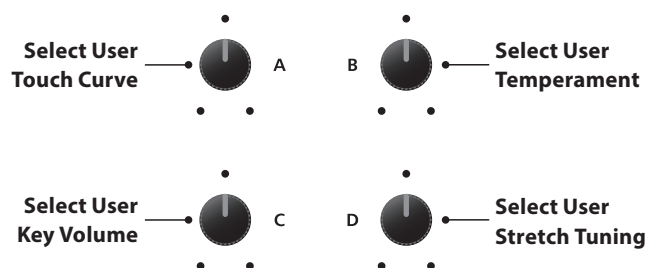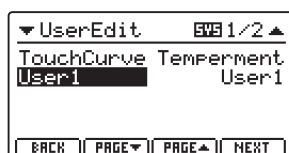


Creating a User Touch Curve

1. Starting the User Touch Curve analysis



After selecting the User Touch Curve memory to be edited:

Press the F4 function button (NEXT) to start the User Touch Curve analysis.

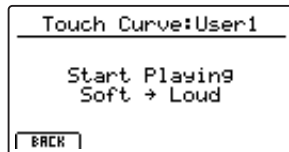

2. Capturing the dynamic range


Play the piano dynamically from very soft to very loud, allowing the instrument to analyse the personal playing technique.

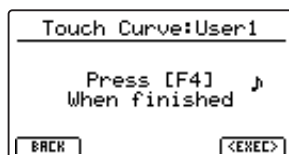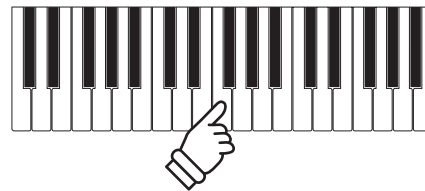

3. Completing the User Touch Curve analysis

Press the F4 function button (EXEC) to complete the User Touch Curve analysis.

A confirmation screen will be shown in the LCD display.


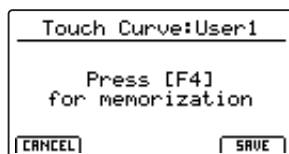


Play the piano to check the newly created touch curve, then press the F4 function button (SAVE) to store it to user memory.



4. Storing the User Touch Curve

Press the F2 button (YES) to confirm the store operation, or the F3 button (NO) to return to the previous screen.

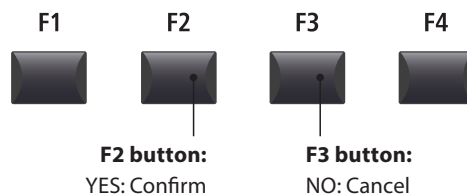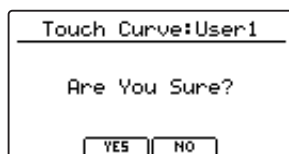

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

The new User Touch Curve will be used for the selected sound section temporarily.

* More than one attempt may be required in order to create an accurate User Touch Curve.

* Reducing the master volume fader to the lowest position before creating the User Touch Curve may help to reduce user distractions, thus improving accuracy.


* Please use the Store SOUND function to ensure that the created User Touch Curve is used automatically when the sound is selected.

Creating a User Temperament

1. Selecting the User Temperament editor

After selecting the User Temperament to be edited:

Press the F4 function button (NEXT) to select the User Temperament editor.

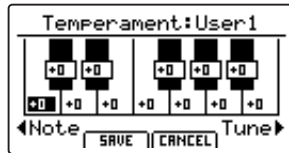


2. Adjusting the User Temperament

Turn control knob C to select the note to be adjusted.
Turn control knob D to adjust the pitch of the selected note.

* The pitch of each key can be adjusted within the range of -50 ~ +50 cents.
One semi-tone = 100 cents.

* To select a note directly, press the desired key.


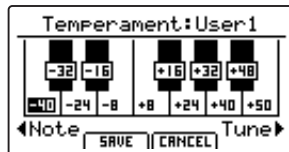


3. Saving the User Temperament

After adjusting the note pitches:

Press the F2 function button (SAVE) to save the adjusted User Temperament.

A store confirmation screen will be shown in the LCD display.

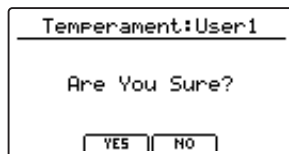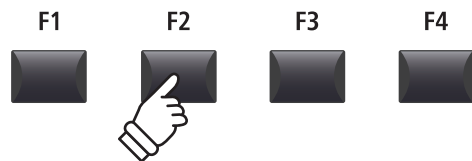


4. Confirming the store operation

Press the F2 button (YES) to confirm the store operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

The new User Temperament will be used for the selected sound section temporarily.

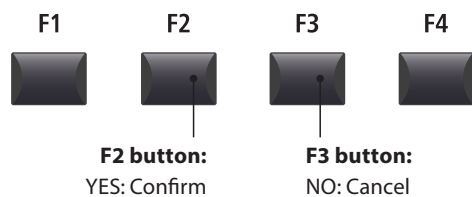


* Please use the Store SOUND function to ensure that the created User Temperament is used automatically when the sound is selected.

Creating a User Key Volume

1. Selecting the User Key Volume editor

After selecting the User Key Volume to be edited:

Press the F4 function button (NEXT) to select the User Key Volume editor.

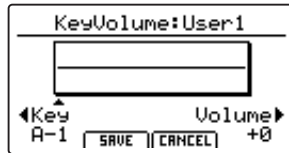


2. Adjusting the User Key Volume

Turn control knob C to select the key to be adjusted.
Turn control knob D to adjust the volume of the selected key.

* The volume of each key can be adjusted within the range of -50 ~ +50.

* To select a note directly, press the desired key.


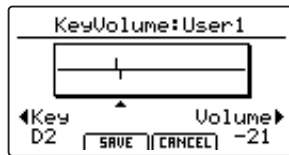


3. Saving the User Key Volume

After adjusting the key volumes:

Press the F2 function button (SAVE) to save the adjusted User Key Volume.

A store confirmation screen will be shown in the LCD display.

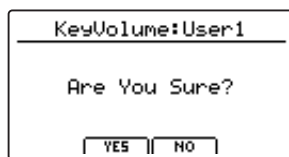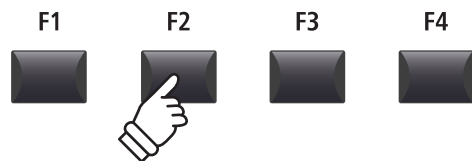


4. Confirming the store operation

Press the F2 button (YES) to confirm the store operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

The new User Key Volume will be used for the selected sound section temporarily.

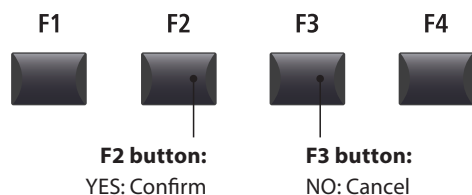

* Please use the Store SOUND function to ensure that the created User Key Volume is used automatically when the sound is selected.

Creating a User Stretch Tuning

1. Selecting the User Stretch Tuning editor

After selecting the User Stretch Tuning to be edited:

Press the F4 function button (NEXT) to select the User Stretch Tuning editor.




2. Adjusting the User Stretch Tuning

Turn control knob C to select the key to be adjusted.
Turn control knob D to adjust the pitch of the selected key.

* The pitch of each key can be adjusted within the range of -50 ~ +50 cents.
One semi-tone = 100 cents.

* To select a note directly, press the desired key.


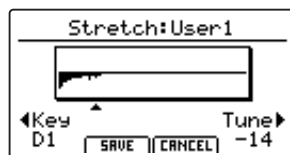


3. Saving the User Stretch Tuning

After adjusting the key pitches:

Press the F2 function button (SAVE) to save the adjusted User Stretch Tuning.

A store confirmation screen will be shown in the LCD display.

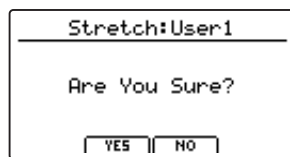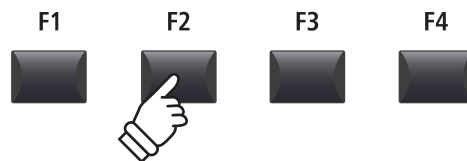


4. Confirming the store operation

Press the F2 button (YES) to confirm the store operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

The new User Stretch Tuning will be used for the selected sound section temporarily.

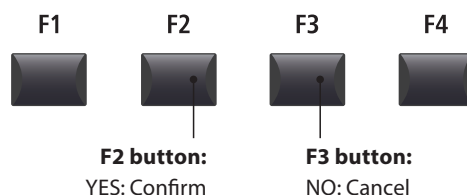


* Please use the Store SOUND function to ensure that the created User Stretch Tuning is used automatically when the sound is selected.

Creating a User Voicing

1. Selecting the User Voicing Tuning editor

After selecting the User Voicing to be edited:

Press the F4 function button (NEXT) to select the User Voicing editor.

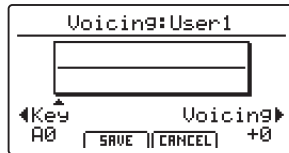


2. Adjusting the User Voicing

Turn control knob C to select the key to be adjusted.

Turn control knob D to adjust the voicing of the selected key.

* The User Voicing value can be adjusted within the range of -5 ~ +5, with lower values creating a mellower sound and higher values creating a brighter sound.

* To select a note directly, press the desired key.


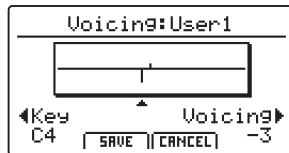


3. Saving the User Voicing

After adjusting the user voicing value:

Press the F2 function button (SAVE) to save the adjusted User Voicing.

A store confirmation screen will be shown in the LCD display.

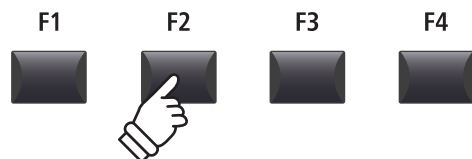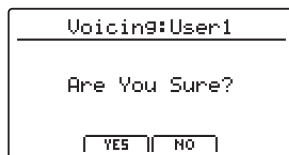


4. Confirming the store operation

Press the F2 button (YES) to confirm the store operation, or the F3 button (NO) to return to the previous screen.

* The +/YES and -/NO buttons can also be used to confirm or cancel the store operation.

The new User Voicing will be used for the selected sound section temporarily.

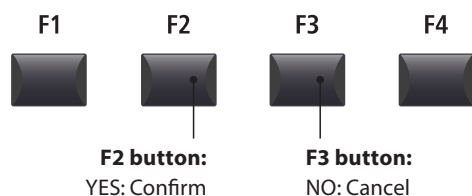

* Please use the Store SOUND function to ensure that the created User Voicing is used automatically when the sound is selected.



6 Reset

The Reset category contains functions to reset sounds, setups, and settings back to the original factory default.



**Once performed, these Reset functions cannot be undone.
Exercise caution when using this function in order to prevent accidental data loss.**

1. Reset One Sound

This function resets the currently selected sound to the factory default.

The currently selected sound will be shown in the LCD display.

* It is also possible to select the sound to be reset by pressing the sound category and variation buttons.

2. Reset One Setup

This function resets the currently selected SETUP memory to the factory default.

The currently selected SETUP will be shown in the LCD display.

* It is also possible to select the SETUP memory to be reset by pressing the BANK ◀▶ buttons and SETUP memory buttons.

3. Reset All Sound

This function resets all sounds to the factory default.

4. Reset All Setup

This function resets all SETUP memories to the factory default.

5. Reset System

This function resets all SYSTEM parameters, including Utility, Pedal, Offset, and MIDI parameters in the SYSTEM menu, and SETUP, Transmit, and MMC parameters in the MIDI section EDIT menu.

6. Reset PowerOn

This function resets the PowerOn memory to the factory default.

7. Reset Recorder

This function resets all internal song recorder memories.

8. Factory Reset

This function performs a global reset of all sounds, SETUPS, SYSTEM settings, and internal song recorder memories.

Panic button


The PANIC button restores all internal sounds to their default PowerOn setting, and also sends the AllNoteOff and ResetAll Controller MIDI messages to any connected devices (01ch ~ 16ch).

This is a useful function to be used in emergency situations, or to immediately restore the MP11SE to a preferred configuration.

■ Activating the Panic function

Press and hold the PANIC button.

After one second, the MP11SE will be returned to the default PowerOn configuration.

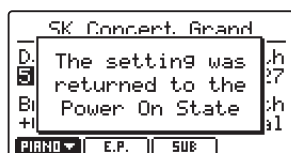


Panel Lock (🔒)

The Lock (🔒) function allows the state of the MP11SE's various controls to be temporarily locked, preventing accidental button pushes, pedal presses, or wheel movements.

■ Activating and deactivating the Lock function

Press the LOCK (🔒) button.


The LED indicator for the LOCK (🔒) button will turn on, and the lock pop-up will be briefly shown in the LCD display.

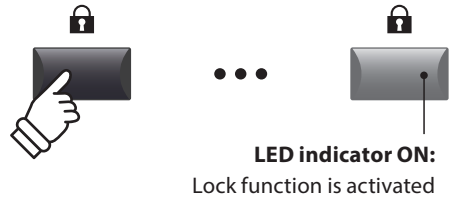

By default (Panel Lock mode), the Lock function will lock all of the MP11SE's panel buttons, knobs, and section VOLUME faders, preventing any accidental adjustments during performances etc.



* The VOLUME and LINE IN faders will not be locked. The keyboard will also remain active.

Press the LOCK (🔒) button again to deactivate the lock.

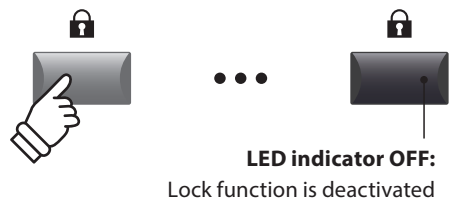

■ Changing the Lock mode

Press and hold the LOCK (🔒) button, then press the +/YES or -/NO buttons to cycle through the different Lock modes.

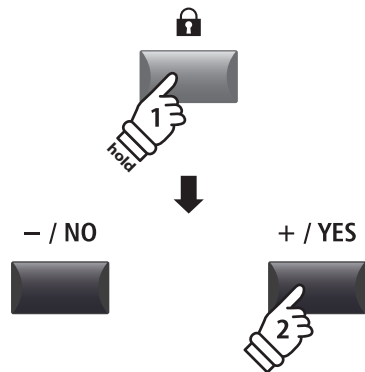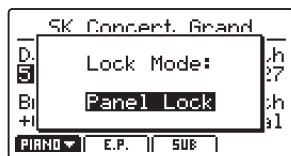


* The Lock mode can also be changed in the SYSTEM menu. For more information, please refer to page 101.

■ Lock modes

Lock mode	Description
Panel Lock	The main control panel buttons, knobs and section VOLUME faders will be locked.
Bend Lock	The pitch bend wheel will be locked.
Mod. Lock	The modulation wheel will be locked.
Center Lock	The centre pedal will be locked.
Left Lock	The left pedal and the footswitch will be locked.
EXP Lock	The expression pedal (EXP) will be locked.

Troubleshooting

Power		Page
The instrument does not turn on.	Check that the AC power adaptor is firmly attached to the instrument, and connected to an AC outlet.	16
The instrument turns itself off after a period of inactivity.	Check that the 'Auto Power Off' setting is not enabled.	101

Sound		Page
The instrument is turned on, however no sound is produced when the keys are pressed.	The MP11SE does not feature built-in speakers. Check that a mixer, keyboard amplifier, or headphones are connected to the instrument correctly. If using an external mixer or amplifier, check that the settings are correct.	18
	Check that the MASTER VOLUME fader is not set to the lowest position.	12
	Check that at least one section's ON/OFF button is turned on.	20
	Check that at least one section's VOLUME fader is not set to the lowest position.	20
	Check that the LOCAL OFF button is not turned on.	37
	Check that the expression pedal is not set to the minimum position.	17
	Check that the  MasterVol parameter in the EDIT menu is not set to 0.	42
No sound is produced for all or part of a section, or the sound volume is reduced.	Check that the section's ON/OFF button is turned on.	20
	Check that the section's VOLUME fader is not set to the lowest position.	20
	Check that the UPPER/LOWER LED beside the KEY RANGE button is not lit. If the LED is lit, check the Key Range parameter setting in the EDIT menu.	26, 46
	Check that the AMP level parameter in the EDIT menu is not set to 0.	41
	Check that the modulation wheel is not assigned the 'Expression' function.	47
	Check that the Receive Mode parameter in the SYSTEM:MIDI menu is not set to 'Section'. Some control change messages may affect the volume faders and/or the EDIT menu parameters in section Receive mode. If playing separate sections by MIDI or control change is not required, please set the Receive Mode parameter to 'Panel'.	104, 146
The sound distorts when playing at very loud volume levels.	Check that the MASTER VOLUME fader is set to an appropriate level, reducing the volume if excessive distortion is heard.	12

Troubleshooting

Strange sounds or noises are heard when playing with piano sounds.	The MP11SE stagel piano attempts to reproduce the rich variety of tones created by an acoustic grand piano as accurately as possible. This includes various resonances, noises, and other subtle characteristics that contribute to the overall piano playing experience. While these additional tones are intended to enhance the realism of the instrument, it is possible to reduce their prominence, or disable the effects altogether using the following settings in the Virtual Technician menu.	
	The noise occurs when the damper pedal is depressed and released. ➔Damper Noise	50
	The noise occurs after a key is released. ➔Fall-back Noise, Key-off Effect	50, 51
	The sound has a metallic characteristic. ➔Key-off Effect, Undamped Resonance, String Resonance	50
	The sound is muffled or too bright. ➔Topboard, Voicing, Brilliance	50, 51
	A particular key's level/volume is higher than other keys. ➔User KeyVolume	108
	A particular key's pitch is heard as incorrect. ➔Temperament, User Temperament, User StretchTuning	44, 107, 109
The keyboard has no touch responsiveness.	Check that the Dynamics parameter in the EDIT menu is not set to Off.	45

STORE		Page
OctaveShift cannot be stored to a SOUND memory.	This is the correct behaviour. Some parameters related to the Key Range function (KeyRangeType, SplitPoint, KeyRangeLo/Hi, OctaveShift, ZoneTranspose) are not stored to SOUND memory, but to SETUP only.	
The POWER ON default setting is different to the setting that it is stored.	The POWER ON memory will only store the selected SOUND position, not the individual EDIT menu settings of that SOUND. In order to memorise EDIT menu settings, please store each section's sound to the SOUND memory.	60, 62
The metronome click/rhythm pattern does not change when the SETUP is selected.	Please store preferred metronome click/rhythm pattern settings to SETUP memory. However, please note that if the metronome click or rhythm pattern is running while a SETUP is selected, the metronome settings will not change.	61, 87

Pedal, Controller		Page
Pedals or wheels don't work.	Check that the controller is not set to Off in the EDIT:Controllers menu.	47, 57
The Modulation Depth Range parameter has no effect.	Check that the modulation wheel function is set to 'Modulation' in the EDIT menu. If not, the Modulation Depth Range parameter will have no effect.	47
The foot switch does not turn off after releasing the pedal.	Check that the foot switch pedal is a 'Normal Closed' polarity type. If using a 'Normal Open' polarity type, please set the FSW Polarity setting in the SYSTEM:Pedal/Mod. menu to Reverse.	
The expression pedal does not work and a malfunction occurs with the MP11SE.	Please check that the expression pedal's TRS connector type is set correctly, using the EXP TYPE switch on the rear jack pack.	17

The top 18 notes of the keyboard sustain for longer than neighbouring notes, even when the damper pedal is not pressed.	This is the correct behaviour, and intended to reproduce the undamped notes (typically the top two octaves) of an acoustic grand piano.	
The sound continues to sustain after the damper pedal is released and re-pressed.	This is the correct behaviour, and reproduces the ability to sustain notes when quickly re-pressing the damper pedal of an acoustic grand piano.	

Line In		Page
The volume of the device connected to the Line In jacks is too low/too high (distorted).	Check the position of the LINE IN fader, and adjust as necessary.	12
The adjustable range of the LINE IN fader is too narrow.	Adjust the Input Level in the SYSTEM:Utility menu.	101

MIDI		Page
The MP11SE's Song Recorder (Internal Memory) cannot record the MIDI section.	Check that the TransmitRecorder parameter in the EDIT:Transit menu is set to On. By default, this parameter is set to Off.	55
MMC cannot control the external device.	Check that the Transmit MMC parameter in the EDIT:MMC menu is set to On. By default, this parameter is set to Off.	55
	Check that the MMC device ID is set correctly, and matches the external device's ID. If the digignate is not necessary, please set to 127 (default, All).	55
	Check the external device's owner's manual to ensure that MMC messages are recognised.	
	Check that the external device's MIDI clock is not set to External. The MP11SE does not send MTC (MIDI Time Code) or MIDI Clock data, therefore the external device should be set to use its own internal clock.	
The damper pedal is not released when playing MIDI data.	If the damper pedal off/on events of the MIDI data are extremely short, there is the possibility that the MP11SE's piano sound sustains continuously. This is due to the MP11SE reproducing the ability to release and quickly re-press the damper pedal of an acoustic grand piano.	
When Receive Mode is set to Section, received MIDI notes continue to play, even when the sound section is turned off.	<p>This is the correct behaviour, as the section ON/OFF buttons are only intended to connect/disconnect the MP11SE's keyboard from the internal tone generator.</p> <p>This allows the MP11SE's sounds to be triggered externally, without being played by the instrument's keyboard. For example, external MIDI keyboard controlling bass sound in SUB section, while the full MP11SE keyboard is used for the PIANO section.</p> <ol style="list-style-type: none"> 1. Select desired piano sound in the PIANO section and bass sound in the SUB section. 2. Turn of the SUB section using the ON/OFF button. 3. Set SYSTEM:MIDI Receive Mode to 'Section', SUB Ch=03. 4. Set the MIDI transmit channel to 3 for the external MIDI keyboard. 	20, 104

Troubleshooting

USB to HOST		Page
The instrument is connected to the computer using a USB cable, however the software does not respond to key presses.	Check that a USB MIDI driver is installed on the computer.	117
	Check that 'USB Audio Device' or 'KAWAI USB MIDI' is selected in the software's input/output device settings.	117
USB to DEVICE		Page
A USB memory device is not detected, cannot be saved to, or does not appear to function when connected to the 'USB to Device' port.	Check that the USB memory device is formatted to use the FAT/FAT32 filesystem, and not set to 'Write Protect' mode.	16
	Disconnect the USB memory device, turn the instrument off then on, then reconnect the USB device. If the USB device still does not function, it may be damaged or incompatible. Please try using a different USB device.	
	Ensure that the USB memory device is not a wireless flash drive. Such devices are not compatible with the MP11SE.	
The instrument pauses briefly when connecting a USB memory device.	This is recognised behaviour when using large capacity (e.g. 8GB+) USB memory devices.	
The current SOUND/SETUP setting is not stored correctly when saved to a USB memory device.	Ensure that the desired SOUND/SETUP setting has first been stored to internal memory before being saved to a USB memory device.	60, 61, 95,
MP3/WAV Audio, SMF		Page
No sound can be heard when playing an MP3/WAV audio file stored on a USB memory device.	Check that the audio player volume is not set to 0.	79
	Check that the format of the audio file is supported and listed in the 'Audio Player supported format specifications' table.	78
An MP3/WAV audio file stored on a USB memory device sounds strange, or does not play back correctly.	Check that the format of the audio file is supported and listed in the 'Audio Player supported format specifications' table.	78
	The file transfer speed of the USB memory device may be too slow to play the audio file. Please try using a different USB memory device, ensuring that it conforms to USB2.0 Hi-Speed standards.	
An SMF (Standard MIDI file) sounds strange when played back or some parts don't playback.	The MP11SE loads SMF files into the instrument's Song Recorder (internal memory), which only supports one track + drum track. MIDI data that requires multiple tracks may therefore not playback correctly.	94
	When saving Song Recorder (internal memory) SMF files, the MP11SE includes additional system exclusive data for selecting sounds. The SMF file may therefore sound different when played back on devices other than the MP11SE.	
	The program change messages cannot be loaded into the MP11SE's Song Recorder (internal memory).	
	If an SMF file that does not include the MP11SE's additional setup information is loaded in to the Song Recorder (internal memory) the current sound's setting will be used. This can be checked by using the 'Listen' button before loading the SMF file.	94
When recording MP3/WAV audio files, the volume is too low/too high (distorted).	Adjust the 'Audio Recorder Gain' setting in the SYSTEM:Utility menu.	76

USB MIDI (USB to Host connector)

The MP11SE features a 'USB to Host' type connector, allowing the instrument to be connected to a computer using an inexpensive USB cable and utilised as a MIDI device. Depending on the type of computer and operating system installed, additional driver software may be required for USB MIDI communication to function correctly.

■ USB MIDI driver

Operating System	USB MIDI Driver Support
Windows ME Windows XP (no SP, SP1, SP2, SP3) Windows XP 64-bit Windows Vista (SP1, SP2) Windows Vista 64-bit (SP1, SP2) Windows 7 (no SP, SP1) Windows 7 64-bit Windows 8 / 8.1 Windows 8 / 8.1 64-bit Windows 10 Windows 10 64-bit	<p>Additional USB MIDI driver software NOT required.</p> <p>The standard (built-in) Windows USB MIDI driver will be installed automatically when the instrument is connected to the computer.</p> <p>* After driver installation, ensure that the 'USB Audio Device' (Windows ME/Windows XP) or 'USB-MIDI' (Windows Vista/Windows 7/Windows 8) device is correctly selected in the application software.</p>
Windows 98 se Windows 2000 Windows Vista (no SP)	<p>Additional USB MIDI driver software required.</p> <p>Please download the USB MIDI driver from the Kawai Global website: → http://www.kawai-global.com/support/downloads</p> <p>* After driver installation, ensure that the 'KAWAI USB MIDI' device is correctly selected in the application software.</p>
Windows Vista 64-bit (no SP)	<p>USB MIDI is not supported.</p> <p>Please upgrade to service pack 1 or service pack 2.</p>
Mac OS X	<p>Additional USB MIDI driver software NOT required.</p> <p>The standard (built-in) Mac OS X USB MIDI driver will be installed automatically when the instrument is connected to the computer.</p>
Mac OS 9	<p>USB MIDI is not supported.</p> <p>Please use the standard MIDI IN/OUT connectors.</p>

■ USB MIDI information

- The instrument's USB MIDI port and MIDI IN/OUT jacks can be connected and used simultaneously. To adjust MIDI routing, please refer to the MIDI parameters in the SYSTEM menu, explained on page 104.
- Ensure that the instrument is turned OFF before attempting to connect the USB MIDI cable.
- When connecting the instrument to a computer using the USB MIDI port, there may be a short delay before communications begin.
- If the instrument is connected to a computer via a USB hub and USB MIDI communication becomes unreliable/unstable, please connect the USB MIDI cable directly to the one of the computer's USB ports.
- Disconnecting the USB MIDI cable suddenly, or turning the instrument on/off while using USB MIDI may cause computer instability in the following situations:
 - while installing the USB MIDI driver
 - while starting up the computer
 - while MIDI applications are performing tasks
 - while the computer is in energy saver mode
- If there are any further problems experienced with USB MIDI communication while the instrument is connected, please double-check all connections and relevant MIDI settings in the computer's operating system.

* 'MIDI' is a registered trademark of the Association of Manufacturers of Electronic Instruments (AMEI).

* 'Windows' is registered trademark of Microsoft Corporation.

* 'Macintosh' is registered trademark of Apple Inc.

* Other company names and product names mentioned referenced herein may be registered trademarks or trademarks of respective owners.

Software Update

This page contains instructions for updating the system software of the MP11SE, when issued by Kawai. Please read these instructions thoroughly before attempting to perform the software update.

* Software update files may be downloaded from the Kawai Global website: <https://www.kawai-global.com/updates>



This update will clear any user-created SOUNDS/SETUPS stored in memory. To retain this data, please use the AllBackup function before updating.

■ Checking the software version

To check the current software version installed on the MP11SE, press and hold the STORE button, then turn the instrument ON.


The current software (Program) version will be shown on the first line of the LCD display.

If the Program version number is greater than or equal to the update version, no further action is necessary.

* Turn the instrument OFF and ON to return to normal operation.

If the Program version number is lower than the update version, please continue to follow the instructions below.

STORE

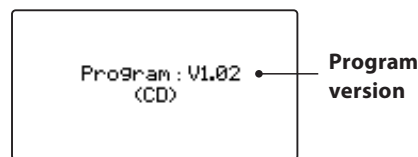

1. Prepare the USB memory device

Extract the software update ZIP file and copy the included .SYS files to the root folder of a USB memory device.

* USB devices should be formatted to use the 'FAT' or 'FAT32' filesystems.



2. Connect the USB memory device

While the instrument is turned off:

Connect the prepared USB memory device to the USB port.





3. Start the update

Press and hold buttons 6, 7, and 8 in the SETUP section, then turn on the instrument.

The update process will start automatically after a few seconds, and status messages will be shown in the LCD display.

* Do not remove the USB memory device while the software update is in progress.

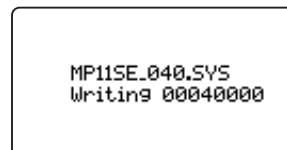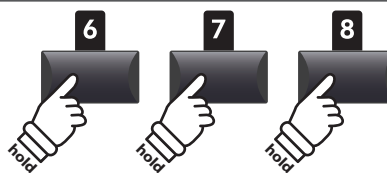


4. Finish the update, disconnect the USB memory device

After approximately 60-90 seconds (depending on the number of update files), a message will be shown in the LCD display, indicating that the software update has been successful.

Disconnect the USB memory device, then press and hold the POWER switch to turn the instrument OFF. When the instrument is turned ON, the updated software will be used automatically.

* If the software update is unsuccessful, restart the process from step 1.

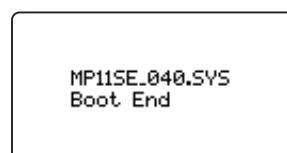

Sound List

PIANO section

Concert		Pop		Jazz		Upright/Mono	
1	SK Concert Grand	1	Pop Piano	1	SK Jazz Grand	1	Upright Piano
2	EX Concert Grand	2	EX Studio Grand	2	Jazz Grand	2	Mono SK Grand
3	SK-5 Grand	3	SK-5 StudioGrand	3	Standard Grand	3	Mono EX Grand

E.PIANO section

Tine		Reed		Modern		E. Grand / Clavi	
1	Tine EP 1	1	Reed EP 1	1	Modern EP 1	1	Electric Grand
2	Tine EP 2	2	Reed EP 2	2	Modern EP 2	2	Clavi 1
3	Tine EP 3	3	Reed EP 3	3	Modern EP 3	3	Clavi 2

SUB section

Strings		Pad		Harpsi / Mallet		Bass	
1	String Ensemble	1	Pad 1	1	Harpsichord	1	Wood Bass
2	Beautiful Str.	2	Pad 2	2	Vibraphone	2	Finger Bass
3	String Pad	3	Pad 3	3	Celesta	3	Fretless Bass
4	Warm Strings	4	Pad 4	4	Marimba	4	Wood Bass & Ride

Rhythm Pattern List

16 Swing	
1	Funk Shuffle 1
2	Funk Shuffle 2
3	Hip Hop 1
4	Hip Hop 2
5	Hip Hop 3
6	Hip Hop 4
7	16 Shuffle 1
8	16 Shuffle 2
9	16 Shuffle 3

16 Funk	
10	Funky Beat 1
11	Funky Beat 2
12	Funky Beat 3
13	Funk 1
14	Funk 2
15	Funk 3

16 Straight	
16	Jazz Funk
17	16 Beat 1
18	16 Beat 2
19	16 Beat 3
20	16 Beat 4
21	Ride Beat 4
22	Rim Beat
23	Roll Beat
24	Light Ride 1
25	Dixie Rock

16 Latin	
26	Surdo Samba
27	Latin Groove
28	Light Samba
29	Songo
30	Samba
31	Merenge

16 Dance	
32	Funky Beat 4
33	16 Beat 5
34	Disco 1
35	Disco 2
36	Techno 1
37	Techno 2
38	Techno 3
39	Heavy Techno

16 Ballad	
40	Ballad 1
41	Ballad 2
42	Ballad 3
43	Ballad 4
44	Ballad 5
45	Light Ride 2
46	Electro Pop 1
47	Electro Pop 2
48	16 Shuffle 4

8 Ballad	
49	Slow Jam
50	50's Triplet
51	R&B Triplet

8 Straight	
52	8 Beat 1
53	8 Beat 2
54	Smooth Beat
55	Pop 1
56	Pop 2
57	Ride Beat 1
58	Ride Beat 2
59	Ride Beat 3
60	Slip Beat

8 Rock	
61	Jazz Rock
62	8 Beat 3
63	Rock Beat 1
64	Rock Beat 2
65	Rock Beat 3
66	Rock Beat 4
67	Blues/Rock
68	Heavy Beat
69	Hard Rock
70	Surf Rock
71	R&B

8 Swing	
72	Motown 1
73	Fast Shuffle
74	Motown 2
75	Country 2 Beat

Triplet	
76	Triplet Rock 1
77	Triplet Rock 2
78	Bembe
79	Rock Shuffle 1
80	Rock Shuffle 2
81	Boogie
82	Triplet 1
83	Triplet 2
84	Reggae
85	Gospel Ballad
86	Waltz

Jazz	
87	H.H. Swing
88	Ride Swing
89	Fast 4 Beat
90	Afro Cuban
91	Jazz Waltz 1
92	Jazz Waltz 2
93	5/4 Swing

Latin	
94	H.H. Bossa
95	Ride Bossa
96	Beguine
97	Mambo
98	Cha Cha
99	Tango
100	Habanera

EFX Categories, Types, & Parameters

1. Chorus

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Stereo	DryWet	Speed	Depth	PreDly	Phase	LowEQ	HighEQ	-	-	-
Classic	Spread	Inten.	LowEQ	HighEQ	-	-	-	-	-	-
2-Band	DryWet	Balanc	LwrSpd	Lower	UprSpd	UprDpt	PreDly	SplitF	-	-
3-Phase	DryWet	Speed	Depth	PreDly	-	-	-	-	-	-
Wide	DryWet	Speed	Depth	PreDly	-	-	-	-	-	-
Envelope	Depth	Speed	Sens.	PreDly	Phase	-	-	-	-	-
Triangle	DryWet	Speed	Depth	PreDly	Phase	-	-	-	-	-
Sine	DryWet	Speed	Depth	PreDly	-	-	-	-	-	-

2. Flanger

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Stereo	DryWet	Speed	Depth	F.Back	PreDly	Phase	LowEQ	HighEQ	-	-
2-Band	DryWet	Balanc	LwrSpd	Lower	UprSpd	UprDpt	F.Back	PreDly	SplitF	-
Touch	DryWet	Sens.	F.Back	PreDly	LowEQ	HighEQ	-	-	-	-
Sine	DryWet	Speed	Depth	F.Back	PreDly	-	-	-	-	-
Triangle	DryWet	Speed	Depth	F.Back	PreDly	Phase	-	-	-	-

3. Phaser

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Warm	DryWet	Speed	Depth	Reso.	LowEQ	HighEQ	-	-	-	-
Classic	DryWet	Speed	Depth	Reso.	Manual	LowEQ	HighEQ	-	-	-
8-Stage	DryWet	Speed	Depth	Reso.	Manual	-	-	-	-	-
2-Band	DryWet	Balanc	LwrSpd	Lower	LwrMnu	UprSpd	UprDpt	UprMnu	SplitF	-
Touch	DryWet	Sens.	Reso.	Manual	LowEQ	HighEQ	-	-	-	-
St.2-Stage	DryWet	Speed	Depth	Manual	Phase	-	-	-	-	-

4. Wah

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
ClassicTch	DryWet	Sens.	Reso.	Manual	LowEQ	HighEQ	-	-	-	-
ClassicLfo	DryWet	Speed	Depth	Reso.	Manual	LowEQ	HighEQ	-	-	-
ClassicPdl	DryWet	Sens.	Reso.	Manual	LowEQ	HighEQ	-	-	-	-
LpTch	DryWet	Sens.	Manual	-	-	-	-	-	-	-
LpLfo	DryWet	Speed	Depth	Manual	-	-	-	-	-	-
LpPdl	DryWet	Sens.	Manual	-	-	-	-	-	-	-

5. Tremolo

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Classic	Depth	Speed	LowEQ	HighEQ	-	-	-	-	-	-
2-Band	Depth	Balanc	LwrSpd	UprSpd	SplitF	-	-	-	-	-
VibratoTrm	Depth	Speed	Vib.	LowEQ	HighEQ	-	-	-	-	-
Sine	Depth	Speed	-	-	-	-	-	-	-	-
Square	Depth	Speed	-	-	-	-	-	-	-	-
Saw	Depth	Speed	-	-	-	-	-	-	-	-

EFX Categories, Types, & Parameters

6. Auto Pan

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Classic	Depth	Speed	LowEQ	HighEQ	-	-	-	-	-	-
2-Band	Depth	Balanc	LwrSpd	UprSpd	SplitF	-	-	-	-	-
Envelope	Depth	Speed	Sens.	-	-	-	-	-	-	-
Standard	Depth	Speed	-	-	-	-	-	-	-	-

7. Delay / Reverb

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Standard	DryWet	Time	F.Back	H.Damp	-	-	-	-	-	-
PingPong	DryWet	Time	F.Back	H.Damp	-	-	-	-	-	-
LCR	DryWet	Time	F.Back	H.Damp	-	-	-	-	-	-
3-Tap	DryWet	C.Time	C.Gain	F.Back	H.Damp	L.Time	L.Gain	R.Time	RightG	-
Classic	DryWet	Time	F.Back	-	-	-	-	-	-	-
Short	DryWet	Time	F.Back	-	-	-	-	-	-	-
Ambience	DryWet	Size	H.Damp	LowEQ	HighEQ	-	-	-	-	-
EarlyRef	DryWet	Size	PreDly	LPF	LowEQ	HighEQ	-	-	-	-

8. Pitch Shift

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Detune	DryWet	Fine	-	-	-	-	-	-	-	-
FeedBack	DryWet	Fine	Coarse	Delay	F.Back	H.Damp	-	-	-	-
Standard	DryWet	Fine	Coarse	-	-	-	-	-	-	-

9. Compressor

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
2-Band	Gain	Balanc	LRatio	LThrsh	LwrAtk	Releas	URatio	UThrsh	UprAtk	SplitF
Standard	Gain	Ratio	Trshld	Attack	Releas	-	-	-	-	-

10. Overdrive

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Stereo	DryWet	Drive	Gain	LowEQ	HighEQ	-	-	-	-	-
Classic	DryWet	Drive	Gain	-	-	-	-	-	-	-
Distortion	DryWet	Drive	Gain	-	-	-	-	-	-	-

11. EQ / Filter

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
4-BandEQ	Gain	Low	Mid1	Mid1Q	Mid1F	High	Mid2	Mid2Q	Mid2F	-
7-BandEQ	Gain	100Hz	200Hz	400Hz	800Hz	1.6kHz	3.2kHz	6.4kHz	-	-
Standerd	Gain	Low	Mid	High	Mid F	-	-	-	-	-
Enhancer	DryWet	Depth	-	-	-	-	-	-	-	-
10-PoleFlt	DryWet	Freq.	Sens.	Gain	LpfHpf	-	-	-	-	-

12. Rotary

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Classic	Slow/Fast	LwrFastSpd	LwrSlowSpd	LwrAcc.Sp	Rot:Spread	UprFastSpd	UprSlowSpd	UprAcc.Sp	-	-
Warm	Slow/Fast	LwrFastSpd	LwrSlowSpd	LwrAcc.Sp	Rot:Spread	UprFastSpd	UprSlowSpd	UprAcc.Sp	-	-
Dirty	Slow/Fast	Rot:Depth	Rot:AccSpd	Rot:Spread	FastSpeed	SlowSpeed	Rot:LowEQ	Rot:HighEQ	Rot:Drive	Rot:Gain
+Vib/Cho	Slow/Fast	Rot:Depth	FastSpeed	SlowSpeed	Rot:AccSpd	Rot:Spread	Rot:VibCho	Rot:Mode	-	-
Single	Slow/Fast	Rot:Depth	FastSpeed	SlowSpeed	Rot:AccSpd	Rot:Spread	-	-	-	-

13. Groove

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
S/H Flg	Grv:DryWet	Grv:Speed	Grv:Depth	Grv:F.Back	Grv:Manual	Grv:Attack	Grv:PanDpt	-	-	-
S/H Pha	Grv:DryWet	Grv:Speed	Grv:Depth	Grv:F.Back	Grv:Manual	Grv:Attack	Grv:PanDpt	-	-	-
S/H Wah	Grv:DryWet	Grv:Speed	Grv:Depth	Grv:F.Back	Grv:Manual	Grv:Attack	Grv:PanDpt	-	-	-
S/H Pan	Grv:DryWet	Grv:Speed	Grv:Pan	Grv:Attack	-	-	-	-	-	-

14. Misc

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
RingMod	Mod:DryWet	Mod:Freq.	Mod:LowEQ	Mod:HighEQ	-	-	-	-	-	-
Lo-Fi	Mod:DryWet	Mod:ModSpd	Mod:ModDpt	Mod:S.Rate	Mod:Reso.	Mod:Filter	-	-	-	-

15. Chorus+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Flanger	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly
Phaser	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase
Wah	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-
Tremolo	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Trm:Depth	Trm:Speed	-	-	-
AutoPan	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Pan:Depth	Pan:Speed	-	-	-
Delay	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Dly:DryWet	Dly:Time	Dly:F.Back	-	-

16. Phaser+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Chorus	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase
Flanger	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly
Wah	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-
Tremolo	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	Trm:Depth	Trm:Speed	-	-	-
AutoPan	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	Pan:Depth	Pan:Speed	-	-	-
Delay	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	Dly:DryWet	Dly:Time	Dly:F.Back	-	-

EFX Categories, Types, & Parameters

17. Wah+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Chorus	Wah:DryWet	Wah:Sens.	Wah:Manual	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	-	-
Flanger	Wah:DryWet	Wah:Sens.	Wah:Manual	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly	-	-
Phaser	Wah:DryWet	Wah:Sens.	Wah:Manual	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	-	-
Tremolo	Wah:DryWet	Wah:Sens.	Wah:Manual	Trm:Depth	Trm:Speed	-	-	-	-	-
AutoPan	Wah:DryWet	Wah:Sens.	Wah:Manual	Pan:Depth	Pan:Speed	-	-	-	-	-
Delay	Wah:DryWet	Wah:Sens.	Wah:Manual	Dly:DryWet	Dly:Time	Dly:F.Back	-	-	-	-

18. EQ+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Chorus	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase
Flanger	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly
Phaser	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase
Wah	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-
Tremolo	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Trm:Depth	Trm:Speed	-	-	-
AutoPan	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Pan:Depth	Pan:Speed	-	-	-
Delay	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Dly:DryWet	Dly:Time	Dly:F.Back	-	-
Compressor	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:Mid F	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas

19. Enhancer+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Chorus	Enh:DryWet	Enh:Depth	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	-	-	-
Flanger	Enh:DryWet	Enh:Depth	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly	-	-	-
Phaser	Enh:DryWet	Enh:Depth	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	-	-	-
Wah	Enh:DryWet	Enh:Depth	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-	-	-	-
Tremolo	Enh:DryWet	Enh:Depth	Trm:Depth	Trm:Speed	-	-	-	-	-	-
AutoPan	Enh:DryWet	Enh:Depth	Pan:Depth	Pan:Speed	-	-	-	-	-	-
Delay	Enh:DryWet	Enh:Depth	Dly:DryWet	Dly:Time	Dly:F.Back	-	-	-	-	-
Compressor	Enh:DryWet	Enh:Depth	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	-	-	-

20. Pitch Shift+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Flanger	Psh:DryWet	Psh:Fine	Psh:Coarse	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly	-	-
Phaser	Psh:DryWet	Psh:Fine	Psh:Coarse	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	-	-
Wah	Psh:DryWet	Psh:Fine	Psh:Coarse	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-	-	-
Tremolo	Psh:DryWet	Psh:Fine	Psh:Coarse	Trm:Depth	Trm:Speed	-	-	-	-	-
AutoPan	Psh:DryWet	Psh:Fine	Psh:Coarse	Pan:Depth	Pan:Speed	-	-	-	-	-
Delay	Psh:DryWet	Psh:Fine	Psh:Coarse	Dly:DryWet	Dly:Time	Dly:F.Back	-	-	-	-

21. Compressor+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Chorus	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase
Flanger	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly
Phaser	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase
Wah	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-
Tremolo	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Trm:Depth	Trm:Speed	-	-	-
AutoPan	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Pan:Depth	Pan:Speed	-	-	-
Delay	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Dly:DryWet	Dly:Time	Dly:F.Back	-	-
OverDrive	Cmp:Gain	Cmp:Ratio	Cmp:Thresh	Cmp:Attack	Cmp:Releas	Ovd:DryWet	Ovd:Drive	Ovd:Gain	-	-

22. Overdrive+

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Chorus	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Cho:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	-	-
Flanger	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Flg:DryWet	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly	-	-
Phaser	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Pha:DryWet	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase	-	-
Wah	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Wah:DryWet	Wah:Sens.	Wah:Manual	-	-	-	-
Tremolo	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Trm:Depth	Trm:Speed	-	-	-	-	-
AutoPan	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Pan:Depth	Pan:Speed	-	-	-	-	-
Delay	Ovd:DryWet	Ovd:Drive	Ovd:Gain	Dly:DryWet	Dly:Time	Dly:F.Back	-	-	-	-
EQ	Ovd:DryWet	Ovd:Drive	Ovd:Gain	EQ:Gain	EQ:Low	EQ:Mid	EQ:High	EQ:MidFrq	-	-

23. Parallel

Variation	Parameter 1	Parameter 2	Parameter 3	Parameter 4	Parameter 5	Parameter 6	Parameter 7	Parameter 8	Parameter 9	Parameter 10
Cho Flg	Cho:DryWet	Flg:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Flg:Speed	Flg:Depth	Flg:F.Back	Flg:PreDly
Cho Pha	Cho:DryWet	Pha:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Pha:Speed	Pha:Depth	Pha:Manual	Pha:Phase
Cho Wah	Cho:DryWet	Wah:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Wah:Sens.	Wah:Manual	-	-
Cho Trm	Cho:DryWet	Trm:Depth	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Trm:Speed	-	-	-
Cho Pan	Cho:DryWet	Pan:Depth	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Pan:Speed	-	-	-
Cho Dly	Cho:DryWet	Dly:DryWet	Cho:Speed	Cho:Depth	Cho:PreDly	Cho:Phase	Dly:Time	Dly:F.Back	-	-

Specifications

■ Kawai MP11SE Stage Piano

Keyboard	88 wooden keys with Ivory Touch key surfaces Grand Feel (GF) action with Let-off	
Sound Source	Harmonic Imaging™ XL (HI-XL), 88-key piano sampling	
No. of Sounds	40 voices (PIANO x 12, E.PIANO x 12, SUB x 16)	
Polyphony	max. 256 notes	
Keyboard Modes	Full Keyboard, Upper Split, Lower Split, Zone (adjustable split point/zone range)	
Sections	Internal:	PIANO, E.PIANO, SUB
	External:	MIDI (ZONE1, ZONE2, ZONE3, ZONE4)
Reverb	Types:	6 types (Room, Lounge, Small Hall, Concert Hall, Live Hall, Cathedral)
	Parameters:	PreDelay, Reverb Time, Reverb Depth
Effects	Types:	129 types (23 categories)
	Parameters:	Up to 10 parameters, depending on effect type
Amp Simulator <small>E.PIANO ONLY</small>	Types:	5 types (S. Case, M. Stack, J. Combo, F. Bass, L. Cabi)
	Parameters:	Drive, Level, Amp EQ Lo, Amp EQ Mid, Amp EQ Hi, Mid Frequency, Mic Type, Mic Position, Ambience
Virtual Technician	Touch Curve:	6 types (Light+, Light, Normal, Heavy, Heavy+, Off), User1~5
	Parameters:	PIANO: Voicing, String Resonance, Undamped Resonance, Damper Resonance, Key-off Effect, Damper Noise, Hammer Delay, Fall-back Noise, Topboard, Stereo Width, Brilliance E.PIANO/SUB: Key-off Noise, Key-off Delay
	Temperament & Tuning:	7 types (Equal, Pure Major/Minor, Pythagorean, Meantone, Werkmeister, Kirnberger), User1~2 Fine Tune, Stretch Tuning, Key of Temperament
EQ	4-band equalizer (Low Gain, Mid1 Gain, Mid1 Q, Mid1 Freq., Mid2 Gain, Mid2 Q, Mid2 Freq., High Gain)	
Recorder	Internal:	10 songs – approximately 90,000 note memory capacity Transpose song, Convert song to Audio, Load SMF, Save SMF
	Audio:	Play MP3/WAV, Save MP3/WAV, Overdub, Recorder Gain
Metronome	Click:	1/4, 2/4, 3/4, 4/4, 5/4, 3/8, 6/8, 7/8, 9/8, 12/8
	Rhythm:	100 drum patterns
Internal Memories	SOUND:	40 memories
	SETUP:	208 memories (8 memories x 26 banks)
	POWERON:	1 memory
USB Functions	Load/Save:	One Sound, One Setup, SMF, All Sound, All Setup, All Backup
	Others:	Delete, Rename, Format
EDIT Menu	Sound Sections:	107 parameters (Reverb, EFX/AMP, Sound, Tuning, Key Setup, Controllers, Knob Assign, Virtual Tech.)
	MIDI Zones:	55 parameters (Channel/Program, SETUP, Transmit, MMC, Key Setup, Controllers, Knob Assign)
SYSTEM Menu	52 parameters and functions (Utility, Pedal, MIDI, Offset, User Edit, Reset)	
Display	128 x 64 pixel LCD with backlight	
Panel Controls	Volume, Line In, PIANO Volume, E.PIANO Volume, SUB Volume, Control Knobs A~D (assignable), Pitch Bend, Modulation	
Jacks	Output:	1/4" LINE OUT (L/MONO, R), XLR OUT (L, R) with ground lift switch, Headphones
	Input:	1/4" LINE IN
	MIDI & USB:	MIDI IN, MIDI OUT, MIDI THRU, USB to Host, USB to Device
	Foot Control:	DAMPER/SOSTENUTO/SOFT (GFP-3), FSW, EXP with EXP TYPE switch
	Power:	AC IN
Power Consumption	20 W (Power off state : 0.01 W)	
Dimensions	1380 (W) x 452 (D) x 190 (H) mm / 54 1/8" (W) x 18" (D) x 7 1/2" (H)	
Weight	34.0 kg / 75 lbs.	
Included Accessories	GFP-3 triple pedal unit (with half-damper support), Music rest, Power cable, Owner's manual	

Specifications are subject to change without notice.

1. Recognised data

- 1.1 Channel Voice Message
- 1.2 Channel Mode Message
- 1.3 System Realtime Message

2. Transmitted data

- 2.1 Channel Voice Message
- 2.2 Channel Mode Message
- 2.3 System Realtime Message

3. Exclusive data

- 3.1 MMC Commands
- 3.2 Parameter Send
- 3.3 Setup Parameters: Global Section
- 3.4 Setup Parameters: EDIT Menu
- 3.5 Setup Parameters: SYSTEM Menu
- 3.6 Assignable Knob Parameters

4. SOUND/SETUP Program/Bank

5. Control Change Number (CC#) Table

MIDI Implementation Chart

1 Recognised Data

1.1 Channel Voice Message

Note off

Status	2nd Byte	3rd Byte
8nH	kkH	vvH
9nH	kkH	00H

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
 kk=Note Number :00H - 7fH(0 ~ 127)
 vv=Velocity :00H - 7fH(0 ~ 127)

Note on

Status	2nd Byte	3rd Byte
9nH	kkH	vvH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
 kk=Note Number :00H - 7fH(0 ~ 127)
 vv=Velocity :00H - 7fH(0 ~ 127)

Control Change Bank Select (MSB)

Status	2nd Byte	3rd Byte
BnH	00H	mmH
BnH	20H	llH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
 mm = Bank Number MSB :00H-7fH (0 ~ 127)
 ll = BankNumber LSB :00H-7fH (0 ~ 127)

Modulation

Status	2nd Byte	3rd Byte
BnH	01H	vvH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
 vv = Modulation depth :00H - 7fH(0 ~ 127)

Default = 00H

Data Entry

Status	2nd Byte	3rd Byte
BnH	06H	mmH
BnH	26H	llH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
 mm,ll=Value indicated in RPN/NRPN :00H - 7fH(0 ~ 127)
 *see RPN/NRPN chapter

Volume

Status	2nd Byte	3rd Byte
BnH	07H	vvH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
 vv=Volume :00H - 7fH(0 ~ 127)

Default = 7fH

Panpot

Status	2nd Byte	3rd Byte
BnH	0aH	vvH

n=MIDI channel number :0H-fH(ch.1 - ch.16)
 vv=Panpot :00H - 40H - 7fH(left ~centre~right)

Default = 40H(centre)

1.1 Channel Voice Message (cont.)

Expression				
Status	2nd Byte	3rd Byte		
BnH	0bH	vvH		
n=MIDI channel number		:0H-fH(ch.1 - ch.16)		
vv=Expression		:00H - 7fH(0 - 127)		Default = 7fH
Damper Pedal				
Status	2nd Byte	3rd Byte		
BnH	40H	vvH		
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)		
vv=Control Value		:00H - 7fH(0 ~ 127)		Default = 00H
0 - 63=OFF, 64 - 127=ON				
Sostenuto Pedal				
Status	2nd Byte	3rd Byte		
BnH	42H	vvH		
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)		
vv=Control Value		:00H - 7fH(0 ~ 127)		Default = 00H
0 - 63 =OFF, 64 - 127=ON				
Soft Pedal				
Status	2nd Byte	3rd Byte		
BnH	43H	vvH		
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)		
vv=Control Value		:00H - 7fH(0 ~ 127)		Default = 00H
0 - 63 =OFF, 64 - 127=ON				
Sound controllers #1-9				
Status	2nd Byte	3rd Byte		
BnH	46H	vvH	Sustain Level	
BnH	47H	vvH	Resonance	
BnH	48H	vvH	Release time	
BnH	49H	vvH	Attack time	
BnH	4aH	vvH	Cutoff	
BnH	4bH	vvH	Decay time	
BnH	4cH	vvH	Vibrato Rate	
BnH	4dH	vvH	Vibrato Depth	
BnH	4eH	vvH	Vibrato Delay	
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)		
vv=Control Value		:00H - 7fH(-64 ~ 0 ~ +63)		Default = 40H
Effect Control				
Status	2nd Byte	3rd Byte		
BnH	5bH	vvH	Reverb depth	
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)		
vv = Control Value		:00H - 7fH(0 ~ 127)		

1.1 Channel Voice Message (cont.)

RPN MSB/LSB

Status	2nd Byte	3rd Byte
BnH	63H	mmH
BnH	62H	llH
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)
mm=MSB of the NRPN parameter number		
ll=LSB of the NRPN parameter number		

NRPN numbers implemented in MP11SE are as follows

NRPN # Data

MSB	LSB	MSB	Function & Range	Default
01H	08H	mmH	Vibrato Rate mm:00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	09H	mmH	Vibrato Depth mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	0aH	mmH	Vibrato Delay mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	20H	mmH	Cutoff mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	21H	mmH	Resonance mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	63H	mmH	Attack time mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	64H	mmH	Decay time mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H
01H	66H	mmH	Release time mm :00H - 7FH(-64 ~ 0 ~ +63)	Default = 40H

* Ignoring the LSB of data Entry

* It is not affected in case of modifying cutoff if tone does not use the DCF.

RPN MSB/LSB

Status	2nd Byte	3rd Byte
BnH	65H	mmH
BnH	64H	llH
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)

mm=MSB of the RPN parameter number

ll=LSB of the RPN parameter number

RPN number implemented in MP11SE are the followings

RPN # Data

MSB	LSB	MSB	LSB	Function & Range	Default
00H	00H	mmH	llH	Pitch bend sensitivity mm :00H-0cH (0~12 [half tone]),ll:00H	Default=02H
00H	01H	mmH	llH	Master fine tuning mm,ll :20 00H - 40 00H - 60 00H (-8192x50/8192 ~ 0 ~ +8192x50/8192 [cent])	
7fH	7fH	--	--	RPN NULL	

Program Change

Status	2nd Byte
CnH	ppH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)

pp=Program number :00H - 7fH(0 ~ 127)

Default = 00H

Pitch Bend Change

Status	2nd Byte	3rd Byte
EnH	llH	mmH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)

mm,ll=Pitch bend value :00 00-7f 7fH(-8192~0~+8192)

Default = 40 00H

1.2 Channel Mode Message

All Sound OFF

Status	2nd Byte	3rd Byte
BnH	78H	00H

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)

Reset All Controller

Status	2nd Byte	3rd Byte
BnH	79H	00H

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)

All Note Off

Status	2nd Byte	3rd Byte
BnH	7bH	00H

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)

1.3 System Realtime Message

Status	
FEH	Active sensing

2 Transmitted Data

2.1 Channel Voice Message

Note off

Status	2nd Byte	3rd Byte
8nH	kkH	vvH
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)
kk=Note Number		:00H - 7fH(0 ~ 127)
vv=Velocity		:00H - 7fH(0 ~ 127)

Note on

Status	2nd Byte	3rd Byte
9nH	kkH	vvH
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)
kk=Note Number		:00H - 7fH(0 ~ 127)
vv=Velocity		:00H - 7fH(0 ~ 127)

Control Change

Status	2nd Byte	3rd Byte
BnH	ccH	vvH

* Sending by Assignable Control Knobs

Program Change

Status	2nd Byte	
CnH	ppH	
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)
pp=Program number		:00H - 7fH(0 ~ 127) Default = 00H

After Touch

Status	2nd Byte	
DnH	ppH	
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)
pp=Value		
*Sending only when Controller or Knob=AfterTouch		

Pitch Bend Change

Status	2nd Byte	3rd Byte
EnH	llH	mmH
n=MIDI channel number		:0H-fH(ch.1 ~ ch.16)
mm,ll=Pitch bend value		:00 00-7f 7fH(-8192~0~+8192) Default = 40 00H

2.2 Channel Mode Message

Reset All Controller

Status	2nd Byte	3rd Byte
BnH	79H	00H

n = MIDI channel number :0H-fH(ch.1 ~ ch.16)
*Sending by [PANIC] function

All Note Off

Status	2nd Byte	3rd Byte
BnH	7bH	00H

n = MIDI channel number :0H-fH(ch.1 ~ ch.16)
*Sending by [PANIC] function

MONO

Status	2nd Byte	3rd Byte
BnH	7eH	mmH

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)
mm=mono number :01H(M=1)

POLY

Status	2nd Byte	3rd Byte
BnH	7fH	00H

n=MIDI channel number :0H-fH(ch.1 ~ ch.16)

2.3 System Realtime Message

Status

FAH	Start
FBH	Continue
FCH	Stop

*Sending by [RECORDER CONTROL] buttons

3 Exclusive Data

3.1 MMC Commands

No.	Description	Value	Notes
1	Exclusive	F0H	
2	Universal Real Time	7FH	
3	Device ID	0-7FH	
4	MMC command	06H	
5	Command Number	01-0DH	* see table right
6	EOX	F7H	

* Sending by [RECORDER CONTROL] buttons

* Transmit only

MMC Commands			
01	STOP	08	RECORD PAUSE
02	PLAY	09	PAUSE
03	DEFERRED PLAY	0A	EJECT
04	FAST FORWARD	0B	CHASE
05	REWIND	0C	COMMAND ERROR RESET
06	RECORD STROBE	0D	MMC RESET
07	RECORD EXIT		

3.2 Parameter Send

No.	Description	Value	Notes
1	Exclusive	F0H	
2	KAWAI ID	40H	
3	Channel Number	0-0FH, 7FH	System Channel = 0-FH, Global = 7FH
4	Function Number	10H	Parameter Send
5	Group Number	00H	MI Group ID
6	Machine Number	14H	Machine ID
7	data1	50-5FH	Command ID
8	data2	0-7FH	Sub Command ID
9	data3	0-7FH	Part number (System = 7FH)
10	data4~	0-7FH	data max 18byte
	EOX	F7H	

Part number :

	MP11SE *pp=00~06
00H	INT1 (PIANO)
01H	INT2 (E.PIANO)
02H	INT3 (SUB)
03H	EXT1 (ZONE1)
04H	EXT2 (ZONE2)
05H	EXT3 (ZONE3)
06H	EXT4 (ZONE4)
07H	-reserved-
08H	INT-COMMON
09H	MIDI-COMMON
7FH	SYSTEM/COMMON

3.3 Setup Parameters: Global Section

Category	Parameter	Com.	Sub.	Part	Byte	Value (HEX)
SETUP	Setup Mode On/Off	51	04	7F	1	00, 01 (Off, On)
	SETUP Bank/Variation	51	05	7F	2	Bank=00~19 (A~Z) /Vari.=00~07 (1~8)
GLOBAL	Global EQ Switch	51	10	7F	1	00, 01 (Off, On)
	Global EQ Low Gain	51	11	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	Global EQ High Gain	51	12	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	Global EQ Mid1 Gain	51	13	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	Global EQ Mid2 Gain	51	14	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	Global EQ Mid1 Q	51	17	7F	1	00~06 (0.5~4.0)
	Global EQ Mid2 Q	51	18	7F	1	00~06 (0.5~4.0)
	Global EQ Mid1 Frequency	51	15	7F	1	00~7F (200~3150Hz)
	Global EQ Mid2 Frequency	51	16	7F	1	00~7F (200~3150Hz)
	Transpose Switch	53	01	7F	1	00, 01 (Off, On)
	Transpose Value	53	02	7F	1	28~40~58 (-24~0~+24)
	LocalOff	58	01	7F	1	00, 01 (LocalOff, LocalOn)
	Metronome Mode	56	0A	7F	1	00, 01 (Click, Rhythm)
	Metronome Beat	56	02	7F	2	01~16 (Beat) /01, 02, 03, 04 (Measure: 1/2, 1/4, 1/8, 1/16)
	Metronome Volume	56	03	7F	1	00~7F (0~127)
	Metronome Tempo	56	01	7F	2	TempoMSB/TempoLSB=00/1E~02/2C (30~300)
	Rhythm Category	56	09	7F	1	Rhythm Pattern=00~63(1~100)
	Rhythm Variation	56	09	7F	1	Rhythm Pattern=00~63(1~100)

3.4 Setup Parameters: EDIT Menu

Category	Parameter	Com.	Sub.	Part	Byte	Value (HEX)
Buttons	Part Switch	55	06	pp	1	00, 01 (Off, On)
	Volume Fader	55	01	pp	1	00~7F
	Tone Number	55	00	pp	3	msb/lb/prog (*GM mode Program Change)
1.REVERB	REVERB Switch	55	07	pp	1	00, 01 (Off, On)
	Reverb Type	55	08	7F	1	00~05 (Room, Lounge, Small Hall, Concert Hall, LiveHall, Cathedral)
	Reverb Pre Delay	55	0A	7F	1	00~7F
	Reverb Time	55	09	7F	1	00~7F
	REVERB DEPTH	55	03	pp	1	00~7F
2.EFX/AMP	EFX Switch	55	05	pp	1	00, 01 (Off, On)
	EFX Category	55	11	pp	2	Category=00~16/Type=depend on Category
	EFX Type	55	11	pp	2	Category=00~16/Type=depend on Category
	EFX Parameter 1	55	12	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 2	55	13	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 3	55	14	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 4	55	15	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 5	55	16	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 6	55	17	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 7	55	18	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 8	55	19	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 9	55	1A	pp	1	0~7F (depend on EFX Type)
	EFX Parameter 10	55	1B	pp	1	0~7F (depend on EFX Type)
	EFX2 Switch	55	20	pp	1	0, 1 (Off, On)
	EFX2 Category	55	21	pp	1	Category=00~16/Type=depend on Category
	EFX2 Type	55	21	pp	1	Category=00~16/Type=depend on Category
	EFX2 Parameter 1	55	22	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 2	55	23	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 3	55	24	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 4	55	25	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 5	55	26	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 6	55	27	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 7	55	28	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 8	55	29	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 9	55	2A	pp	1	0~7F (depend on EFX Type)
	EFX2 Parameter 10	55	2B	pp	1	0~7F (depend on EFX Type)
	AMP Simulator Switch	55	30	pp	1	0, 1 (Off, On)
	AMP Simulator Type	55	31	pp	2	Type=0~4 (S.Case, M.Stack, J.Combo, F.Bass, L.Cabi) / Vari.=0 (ignote)
	AMP Simulator Drive	55	32	pp	1	0~7F
	AMP Simulator Level	55	33	pp	1	0~7F
	AMP Simulator EQ Low	55	34	pp	1	00~0A~14 (-10 ~ +0 ~ +10dB)
	AMP Simulator EQ Mid	55	36	pp	1	00~0A~14 (-10 ~ +0 ~ +10dB)
	AMP Simulator EQ Mid Freq.	55	37	pp	1	0~7F (200~3150Hz)
AMP Simulator EQ High	55	35	pp	1	00~0A~14 (-10 ~ +0 ~ +10dB)	
AMP Simulator Mic Type	55	38	pp	1	00, 01 (Condenser, Dynamic)	
AMP Simulator Mic Position	55	39	pp	1	00, 01 (OnAxis, OffAxis)	
AMP Simulator Ambiance Level	55	3A	pp	1	0~7F	

3.4 Setup Parameters: EDIT Menu (cont.)

Category	Parameter	Com.	Sub.	Part	Byte	Value (HEX)
3.Sound	Master Volume	55	01	7F	1	0~7F
	Panpot	55	02	pp	1	0~40~7F (L64~0~R63)
	Cutoff	55	40	pp	1	0~40~7F (-64~0~+63)
	Resonance	55	41	pp	1	0~40~7F (-64~0~+63)
	DCA Attack Time	55	42	pp	1	0~40~7F (-64~0~+63)
	DCA Decay Time	55	43	pp	1	0~40~7F (-64~0~+63)
	DCA Sustain Level	55	44	pp	1	0~40~7F (-64~0~+63)
	DCA Release Time	55	45	pp	1	0~40~7F (-64~0~+63)
	DCF Attack Time	55	46	pp	1	0~40~7F (-64~0~+63)
	DCF Attack Level	55	5B	pp	1	0~40~7F (-64~0~+63)
	DCF Decay Time	55	47	pp	1	0~40~7F (-64~0~+63)
	DCF Sustain Level	55	48	pp	1	0~40~7F (-64~0~+63)
	DCF Release Time	55	49	pp	1	0~40~7F (-64~0~+63)
	DCF Touch Depth	55	4A	pp	1	0~40~7F (-64~0~+63)
	DCA Touch Depth	55	4B	pp	1	0~40~7F (-64~0~+63)
	Vibrato Depth	55	4C	pp	1	0~40~7F (-64~0~+63)
	Vibrato Rate	55	4D	pp	1	0~40~7F (-64~0~+63)
	Vibrato Delay	55	4E	pp	1	0~40~7F (-64~0~+63)
	Octave Layer On/Off	55	54	pp	1	00, 01 (Off, On)
	Octave Layer Level	55	55	pp	1	0~7F
Octave Layer Range	55	56	pp	1	3D~40~43 (-3 ~ +0 ~ +3)	
Octave Layer Detune	55	57	pp	1	0~40~7F (-64~0~+63)	
Layer Sound:Vocal	50	58	pp	1	0, 1~7F (Off, 1~127)	
Layer Sound:Bell	50	59	pp	1	0, 1~7F (Off, 1~127)	
Layer Sound:Air	50	5A	pp	1	0, 1~7F (Off, 1~127)	
4.Tuning	Fine Tune	50	22	pp	1	0~40~7F (-64~0~+63)
	Stretch Tuning	50	0B	pp	1	00~08, 40~44 (Off, Narrow2, Narrow1, Normal, Wide1, Wide2~5, Sys.User1~5)
	Temperament	50	0D	pp	2	Type=00~06, 40~41 (Equal, PureMaj~min, Pythagor, Meantone, Werkmeis, Kirnberg, Sys.User1~2) /Key=00~0B (C~B)
	Temperament Key					
5.KeySetup	Touch Curve	50	00	pp	1	00~0A (Light, Normal, Heavy, Off, Light+, Heavy+, Sys.User1~5)
	Dynamics	53	05	pp	1	00, 01~0A (Off, 1~10)
	Minimum Touch	50	0A	pp	1	01~20 (1~20)
	Transmit	58	09	pp	2	Mode=00 (Keyboard&Panel) /Value=00, 01 (Off, On)
	Octave Shift	53	03	pp	1	3D~40~43 (-3~0~+3)
	Zone Transpose	53	02	pp	1	34~40~4C (-12~0~+12)
	KS-Damping	53	0B	pp	1	00, 01 (Off, On)
	KS-Key	53	0C	pp	1	15~6C (A0~C8)
	Key Range Mode	53	07	pp	1	00~03 (Off, Lower, Upper, Zone)
	Split Point	53	06	pp	1	15~6C (A0~C8)
	Key Range - Zone Low	53	08	pp	2	Low=00~7F (A0~C8) /High=00~7F (A0~C8)
	Key Range - Zone High					
	Solo On/Off	55	4F	pp	1	00, 01 (Off, On)
	Solo Mode	55	50	pp	1	00~02 (Last, High, Low)
Key Volume	50	0F	pp	1	00~04, 40~44 (Off, HighDamping, LowDamping, High&LowDamping, CenterDamping, Sys.User1~5)	

3.4 Setup Parameters: EDIT Menu (cont.)

Category	Parameter	Com.	Sub.	Part	Byte	Value (HEX)
6.Control	Right Pedal On/Off	54	04	pp	2	Cont.ID=00 (Main Damper) /Value=00, 01 (Off, On)
	Right Pedal Assign	54	05	INT/ EXT	3	Cont.ID=00 (Main Damper) /Func.ID MSB/Func.ID LSB * <INT>00/00~00/1B, <EXT>00/00~00/78
	Damper Mode	50	20	pp	1	00, 01 (Normal, Hold)
	Half Pedal Value	58	0D	pp	1	00~04 (Normal, High, Low, MidHigh, MidLow)
	Center Pedal On/Off	54	04	pp	2	Cont.ID=03 (Sostenuto) /Value=00, 01 (Off, On)
	Center Pedal Assign	54	05	INT/ EXT	3	Cont.ID=03 (Sostenuto) /Func.ID MSB/Func.ID LSB * <INT>00/00~00/1B, <EXT>00/00~00/78
	Left Pedal On/Off	54	04	pp	2	Cont.ID=04 (Soft) /Value=00, 01 (Off, On)
	Left Pedal Assign	54	05	INT/ EXT	3	Cont.ID=04 (Soft) /Func.ID MSB/Func.ID LSB * <INT>00/00~00/1B, <EXT>00/00~00/78
	PitchBend Wheel On/Off	54	04	pp	2	Cont.ID=09 (Wheel1<Bender>) /Value=00, 01 (Off, On)
	PitchBend Range	55	5C	pp	1	[INT] 00~07, [EXT] 00-12
	Soft Pedal Adjust	50	12	pp	1	01-0A
	Modulation Wheel On/Off	54	04	pp	2	Cont.ID=0A (Wheel2<Mod.>) /Value=00~02 (Off, On, Reverse)
	Modulation Wheel Assign	54	05	pp	3	Cont.ID=0A (Wheel2<Mod.>) /Func.ID MSB/Func.ID LSB * <INT>00/00~00/1B, <EXT>00/00~00/78
	Modulation Depth Range	55	5D	pp	1	00~7F
	FSW Pedal On/Off	54	04	pp	2	Cont.ID=05 (FSW1) /Value=00, 01 (Off, On)
	FSW Pedal Assign	54	05	INT/ EXT	3	Cont.ID=05 (FSW1) /Func.ID MSB/Func.ID LSB * <INT>00/00~00/1B, <EXT>00/00~00/78
	EXP Pedal On/Off	54	04	pp	2	Cont.ID=07 (EXP1) /Value=00~02 (Off, On, Reverse)
EXP Pedal Assign	54	05	INT/ EXT	3	Cont.ID=07 (EXP1) /Func.ID MSB/Func.ID LSB * <INT>00/00~00/1B, <EXT>00/00~00/78	
7.KnobAsgn	KnobA Assign (1/2)	54	03	pp	3	Knob ID=00/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobB Assign (1/2)	54	03	pp	3	Knob ID=01/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobC Assign (1/2)	54	03	pp	3	Knob ID=02/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobD Assign (1/2)	54	03	pp	3	Knob ID=03/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobA Assign (2/2)	54	03	pp	3	Knob ID=04/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobB Assign (2/2)	54	03	pp	3	Knob ID=05/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobC Assign (2/2)	54	03	pp	3	Knob ID=06/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
	KnobD Assign (2/2)	54	03	pp	3	Knob ID=07/Para.ID MSB/Para.ID LSB see 3.6 Assignable Knob Paraemters
8.VirtTech	Voicing	50	01	pp	1	00~0A (Normal, Mellow1, Mellow2, Dynamic, Bright1, Bright2, Sys.User1 ~5)
	String Resonance	50	04	pp	1	00, 01~0A (Off, 1~10)
	Undamped Resonance	50	15	pp	1	00, 01~0A (Off, 1~10)
	Damper Resonance	50	02	pp	1	00, 01~0A (Off, 1~10)
	KeyOff Effect	50	05	pp	1	00, 01~0A (Off, 1~10)
	Damper Noise	50	03	pp	1	00, 01~0A (Off, 1~10)
	Hammer Delay	50	07	pp	1	00, 01~0A (Off, 1~10)
	Fallback Noise	50	06	pp	1	00, 01~0A (Off, 1~10)
	Topboard	50	08	pp	1	00~03 (Close, Open1~3)
	Stereo Width	50	13	pp	1	00~7F
Brilliance	50	14	pp	1	36~40~4A (-10 ~ +0 ~ +10dB)	

3.4 Setup Parameters: EDIT Menu (cont.)

Category	Parameter	Com.	Sub.	Part	Byte	Value (HEX)	
8.VirtTech	KeyoffNoise	50	24	pp	1	00, 01~0A (Off, 1~10)	<for E.PIANO sound>
	KeyOffNoiseDelay	50	25	pp	1	00~7F	<for E.PIANO sound>
9.Ch/Prog.	MIDI Transmit Channel	58	02	pp	1	00~0F (1~16Ch)	
	Program Change Number	58	0B	pp	1	00~7F (1~128)	
	Bank Number MSB	58	0E	pp	1	00~7F (0~127)	
	Bank Number LSB	58	0F	pp	1	00~7F (0~127)	
10.SETUP	Send Program On/Off	58	0A	pp	2	Send mode=00 (Program) /00, 01 (Off, On)	
	Send Bank On/Off	58	0A	pp	2	Send mode=01 (Bank) /00, 01 (Off, On)	
	Send Volume On/Off	58	0A	pp	2	Send mode=02 (Volume) /00, 01 (Off, On)	
	Send Knobs On/Off	58	0A	pp	2	Send mode=03 (Knobs) /00, 01 (Off, On)	
11.Transmit	Edit System Exclusive	58	09	7F	2	Trans. mode=04 (SysEX) /00, 01 (Off, On)	
	Recorder	58	09	7F	2	Trans. mode=02 (Recorder) /00, 01 (Off, On)	
12.MMC	Transmit MMC	58	09	7F	2	Trans. mode=03 (MMC) /00, 01 (Off, On)	
	MMC Device ID	58	0C	7F	2	ParaID=00 (DeviceID) /Value=00~7F	
	MMC [RESET]	58	0C	7F	2	ParaID=01 (RESET) /Value=00 (NoAssign), 01~0D (MMC commands), 0E~10 (Realtime [FA,FB,FC])	
	MMC [PLAY]	58	0C	7F	2	ParaID=02 (PLAY) /Value=00 (NoAssign), 01~0D (MMC commands), 0E~10 (Realtime [FA,FB,FC])	
	MMC [REC]	58	0C	7F	2	ParaID=03 (REC) /Value=00 (NoAssign), 01~0D (MMC commands), 0E~10 (Realtime [FA,FB,FC])	
	MMC [A<->B]	58	0C	7F	2	ParaID=04 (A<->B) /Value=00 (NoAssign), 01~0D (MMC commands), 0E~10 (Realtime [FA,FB,FC])	
	MMC [REW]	58	0C	7F	2	ParaID=05 (REW) /Value=00 (NoAssign), 01~0D (MMC commands), 0E~10 (Realtime [FA,FB,FC])	
	MMC [FF]	58	0C	7F	2	ParaID=06 (FF) /Value=00 (NoAssign), 01~0D (MMC commands), 0E~10 (Realtime [FA,FB,FC])	

* Pedal/Wheel/Fader assign:

<INT> Mod., Pan., Exp., Damper, Soste., Soft, Reso., Cutoff, EFX1 Para1~10, EFX2 Para1~10

<EXT> CC#0~119, AfterTouch

** SW Button assign:

Oct.Layer, Rotary, Solo, Portament, Bend. Lock, Mod. Lock, Center Lock, Left Lock, EXP Lock, TW Control

3.5 Setup Parameters: SYSTEM Menu

Category	Parameter	Com.	Sub Com.	Part	Byte	Value (HEX)
Utility	System Tune	51	03	7F	1	26~40~5A (427.0~440.0~453.0Hz)
	Effect SW Mode	51	23	7F	1	00~02 (Preset, Temporary, Fixed)
	Knob Action	51	21	7F	2	Mode=01 (Knob) /Value=00, 01 (Normal, Catch)
	Volume (Fader) Action	51	21	7F	2	Mode=00 (Fader) /Value=00, 01 (Normal, Catch)
	LCD Contrast	51	20	7F	2	Mode=00 (Contrast) /Value=01~0A (1~10)
	LCD Reverse	51	20	7F	2	Mode=02 (Reverse) /Value=00, 01 (Off, On)
	Input Level	51	0D	7F	1	2E~40~52 (-18~0~+18dB)
	Audio Out Mode	51	0E	7F	1	00, 01 (Stereo, 2xMono)
	Lock SW Mode	51	22	7F	1	00~05 (Panel, Bender, Mod.Wheel, CenterPedal, LeftPedal, EXP)
	Auto Power Off	51	00	7F	1	00~03 (Off, 15min., 60min., 120min.)
Pedal/Mod.	Right Pedal Mode	54	06	7F	2	Cont.ID=00 (Main Damper) /Value=00~04 (Normal, Setup+, Setup-, Playback, Metro.)
	Center Pedal Mode	54	06	7F	2	Cont.ID=03 (Sostenuto) /Value=00~04 (Normal, Setup+, Setup-, Playback, Metro.)
	Left Pedal Mode	54	06	7F	2	Cont.ID=04 (Soft) /Value=00~04 (Normal, Setup+, Setup-, Playback, Metro.)
	Half Pedal Adjust	50	11	7F	1	01~0A (1~10)
	FSW Pedal Mode	54	06	7F	2	Cont.ID=05 (FSW1) /Value=00~04 (Normal, Setup+, Setup-, Playback, Metro.)
	FSW Pedal Polarity	54	07	7F	2	Cont.ID=05 (FSW1) /Value=00~01 (Normal, Reverse)
	Mod. Pedal Curve	54	08	7F	2	Cont.ID=0A (Wheel2<Mod. >) /Value=00~02 (Normal, Slow, Fast)
	EXP Pedal Curve	54	08	7F	2	Cont.ID=07 (EXP1) /Value=00~02 (Normal, Slow, Fast)
MIDI	System Channnel	58	00	7F	1	00~0F (1~16Ch.)
	Key to MIDI	58	08	7F	2	ToMIDI= bit2:USB, bit1:MIDI, bit0:Key/ToUSB=bit1:MIDI, bit0:Key (1:Connect)
	Key to USB-MIDI					
	MIDI to MIDI					
	MIDI to USB-MIDI					
	USB-MIDI to MIDI					
	Send Program On/Off	58	0A	7F	2	Send mode=00 (Program) /00, 01 (Off, On)
	Send Bank On/Off	58	0A	7F	2	Send mode=01 (Bank) /00, 01 (Off, On)
	Send Volume On/Off	58	0A	7F	2	Send mode=02 (Volume) /00, 01 (Off, On)
	Send Knobs On/Off	58	0A	7F	2	Send mode=03 (Knobs) /00, 01 (Off, On)
	Receive Mode	58	05	7F	1	00~02 (Panel, Section, OmniOn)
	Piano Receive Channel	58	03	00	1	00~0F (1~16Ch.)
	E.Piano Receive Channel	58	03	01	1	00~0F (1~16Ch.)
	SUB Receive Channel	58	03	02	1	00~0F (1~16Ch.)
Offset	Reverb Offset	55	03	7F	1	00~64 (0~100%)
	EQ Offset	51	24	7F	1	00, 01 (Off, On)
	EQ Offset Lo	51	25	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	EQ Offset Hi	51	26	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	EQ Offset Mid1	51	27	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)
	EQ Offset Mid2	51	28	7F	1	36~40~4A (-10 ~ +0 ~ +10dB)

3.6 Assignable Knob Parameters

Knob Assignable Parameter		Data (HEX)		Section		
Section	Category	Name	MSB/LSB	PIANO	E.PIANO	SUB
Internal	1.REVERB	<input checked="" type="checkbox"/> Rev.Type	00/01		●	
		<input checked="" type="checkbox"/> RevPreDly	00/02		●	
		<input checked="" type="checkbox"/> Rev.Time	00/03		●	
		Rev.Depth	00/04	●	●	●
	2.EFX/AMP	EFX Categ.	00/05	●	●	●
		EFX Type	00/06	●	●	●
		EFX Para1	00/07	●	●	●
		EFX Para2	00/08	●	●	●
		EFX Para3	00/09	●	●	●
		EFX Para4	00/0A	●	●	●
		EFX Para5	00/0B	●	●	●
		EFX Para6	00/0C	●	●	●
		EFX Para7	00/0D	●	●	●
		EFX Para8	00/0E	●	●	●
		EFX Para9	00/0F	●	●	●
		EFX Para10	00/10	●	●	●
		EFX2 Categ.	00/11	-	●	-
		EFX2 Type	00/12	-	●	-
		EFX2 Para1	00/13	-	●	-
		EFX2 Para2	00/14	-	●	-
		EFX2 Para3	00/15	-	●	-
		EFX2 Para4	00/16	-	●	-
		EFX2 Para5	00/17	-	●	-
		EFX2 Para6	00/18	-	●	-
		EFX2 Para7	00/19	-	●	-
		EFX2 Para8	00/1A	-	●	-
		EFX2 Para9	00/1B	-	●	-
		EFX2Para10	00/1C	-	●	-
		Amp Type	00/1D	-	●	-
		Amp Drive	00/1F	-	●	-
		Amp Level	00/1E	-	●	-
		AmpEQ-Lo	00/20	-	●	-
		AmpEQ-Mid	00/21	-	●	-
		AmpEQ-Hi	00/22	-	●	-
		MidFreq.	01/1A	-	●	-
		AmpMicType	01/15	-	●	-
	AmpMicPos.	01/14	-	●	-	
	AmpAmbien.	01/16	-	●	-	
	3.Sound	<input checked="" type="checkbox"/> MasterVol	00/23		●	
		Panpot	00/24	●	●	●
		Cutoff	00/25	●	●	●
		Resonance	00/26	●	●	●
		DCA Attack	00/27	●	●	●
		DCA Decay	00/28	●	●	●
DCASustain		00/29	●	●	●	
DCARelease		00/2A	●	●	●	

3.6 Assignable Knob Parameters (cont.)

Knob Assignable Parameter			Data (HEX)	Section		
Section	Category	Name	MSB/LSB	PIANO	E.PIANO	SUB
Internal	3.Sound	DCF ATK Tm	00/2B	●	●	●
		DCF ATK Lv	00/2C	●	●	●
		DCF Decay	00/2D	●	●	●
		DCFSustain	00/2F	●	●	●
		DCFRelease	00/2E	●	●	●
		DCF TchDpt	00/30	●	●	●
		DCA TchDpt	00/31	●	●	●
		Vib.Depth	00/32	●	●	●
		Vib.Rate	00/33	●	●	●
		Vib.Delay	00/34	●	●	●
		Octave	00/35	●	●	●
		Oct.Level	00/36	●	●	●
		Oct.Range	00/37	●	●	●
		Oct.Detune	00/38	●	●	●
		Vocal	01/07	●	●	●
		Bell	01/08	●	●	●
		Air	01/19	●	●	●
	4.Tuning	Fine Tune	00/4B	●	●	●
		Stretch	00/4C	●	●	●
		Temperment	00/4D	●	●	●
		Temper.Key	00/4E	●	●	●
	5.KeySetup	Touch	00/55	●	●	●
		Dynamics	00/5B	●	●	●
		KeyVolume	01/1B	●	●	●
		Min.Touch	01/1C	●	●	●
		OctavShift	00/57	●	●	●
		ZoneTrans.	00/58	●	●	●
		KS-Damping	00/59	●	●	●
		KS-Key	00/5A	●	●	●
		KeyRange	00/4F	●	●	●
		▣ SpltPoint	00/50	●	●	●
		Zone Lo	00/52	●	●	●
		Zone Hi	00/51	●	●	●
	6.Control	Right Ped.	00/5E	●	●	●
		▣ R.Assign	00/5F		●	
		Damp.Mode	00/60	●	●	●
		CenterPed.	00/63	●	●	●
		▣ C.Assign	00/64		●	
		Left Pedal	00/65	●	●	●
		▣ L.Assign	00/66		●	
		SoftPdlDpt	01/03	●	●	●
		Pitch Bend	00/69	●	●	●
		Bend Range	00/6A	●	●	●
		Mod.Wheel	00/6B	●	●	●
		Mod.Assign	00/6C	●	●	●
		Mod.Range	01/18	●	●	●

3.6 Assignable Knob Parameters (cont.)

Knob Assignable Parameter			Data (HEX)	Section			
Section	Category	Name	MSB/LSB	PIANO	E.PIANO	SUB	
Internal	6.Control	FSW Pedal	01/1E	●	●	●	
		<input type="checkbox"/> FSWAssign	01/1F		●		
		EXP Pedal	00/67	●	●	●	
		<input type="checkbox"/> EXPAssign	00/68		●		
	8.VirtTech	Voicing	00/79	●	-	-	
		StringReso	00/7B	●	-	-	
		UndampedRs	01/1D	●	-	-	
		DamperReso	00/7C	●	-	-	
		KeyOffEff.	00/7D	●	-	-	
		DamperNois	00/7E	●	-	-	
		HammerDly	00/7F	●	-	-	
		FallbackNs	01/00	●	-	-	
		Topboard	01/01	●	-	-	
		StereoWdth	00/7A	●	-	-	
		Brilliance	01/04	●	-	-	
		KeyOffNois	01/05	-	●	●	
	KeyOffDly	01/06	-	●	●		
	External	CC#0~119		00/00~00/77			
		AfterTouch		00/78			

* Harpsi./Bass sounds also have KeyOffNois/KeyOffDly parameters.

4 SOUND/SETUP Program/Bank

If the Receive Mode MIDI parameter is set to Panel (page 104), the MP11SE receives MIDI data on the System Channel only. To change internal sounds via MIDI, please refer to the SOUND Program Number list below.

* Note: If the MP11SE receives the Program Number from 1 to 128 and Bank number MSB 0 or 1 in the System Channel, the MP11SE will switch to SETUP mode and the corresponding SETUP is recalled. When the Receive Mode is Section, the MP11SE can be received to each internal sound sections individually.

Panel Mode:

SETUP Program Number

BANK#MSB	1:	SETUP mode ON
BANK#LSB	0-25:	BANK A-Z
PROGRAM	1-8:	Setup Variation 1-8

SOUND Program Number

BANK#MSB	0:	SETUP mode OFF
BANK#LSB	0:	PIANO Section
	1:	E.PIANO Section
	2:	SUB Section
PROGRAM	1-12:	PIANO/E.PIANO Section's Sound variation 1-12
	1-16:	SUB Section's Sound variation 1-16

* Only one sound section is activated.

Section Mode:

BANK#MSB	(ignored)	
BANK#LSB	(ignored)	
PROGRAM	1-12:	PIANO/E.PIANO Section's Sound variation 1-12
	1-16:	SUB Section's Sound variation 1-16

*For each section's Receive Channel.

*Not related to Setup ON/OFF.

5 Control Change Number (CC#) Table

Control Number		Control Function
Decimal	Hex	
0	0	Bank Select (MSB)
1	1	Modulation Wheel or lever
2	2	Breath Controller
3	3	(undefined)
4	4	Foot Controller
5	5	Portament Time
6	6	Data Entry (MSB)
7	7	Channel Volume
8	8	Balance
9	9	(undefined)
10	A	Panpot
11	B	Expression Controller
12	C	Effect Controller1
13	D	Effect Controller2
14	E	(undefined)
15	F	(undefined)
16-19	10-13	General Purpose Controller1~4
20-31	14-1F	(undefined)
32	20	Bank Select (LSB)
33-63	21-3F	(LSB of Control Number 1-32)
64	40	Hold1 (Damper Pedal or Sustain)
65	41	Portamento On/Off
66	42	Sostenuto
67	43	Soft Pedal
68	44	Legato Footswitch
69	45	Hold2 (freeze etc)
70	46	Sound Controller1 (Sound Variation)
71	47	Sound Controller2 (Filter Resonance/Harmonic Intensity)
72	48	Sound Controller3 (Release Time)
73	49	Sound Controller4 (Attack Time)
74	4A	Sound Controller5 (Brightness/Cutoff)
75	4B	Sound Controller6 (Decay Time)
76	4C	Sound Controller7 (Vibrato Rate)
77	4D	Sound Controller8 (Vibrato Depth)
78	4E	Sound Controller9 (Vibrato Delay)
79	4F	Sound Controller10
80-83	50-53	General Purpose Controller5~8
84	54	Portament Control
85-90	55-5A	(undefined)
91	5B	Effect1 Depth (Reverb Send Level)
92	5C	Effect2 Depth
93	5D	Effect3 Depth (Chorus Send Level)
94	5E	Effect4 Depth
95	5F	Effect5 Depth
96	60	Data Increment
97	61	Data Decrement
98	62	Non Registered Parameter Number (LSB)
99	63	Non Registered Parameter Number (MSB)
100	64	Registered Parameter Number (LSB)
101	65	Registered Parameter Number (MSB)
102-119	66-77	(undefined/reserved)
120-127	78-7F	Channel Mode Message

Function	Transmitted	Recognised		Remarks	
		Panel	Section		
Basic Channel	Default	1 - 16	1 - 16	1 - 16	
	Changed	1 - 16	1 - 16	1 - 16	
Mode	Default	3	3	3	
	Messages	3,4 (m=1)	X	X	
	Altered	*****			
Note Number		0 - 127	0 - 127	0 - 127	
	True Voice	*****			
Velocity	Note ON	O 9nH, v=1 - 127	O	O	
	Note OFF	O 8nH, v=0 - 127	O	O	
After Touch	Key	X	X	X	
	Channel	O *1	X	X	
Pitch Bend		O	O	O	
Control Change	0,32	O	O	X	Bank Select
	1	O	O	O	Modulation*2
	6,38	X	X	O	Data Entry
	7	O	O	O	Volume
	10	X	X	O	Panpot
	11	O	O	O	Expression (EXP) *2
	64	O	O	O	Hold1 (Damper) *2
	66	O	O	O	Sostenuto *2
	67	O	O	O	Soft *2
	70,71	X	X	O	Sustain, Resonance
	72,73,74,75	X	X	O	RLS, ATK, CTF, DCY
	76,77,78	X	X	O	Vibrato (Rate,Depth,Delay)
	91	X	X	O	Reverb Depth
	98,99	X	X	O	NRPN LSB/MSB
100,101	X	X	O	RPN LSB/MSB	
0-119	O *1	X	X		
Program Change		O	O	O	
	True #	*****	0 - 127	0 - 127	
System Exclusive		O	O	O	
Common	Song Position	X	X	X	
	Song Select	X	X	X	
	Tune	X	X	X	
System Real Time	Clock	X	X	X	
	Commands	O	X	X	
Other Functions	All Sound OFF	X	O	O	
	Reset All Cntrls	O	O	O	
	Local ON/OFF	X	X	X	
	All Note OFF	O	O (123-127)	O (123-127)	
	Active Sense	X	O	O	
	Reset	X	X	X	
Notes	<p>*1: Assigned to Modulation Wheel, Foot Controllers or Knob A~D</p> <p>*2: ON/OFF settings of each section are set in EDIT menu.</p> <p>The function is assigned to MOD/EXP/Right/Centre/Left Pedal in EDIT menu. Also, the section mode's other messages control each volume faders or each parameters in EDIT menu.</p>				

Mode 1 : OMNI ON , POLY

Mode 2 : OMNI ON , MONO

O : Yes

Mode 3 : OMNI OFF, POLY

Mode 4 : OMNI OFF, MONO

X : No

KAWAI
THE FUTURE OF THE PIANO