

Software Update (CN43)

This document contains instructions for updating the system software of the Kawai CN43 digital piano. Please read these instructions thoroughly before attempting to perform the software update.

■ Checking the software version


To check the current software version installed on the CN43, press and hold the **PIANO 2**, **DRAWBAR**, and **HARPSI & MALLETS** buttons simultaneously, then turn the instrument on.

The current software version will be shown in the LCD display.

If the version number is **greater than** or equal to the update version, no further action is necessary.

* Turn the instrument off and on to return to normal operation.

If the version number is **lower than** the update version, please continue to follow the instructions below.

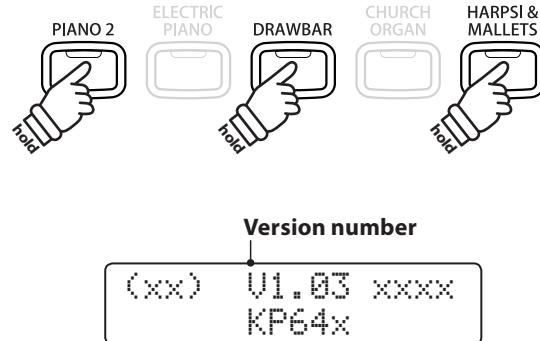

1. Prepare the USB memory device

Extract the software update ZIP file and copy the included .SYS file(s) to the root folder of a USB memory device.

* The USB device should be formatted to the 'FAT' or 'FAT32' filesystem.



2. Connect the USB memory device

While the instrument is turned off:

Connect the prepared USB memory device to the USB port.




3. Start the update

Press and hold the **CHOIR & PAD**, **BASS**, and **OTHERS** buttons simultaneously, then turn the instrument on.

The update process will start automatically after a few seconds, and status messages will be shown in the LCD display.

* Do not remove the USB memory device while the software update is in progress.

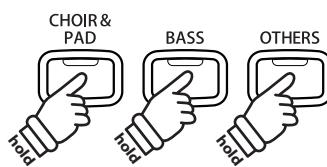

Flash Programming
by USB Memory

4. Finish the update, disconnect the USB memory device

After approximately 30 seconds, a message will be shown in the LCD display, indicating that the software update has been successful.

Disconnect the USB memory device, then turn the instrument off and on. The updated software will be used automatically.

* If the software update is unsuccessful, restart the process from step 1.

CN43_040.SYS
Boot_End

Software Update (CN43)

■CN43 software changelog

Software Version	Release Date	Changes
v1.05	05/2012	Fixed Local Control setting sometimes changing to 'Off' arbitrarily when the instrument is turned on.
v1.04	02/2012	Initialise internal recorder memory in the event that song data is broken.
v1.03	09/2011	1. Playing a note very softly no longer produces a sound. 2a. Fixed issue whereby notes could be added when saving SMF songs to USB memory. 2b. Fixed issue whereby the recorder would not correctly re-save an existing SMF song after new tracks had been added.
v1.01	10/2010	Initial factory release.